


Ricoh Super 8 800z Film Cartridge Hooks Replacement

This guide will show how to replace the Film Cartridge Hooks on the Ricoh Super 8 800z Camera.

Written By: carlos enrique

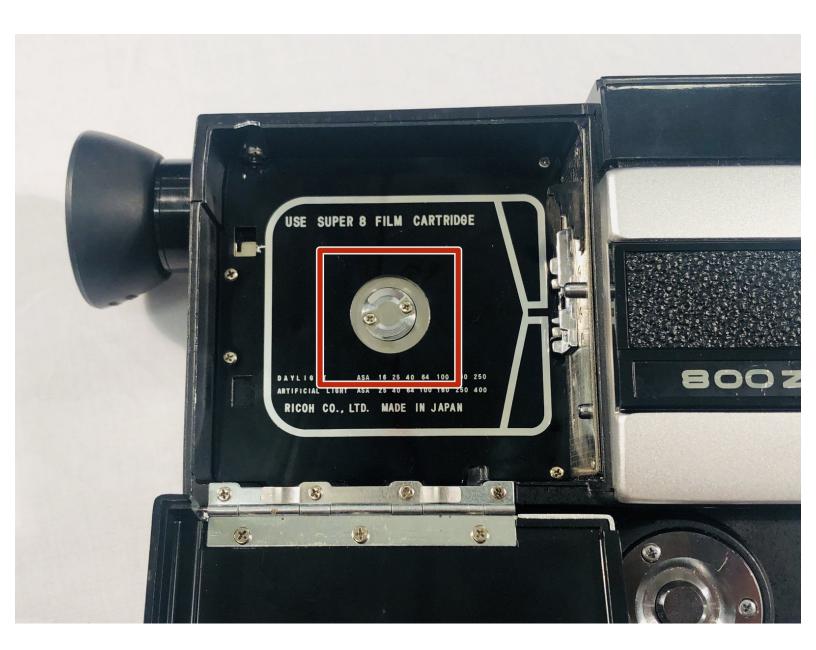

This document was generated on 2020-11-28 08:01:18 AM (MST).

INTRODUCTION

The Ricoh Super 8 800z operates using a 8mm film cartridge. Inside this film cartridge is a reel with an 8mm film. The hooks you will be replacing are what latches on to and rotates this reel.



TOOLS:

Phillips #000 Screwdriver (1)

Step 1 — Film Cartridge Hooks








- Open the device's film cartridge door by pulling the release switch towards the eyepiece.
- Lay the device with the left side down and the door open to allow access to the film cartridge hooks.

Step 2





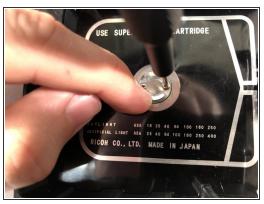


- Using a Phillips #000 screwdriver, remove one of the screws from the rotating hooks in the center of the film bay.
- Be sure to hold down the opposite side of the hooks with a finger to prevent it from spinning.

Step 3



 Now put your finger on the side of the screw you just removed, and take out the remaining screw with a Phillips #000 screwdriver.

Step 4

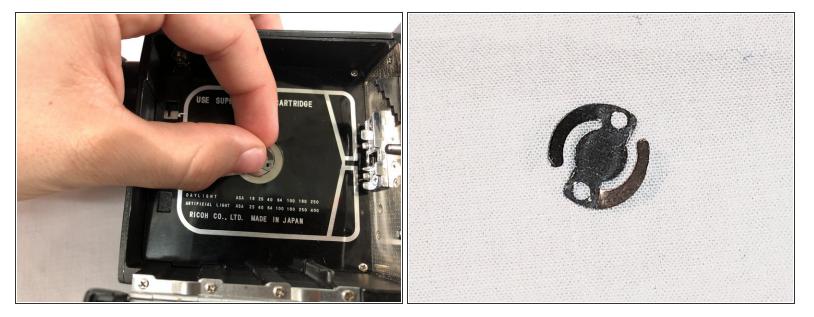

Using your fingers, gently remove the film cartridge hooks.

To reassemble your device, follow these instructions in reverse order.