



LG Xpression C395 Teardown

A Teardown of the LG Xpression C395

Written By: D.H3092



TOOLS:


- [Phillips #000 Screwdriver](#) (1)
-

Step 1 — LG Xpression C395 Teardown




- Remove the back plate and battery

Step 2

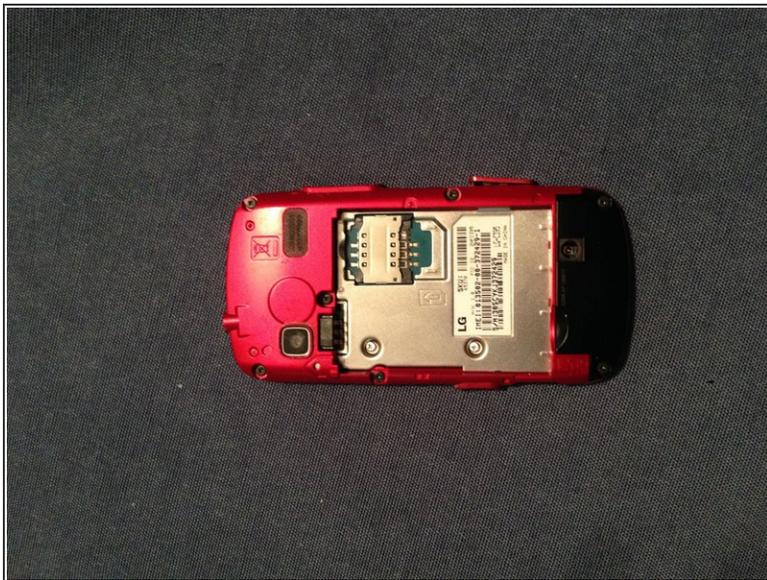


- Remove the 7 Philips screws on the mid frame and un-clip it from the body

Step 3

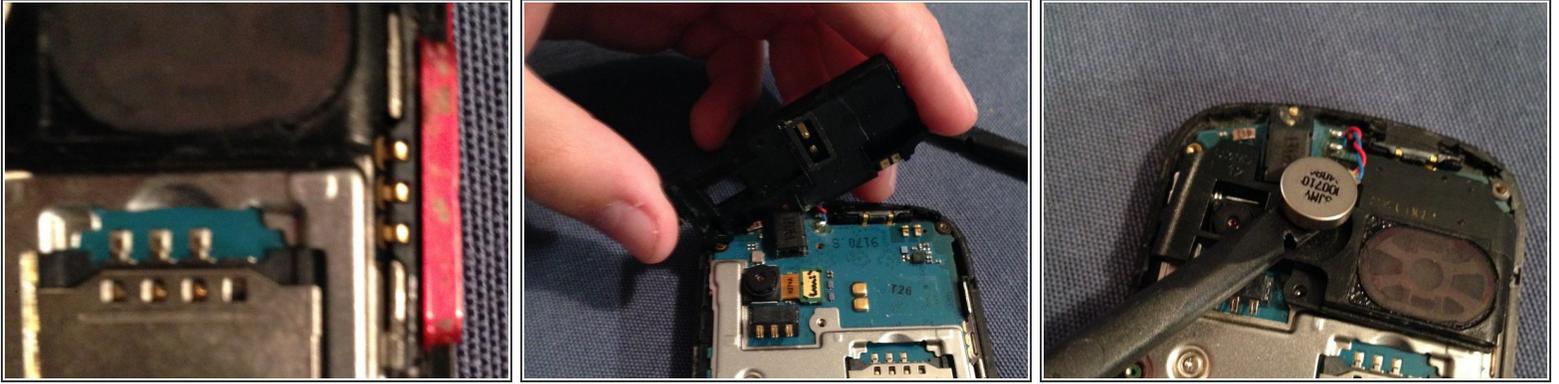


- Take out the volume rocker daughter board, the black speaker plastic and the vibrate motor.

Step 4

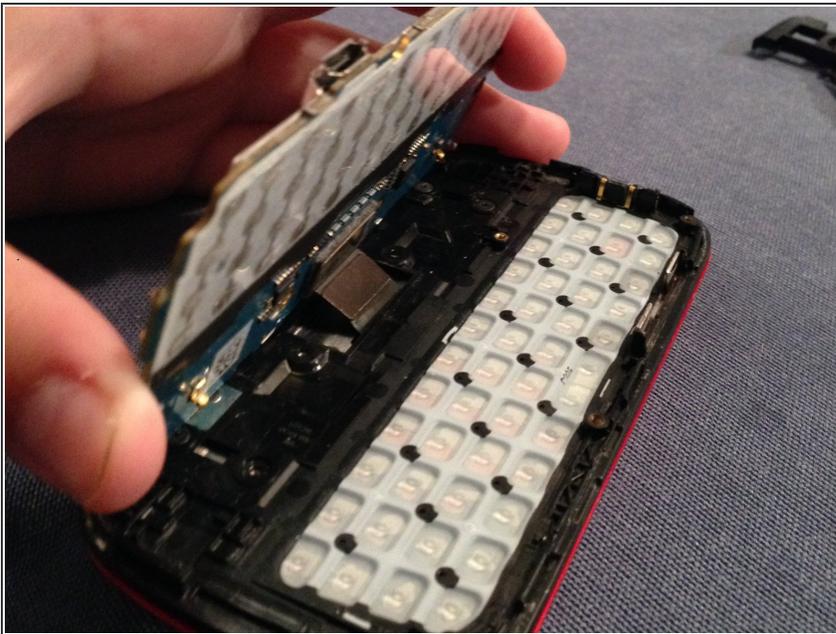

- Remove the 2 Phillips screws and remove the motherboard
- ⚠ Remember there is a Ribbon cable under the motherboard

Step 5

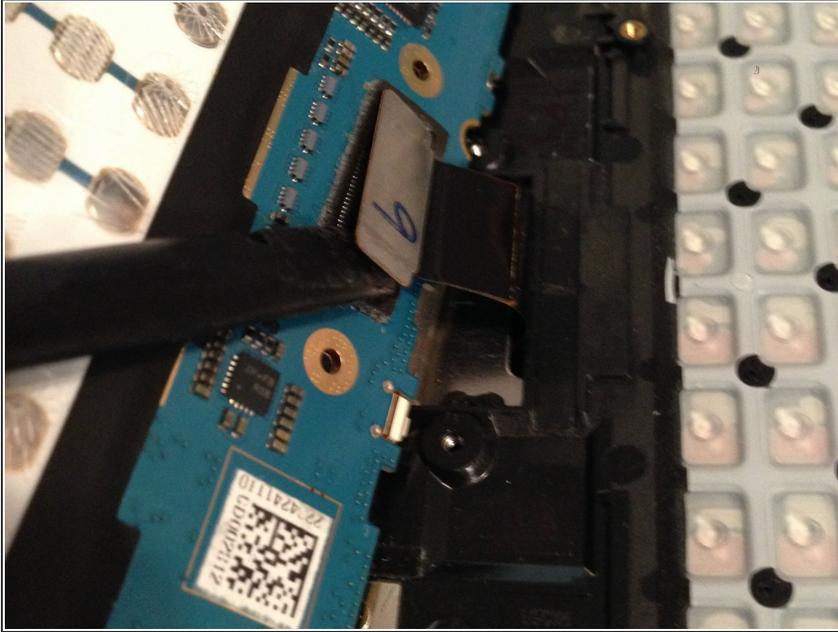


- Remove the screen Ribbon cable and the keyboard

Step 6




- Remove the 4 Phillips screws holding in the keyboard plastic

Step 7

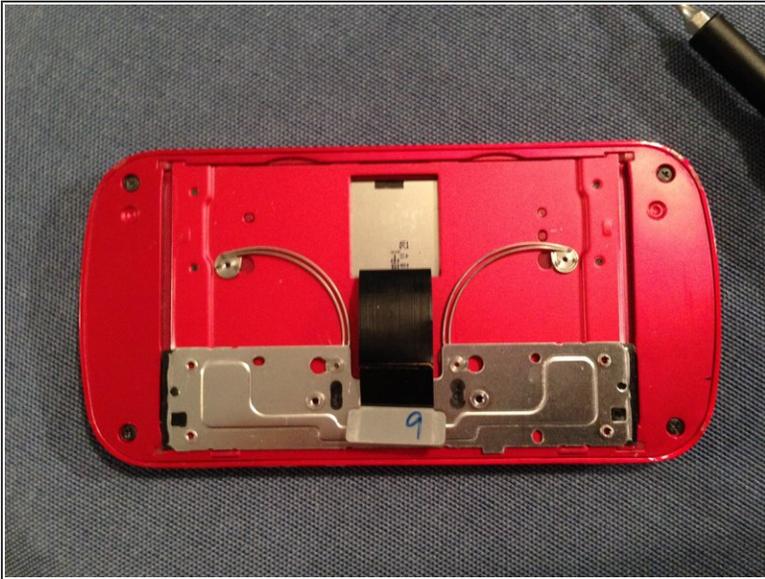


- Remove 4 more Phillips screws and remove the back of the screen

Step 8

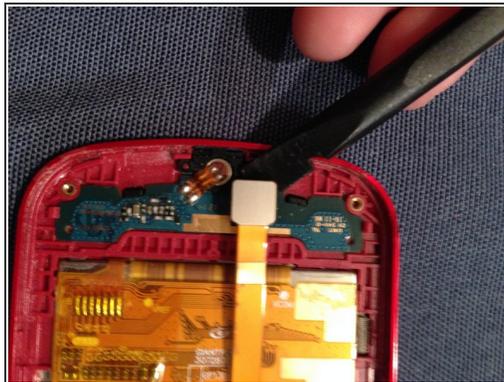

- Remove the bottom button, earpiece and screen ribbon cable

Step 9

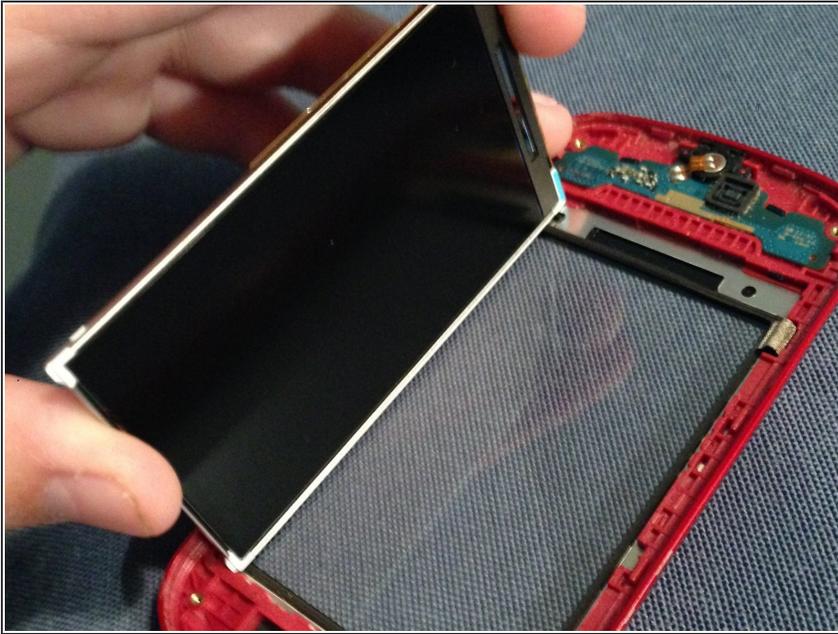

- After all of this you can remove the screen and conclude this teardown