




Disconnect Left-Over Logic Board Connectors

Prerequisite-only guide to disconnect left-over logic board connectors during the upper case procedure.

Written By: Adam O'Camb

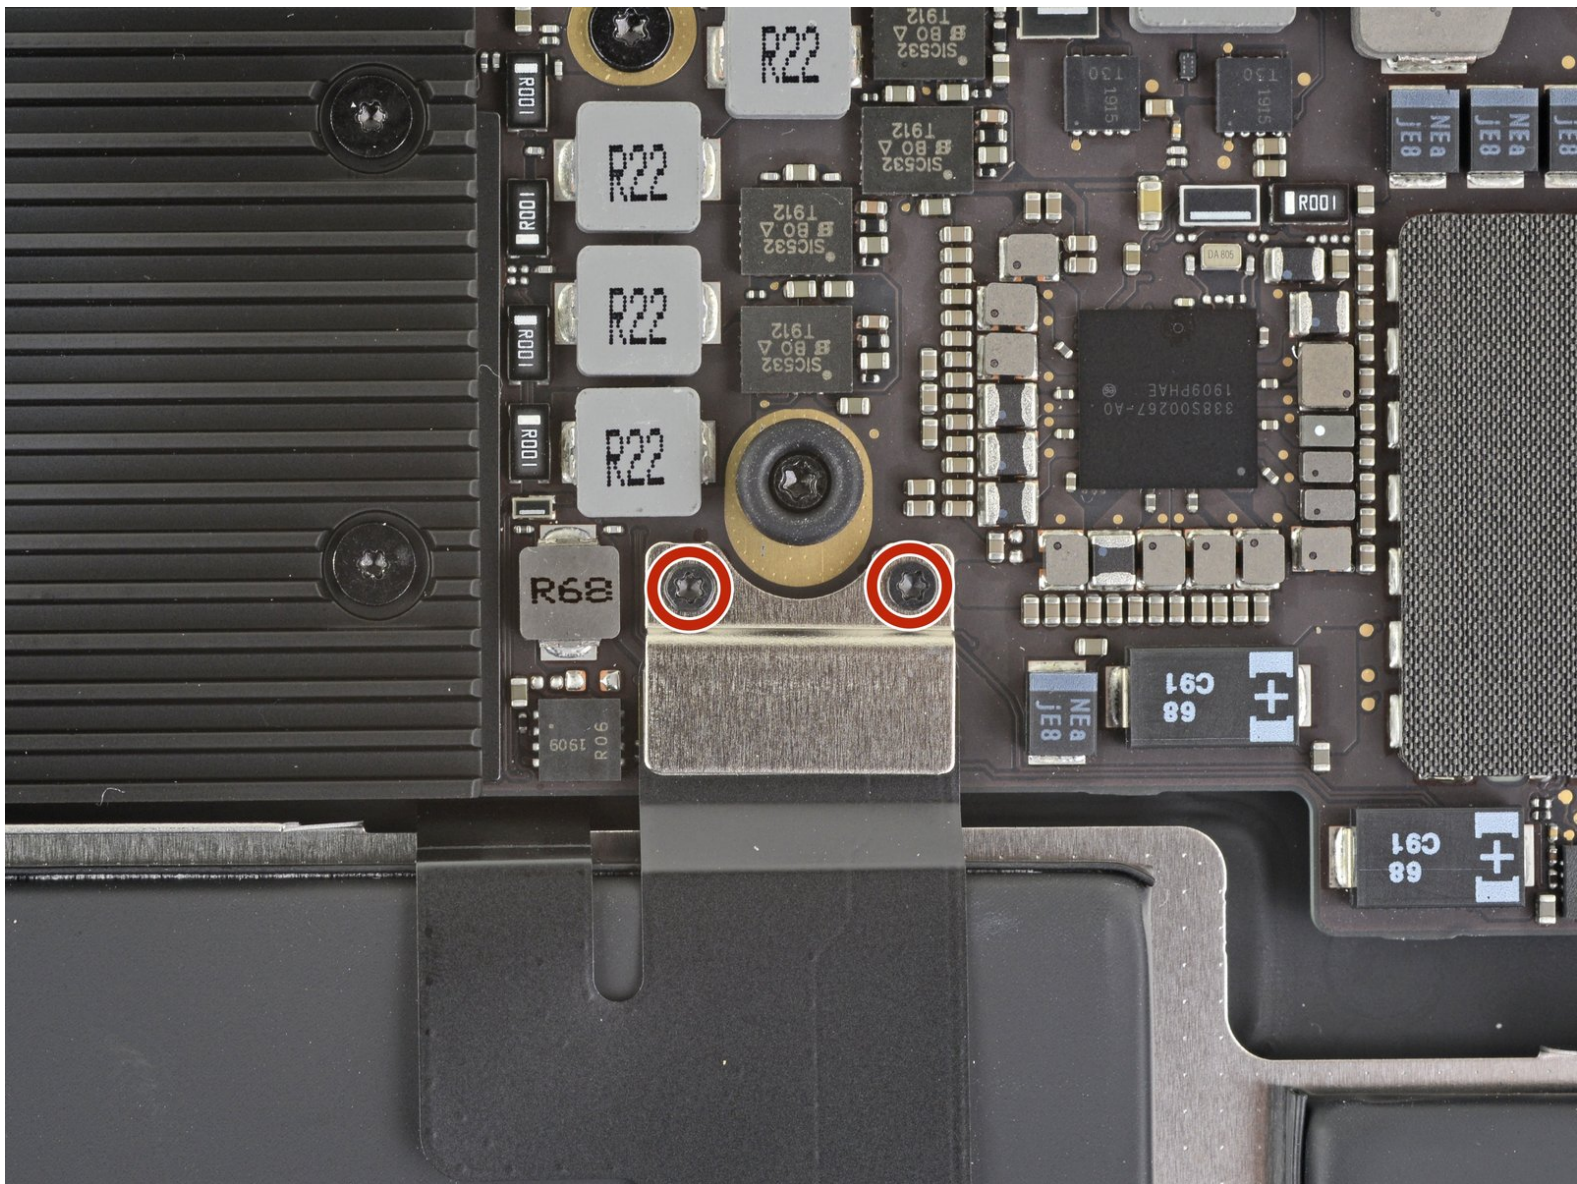

INTRODUCTION



Prerequisite-only guide to disconnect left-over logic board connectors during the upper case procedure.



TOOLS:



- [T3 Torx Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Disconnect the trackpad cable

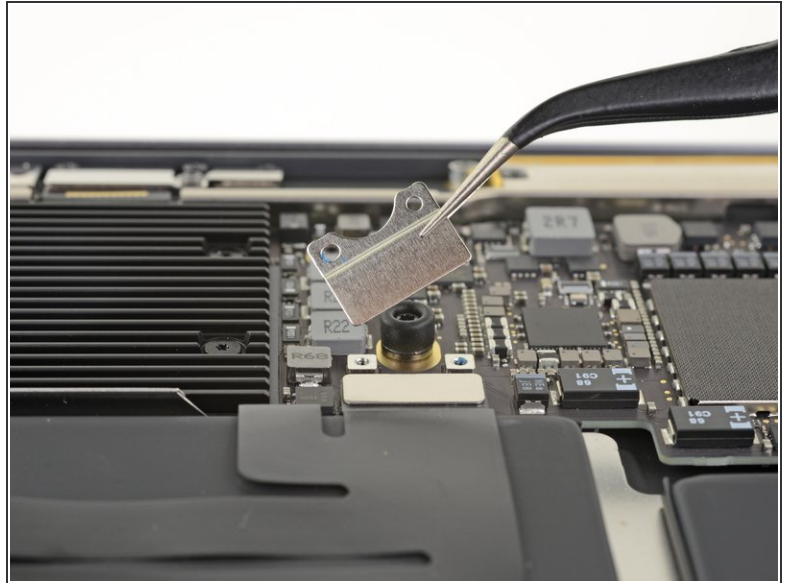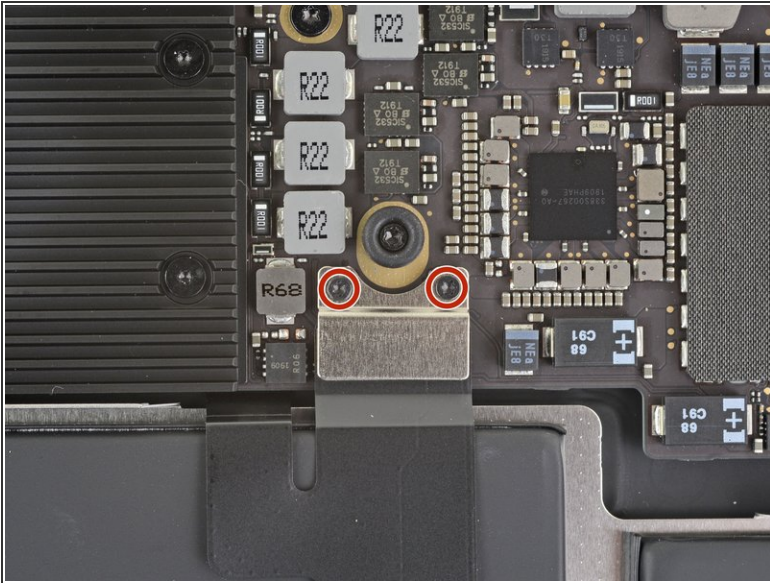

- Use a T3 Torx driver to remove the two 1.4 mm screws securing the trackpad connector bracket.
- Remove the trackpad connector bracket.

Step 2

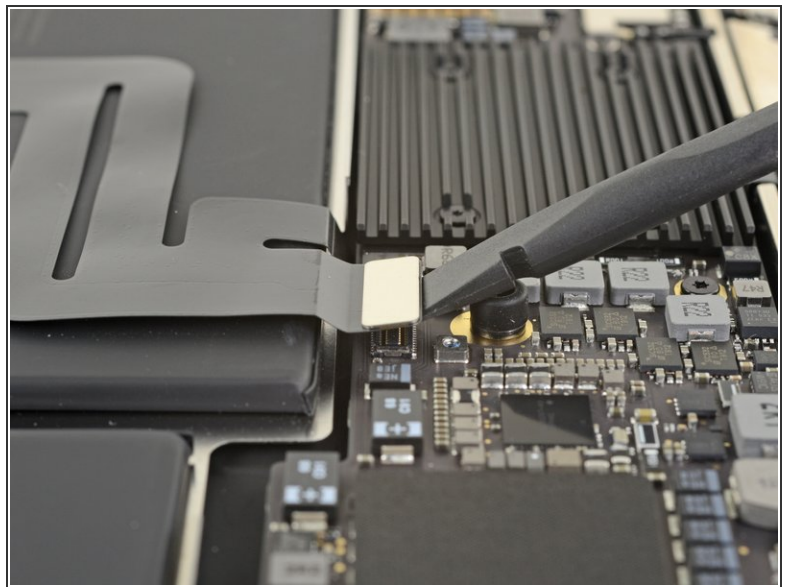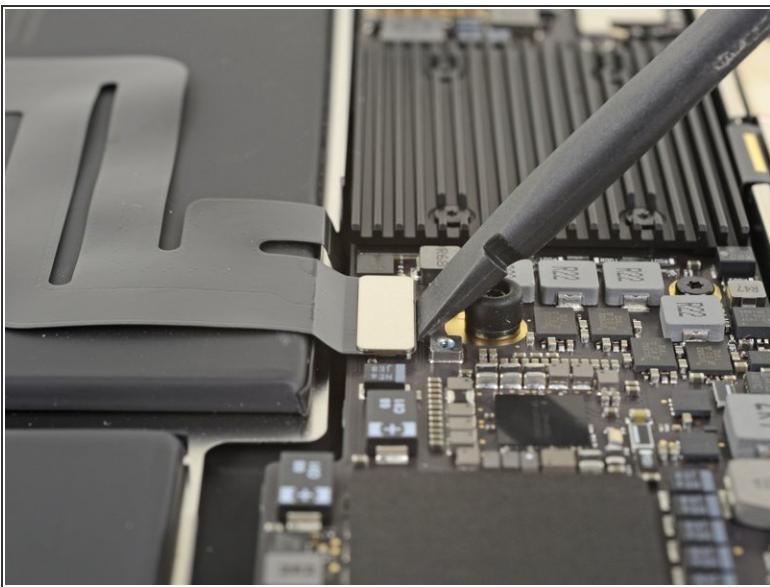

- Use the flat end of a spudger to pry the trackpad cable connector up and out of its socket.

Step 3 — Disconnect the audio board cable



- Use a spudger to lift up the small locking flap on the sound board cable's [ZIF connector](#).
- Slide the sound board cable out of the ZIF connector.

To reassemble your device, follow these instructions in reverse order.