



# How to replace the connector of an Aeroflex ventilated suspension system.

Here we show you how to replace a broken conector with a new one and how to get your backpack ready for use again!

Written By: Daniel Schmid



---

## INTRODUCTION


A backpack often has to take a lot when you are on the road. Due to frequent use, the connector may break and need to be replaced. Here we show you how to replace a broken connector with a new one and how to get your backpack ready for use again!



### PARTS:


- [Konektor-Aeroflex](#) (1)

## Step 1 — Connector-Aeroflex

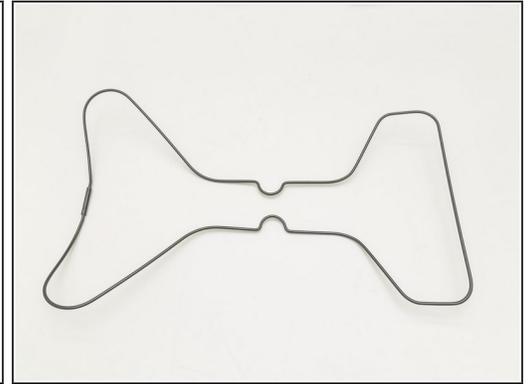

**⚠ Please note:** For better visibility in these instructions, we used an Aeroflex frame detached from the backpack. You don't have to remove the frame of your backpack first!


## Step 2

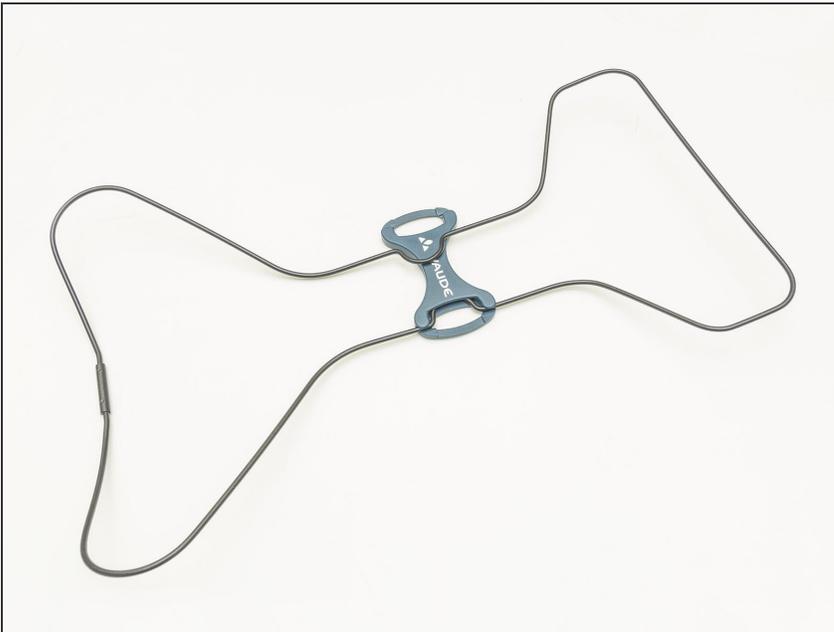

- First press the frame into one side of the connector. Note: The wire frame must be on top of the connector.

**⚠ Important:** It must click!

### Step 3

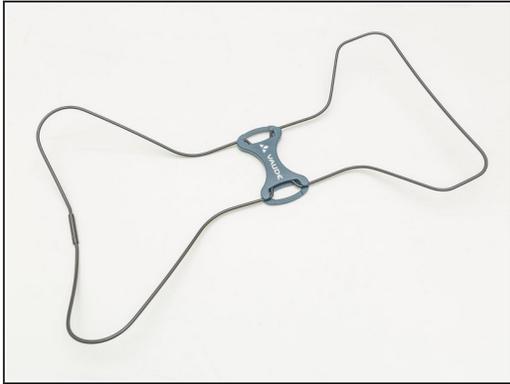

- Then press the wire frame into the other side.
- **Important:** It must click!

Finished! You did it.