



How to replace a broken buckle on an Aqua Back bike bag.

If the buckle on your Aqua Back bike bag is broken, it can be easily replaced. We show you the steps necessary to replace it.

Written By: Daniel Schmid



INTRODUCTION

If the buckle on your Aqua Back bike bag is broken, it can be easily replaced. We show you the steps necessary to replace it.

"These are instructions for Aqua Back bike bags purchased in the Summer Season 2017 or later. Instructions for older models (pre-2017) can be found [here](#)."



TOOLS:

- [screwdriver](#) (1)



PARTS:


- [Buckle](#) (1)

Step 1 — Buckle



- To remove the broken buckle, you will need a large flat head screwdriver.
- Please note: This buckle can only be ordered from our repair workshop. The bottom hf-welded section is also replaceable, but this can only be done in the repair workshop itself.

Step 2

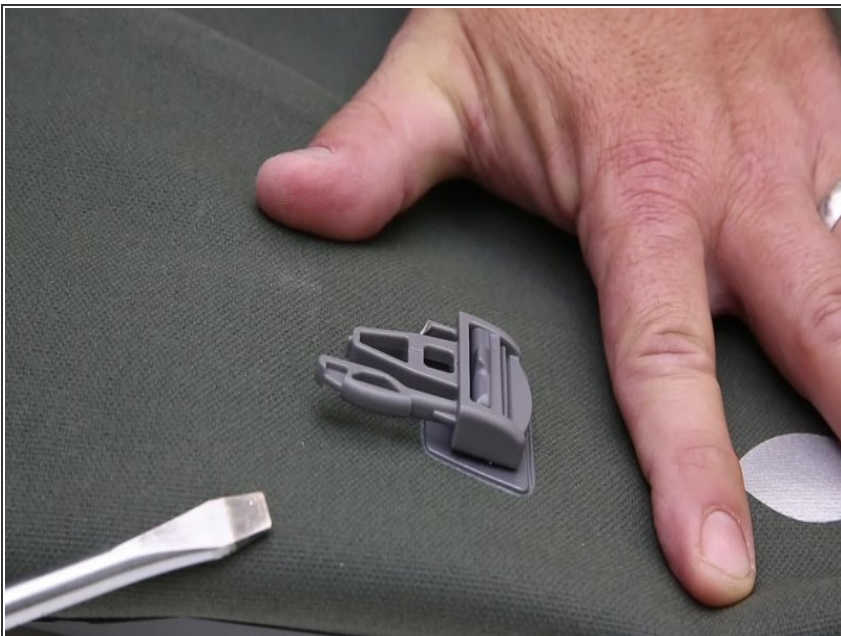

- Carefully pry off the damaged buckle with a flat head screwdriver.

Step 3



- Place the new buckle on the base and press down firmly until you hear a click.

Finished! You did it.