



Toshiba Satellite C855D-S5109 RAM Replacement

How to remove the RAM from a Toshiba Satellite C855D-S5109 computer.

Written By: Kaia Herrera



INTRODUCTION

RAM is short for “random access memory”. It is a fundamental element for the computer that stores temporary data for the computer. Computers may run slower with malfunctioning or outdated RAM. If your computer is running slow, you experience frequent crashes, or your computer has trouble during startup, use this guide to replace or upgrade the RAM chips on your Toshiba Satellite C855D-S5109.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery



- Flip the laptop over so the bottom is facing up.

Step 2



- Slide the two lock tabs on the battery to the open position.

Step 3



- While still holding the lock tabs outward, use your hand to grab the top of battery and pull up.
- Remove the battery.

Step 4 — RAM



- Flip the laptop around so that the bottom is facing you.

Step 5




- Unscrew the Phillips #00 screw, and remove the back cover.

Step 6



- Spread the metal clamps on either side of the RAM card outward so the RAM pops up.

Step 7

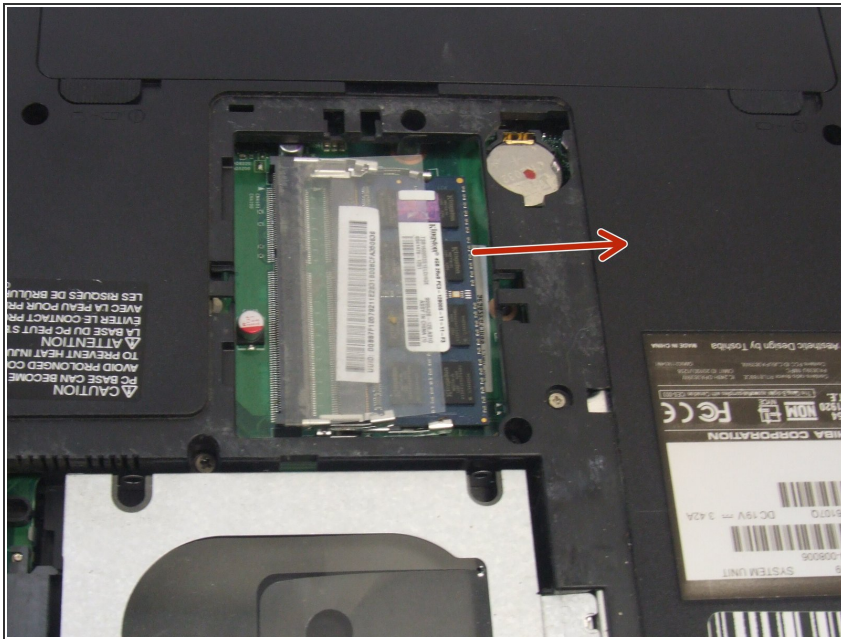

- Pull the RAM out of the slot in a horizontal direction.
- ⓘ Be sure to only handle the edges of the RAM card, as the oils on your fingers can cause damage if they make contact with the face of the card.

To reassemble your device, follow these instructions in reverse order.