



Disassembling Nokia 1100b RH-36

Get inside the Nokia 1100.

Written By: JSwan



INTRODUCTION

How to disassemble the inside of your Nokia 1100b RH-36 to access the inner components.

TOOLS:


- [Spudger](#) (1)
 - [T6 Torx Screwdriver](#) (1)
-

Step 1 — Battery Cover



- Flip the phone over so that the screen faces down.
- Press the gray button on the battery cover and slide it down off the back of the phone.

Step 2 — Battery

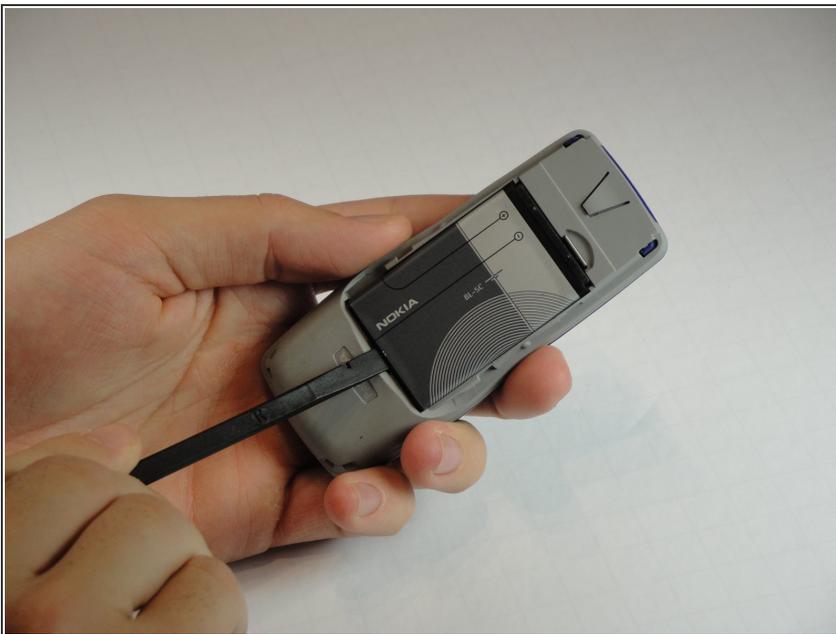

- Wedge the flat end of the spudger into the small indent next to the Nokia logo on the battery.
- Gently pry the battery out of the phone.

Step 3 — Removing Nokia 1100b RH-36 Front Cover



- Firmly grip the back of the casing.
- Separate the front and back casings either by pulling them apart from the middle or gently prying the front off with your fingers from the bottom.

 Be sure not to bend the casing too much when prying from the bottom. Failure to do so may cause it to crack.

Step 4 — Inner Casing



- Remove the six 6mm T6 Torx screws around the edge of the front of the phone.
- Remove the metal frame holding the screen and speaker.

To reassemble your device, follow these instructions in reverse order.