




Lenovo Yoga C940-14IIL Battery Replacement

If your device isn't charging or loses charge...

Written By: Jeremiah Bush

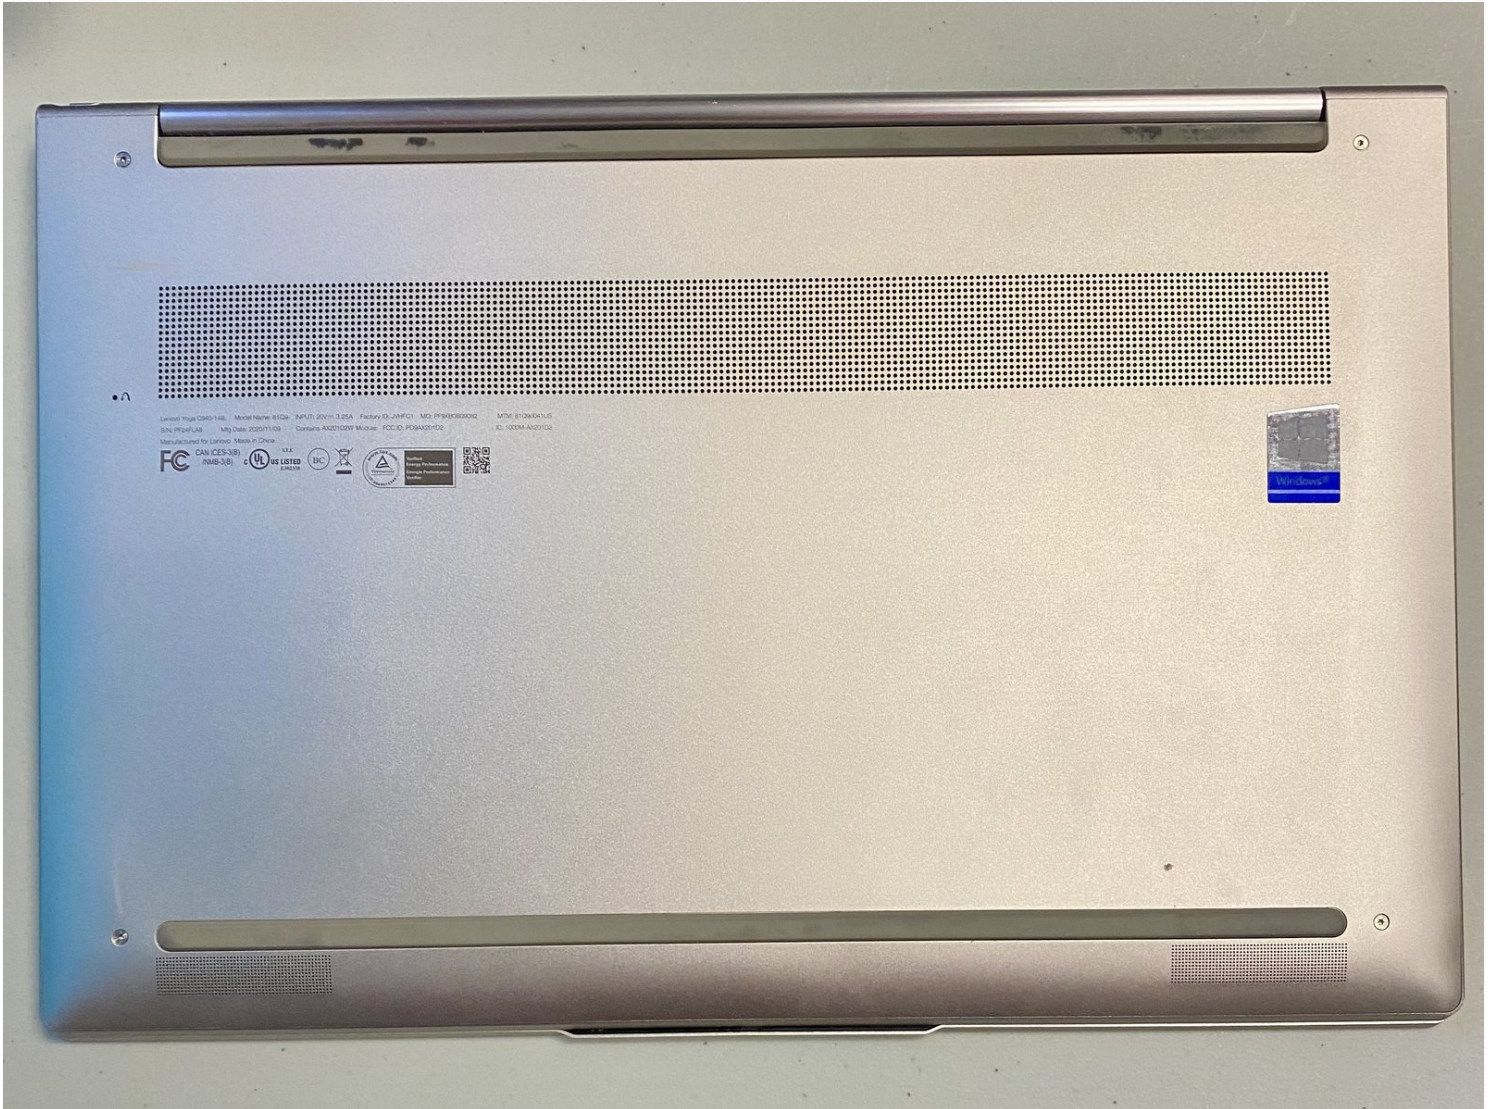


INTRODUCTION

If your device isn't charging or loses charge quickly, it may be time to replace the battery. Follow the instructions below to replace the battery in the Lenovo Yoga C940-IIL laptop.

TOOLS:


[T5 Torx Screwdriver](#) (1)
[Phillips #0 Screwdriver](#) (1)
[iFixit Opening Tool](#) (1)
[Magnetic Project Mat](#) (1)

Step 1 — Battery

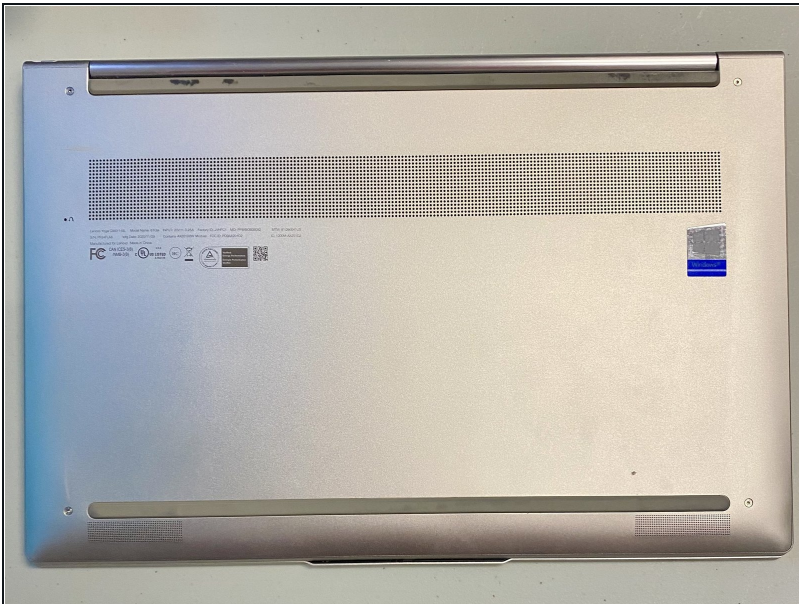


- Flip over the laptop so that the underside is facing you.

Step 2

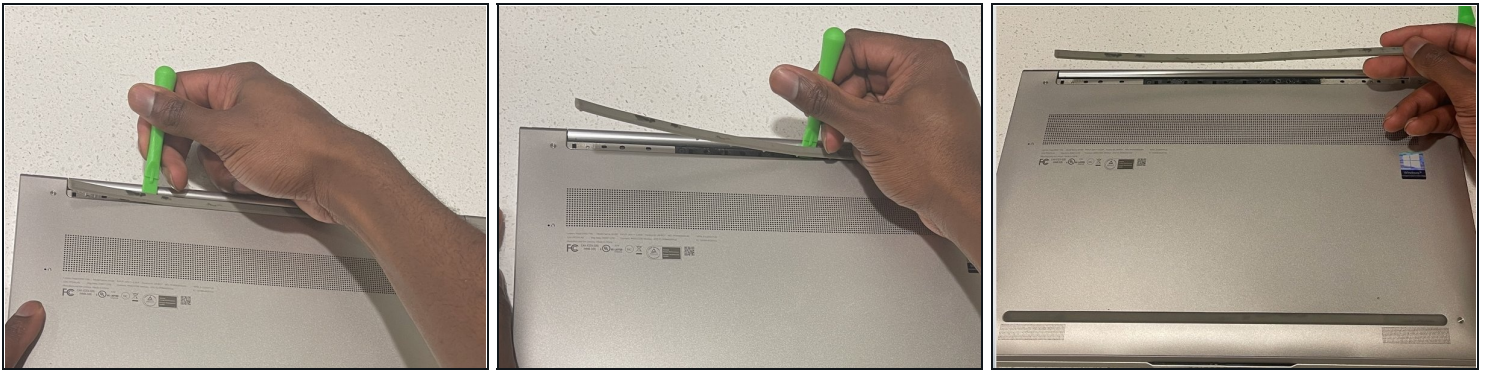

- Using a plastic opening tool, remove the rubber foot.

Step 3

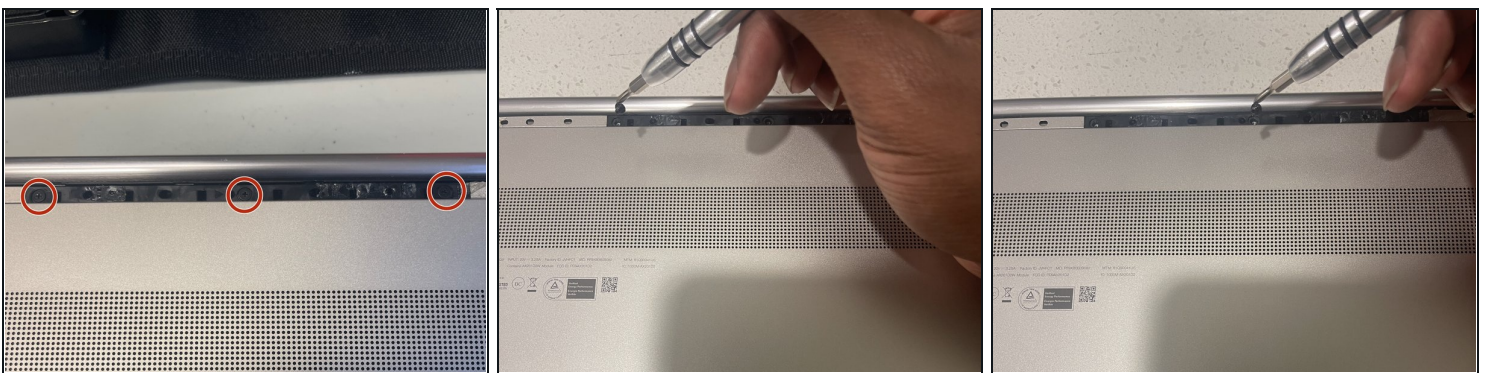


- Using the Phillips #0 screwdriver, remove the three screws underneath the rubber foot.

Step 4




- Using the T5 Torx screwdriver, remove the four remaining screws on the outside of the frame.

Step 5

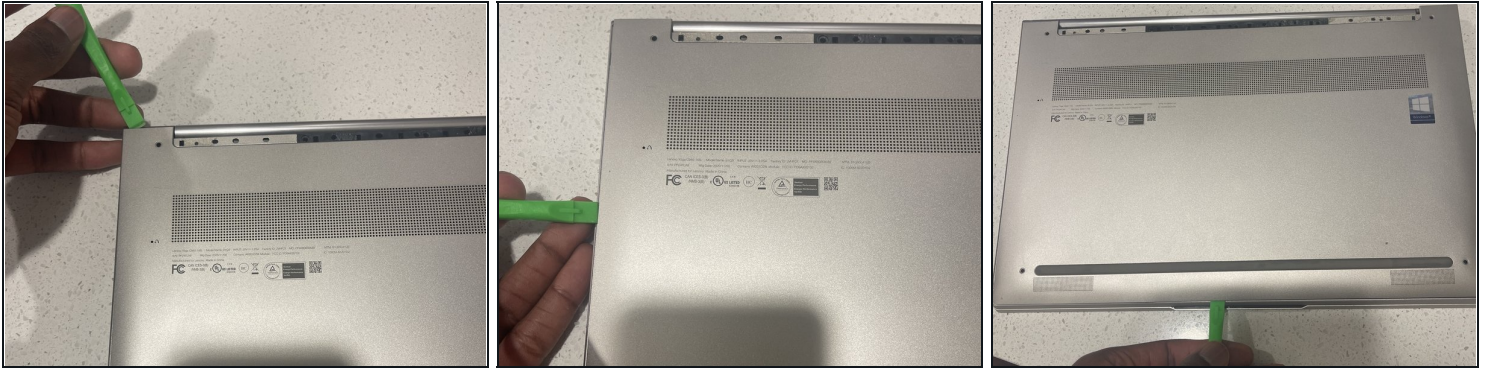


- Starting at the top and working around, carefully pry open the bottom cover.

Step 6

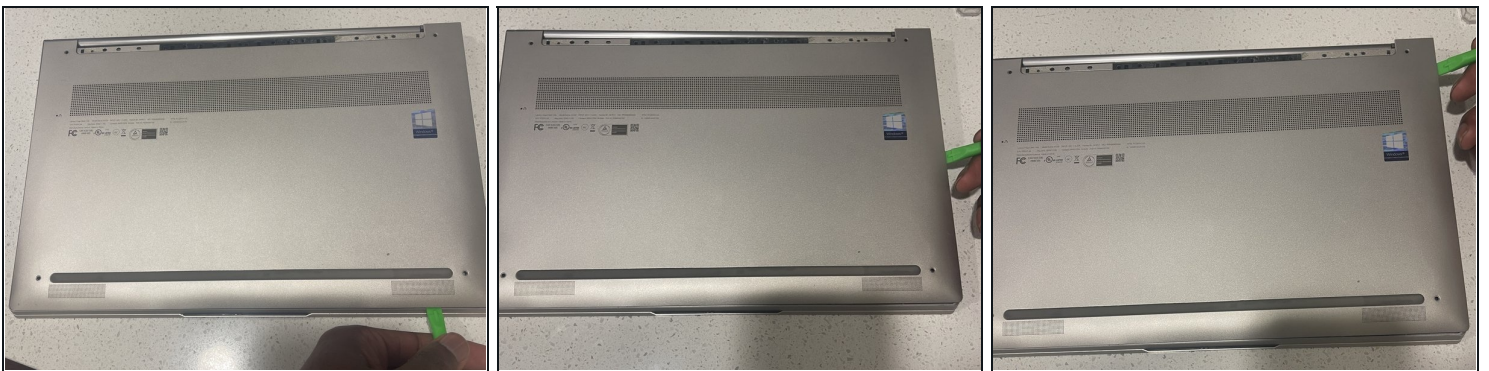


- ① It is ok to use a little force when working around. Don't panic if you hear a few pops as you are doing this.
- Remove the back cover from the device.

Step 7

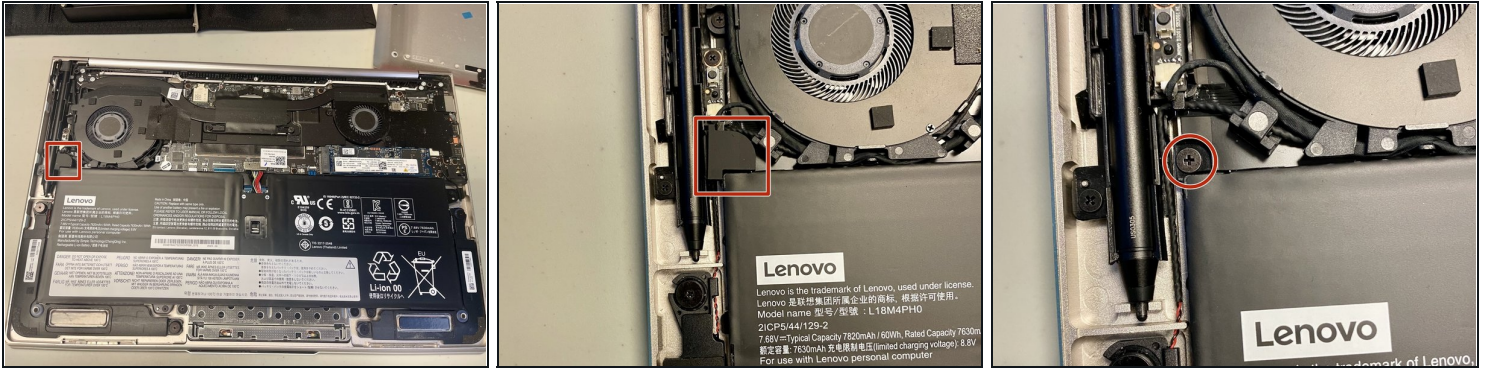


- The battery is held in place by four screws, one of which is hidden.
- Remove this small piece of rubber is covering one of the screws with your fingers.

Step 8

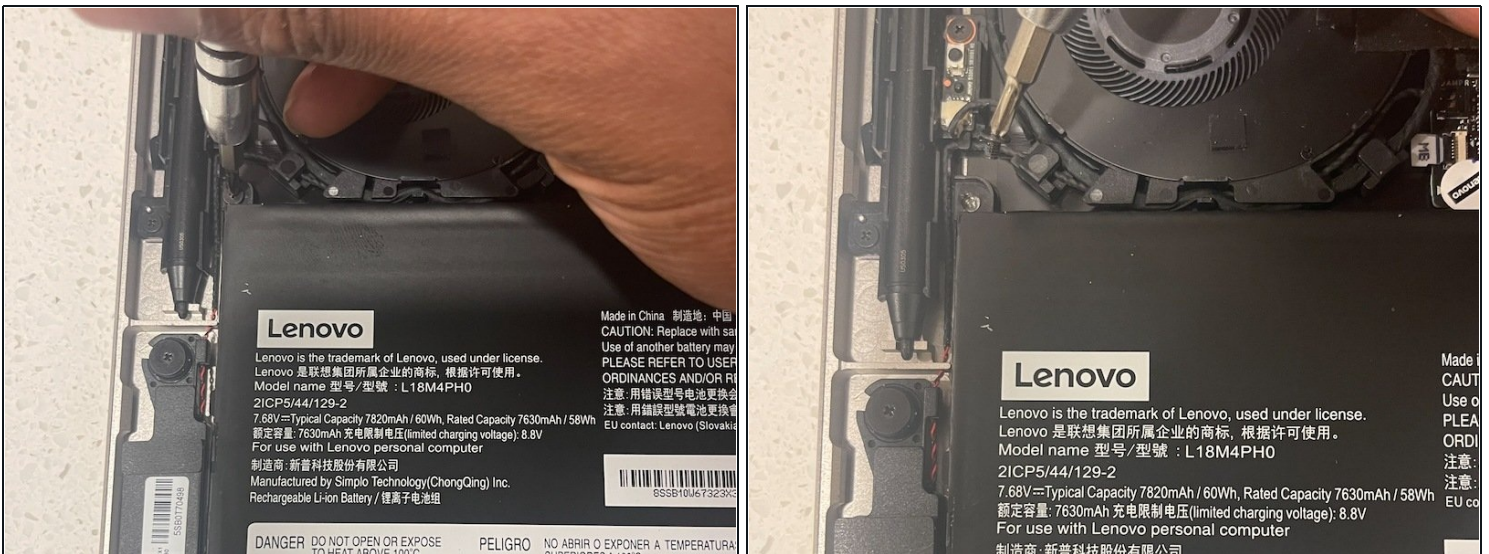


- Use the Phillips #0 screwdriver to remove the four screws securing the battery to the device.

Step 9

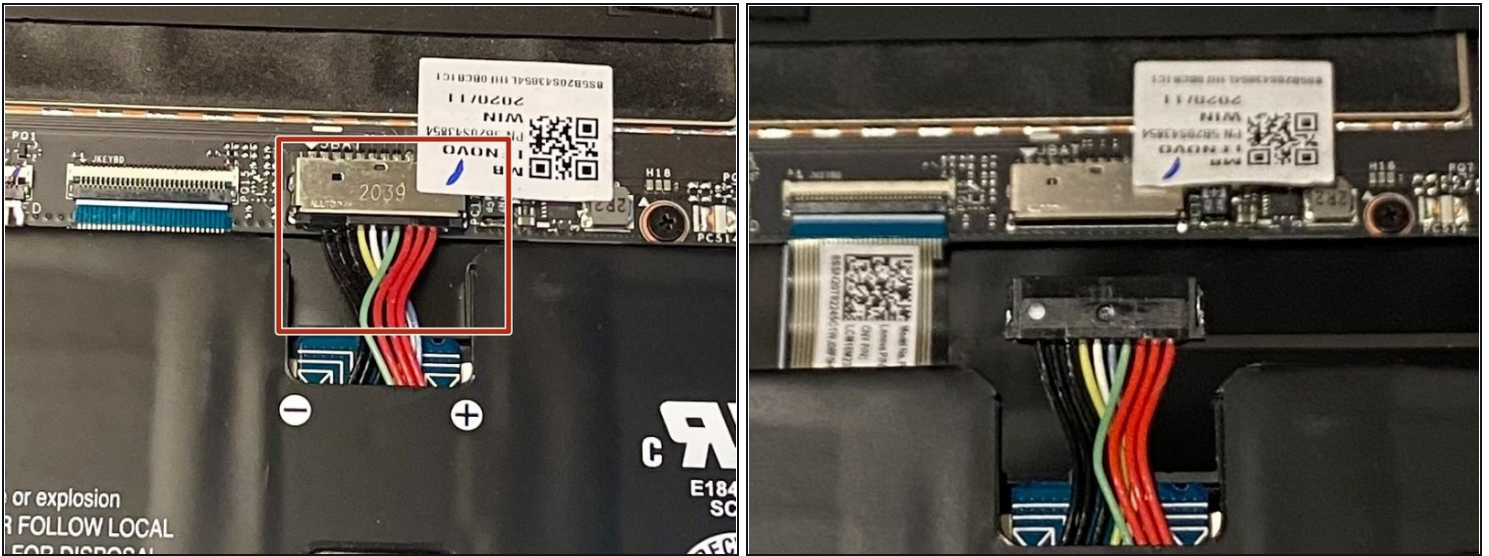

- To complete the removal of the battery, disconnect the ribbon cable connecting the battery to the computer.

Step 10

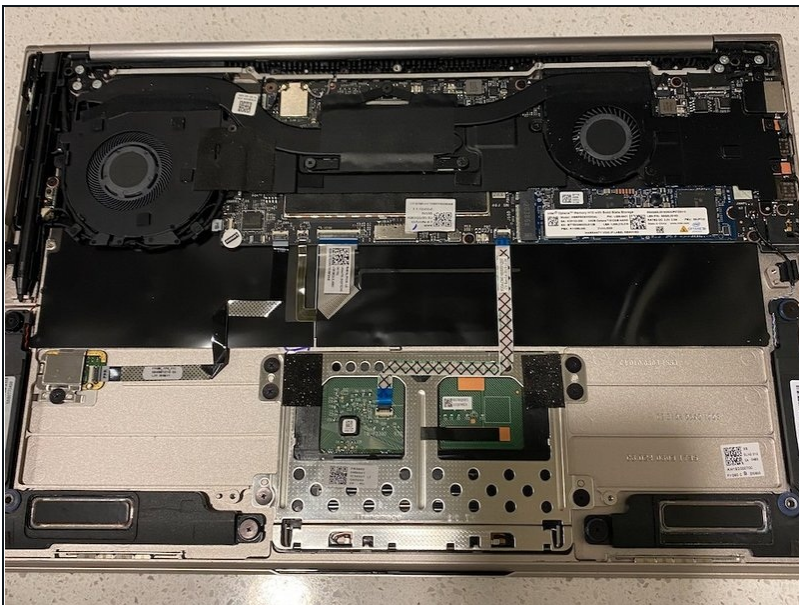

- Remove the battery from the device.

To reassemble your device, follow these instructions in reverse order.

For optimal performance, after completing this guide, [calibrate](#) your newly installed battery.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).