



LG VX8560 Keypad Replacement

Device & Model: LG VX8560 When the keys are...

Written By: Jack Foley



INTRODUCTION

Device & Model: LG VX8560


When the keys are sticky or not working, you can replace the keypad yourself. The keys get dirty or misaligned and sometimes the receivers are dead. In this guide, you will learn how to replace the keypad.

TOOLS:

[iFixit Opening Tool](#) (1)



[Phillips #00 Screwdriver](#) (1)

Step 1 — Keypad

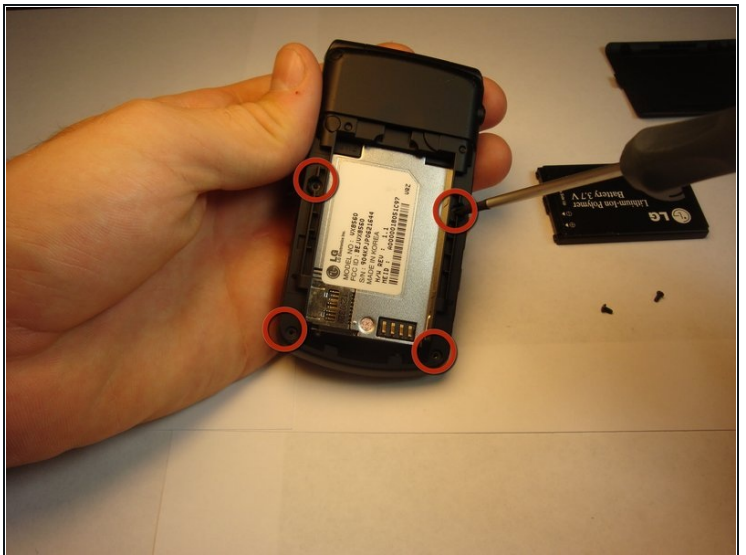

- Remove the battery by sliding the battery cover off the phone.
- Unscrew all 4 screws along the edge of the phone using the Phillips #00 Screwdriver.

Step 2

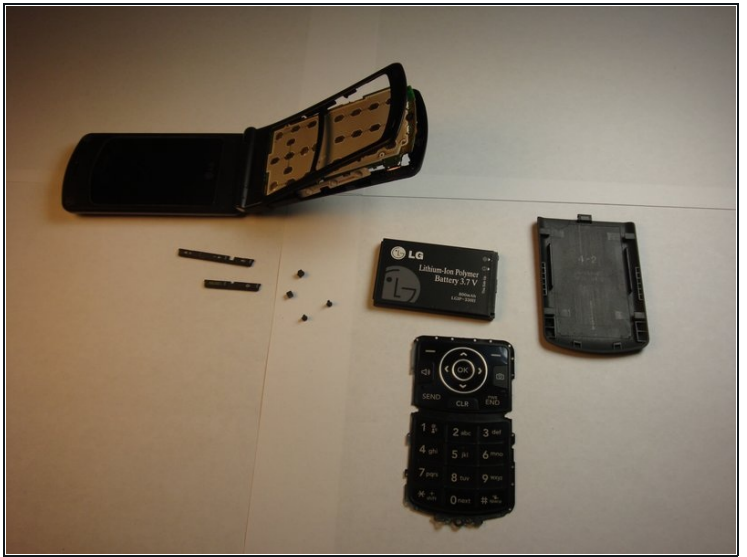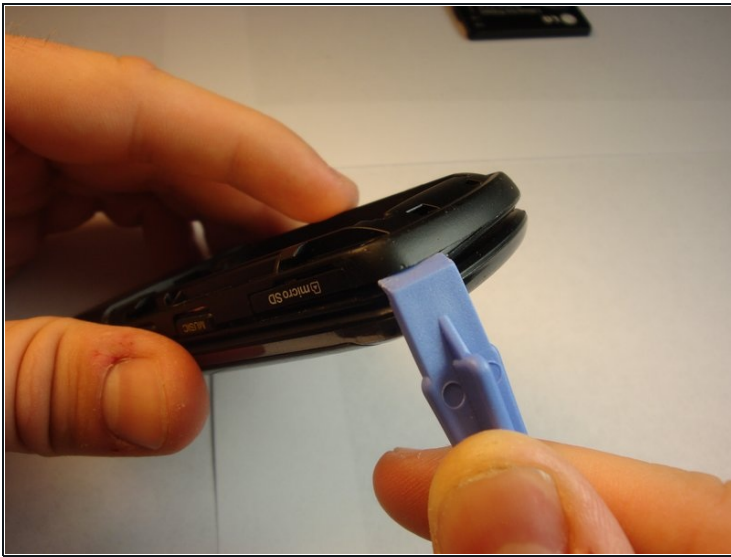


- Insert the iFixit Opening Tool between the phone's keypad cover and the back cover, and gently pull apart.
- ⓘ Be careful with the motherboard; don't let it detach.

Step 3



- Insert the new keypad into the cover frame and check the dimensions.

Step 4

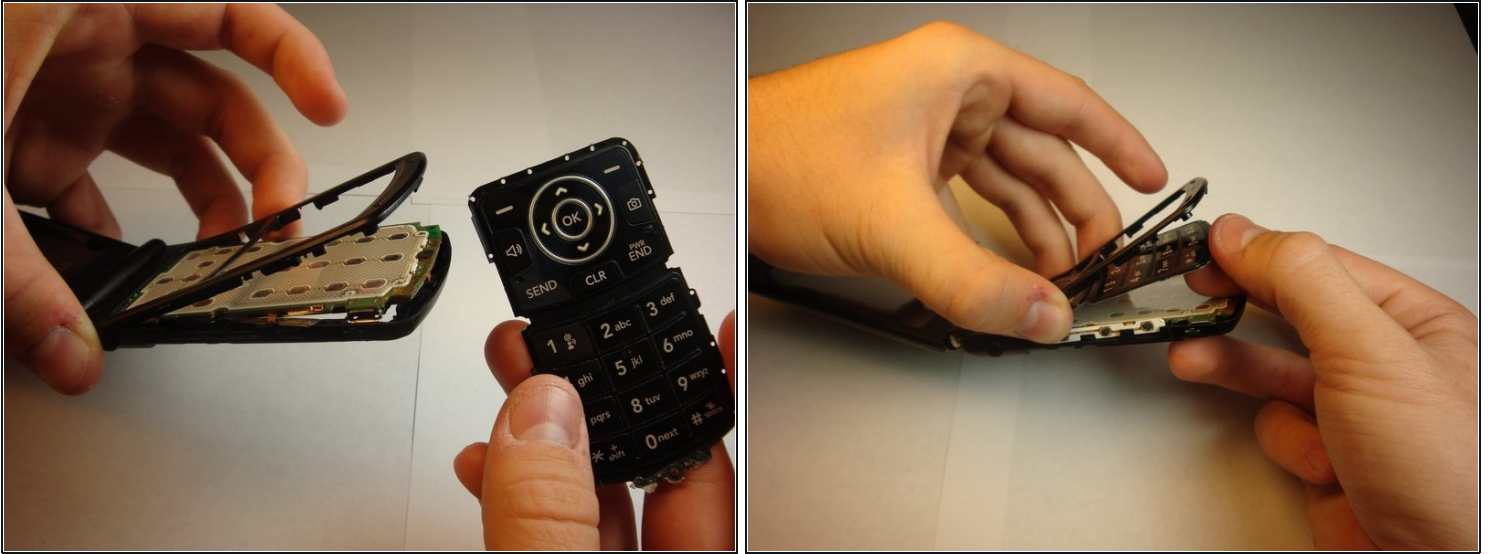

- Gently snap the cover frame back to the right position.
- Replace the screws using the Phillips #00 Screwdriver.
- Insert the battery and snap the back cover on.

The keypad is successfully replaced.