



Archived

Samsung RH9000H FSR Food Showcase Water Filter Replacement

Replacing your water filter is a necessity to...

Written By: Quinton Nguyen



INTRODUCTION

Replacing your water filter is a necessity to ensure you have clean water. This guide will direct you on how to replace the water filter in a Samsung **RH9000H FSR Foodshowcase 765 L** refrigerator. The only part you would need is a **HAF-CIN** water filter. Once the red filter symbol is gone, you will know that the replacement is complete. It is required to change the water filter every six months.

PARTS:

[HAF-CIN Refrigerator Water Filter \(1\)](#)

Step 1 — Water Filter



- Twist the valve to turn the water supply off for the fridge.

Step 2



- Open the refrigerator door and locate the filter at the bottom right corner of the fridge.

Step 3



- Twist the handle counterclockwise to the "Unlock" position.

Step 4



- Firmly pull the old water filter straight out to remove it.

Step 5




- Insert the new filter in place of the old one.
- Twist the handle clockwise to lock it into place at the "Lock" position.

Step 6



- Turn on the water supply for the fridge.
- Dispense up to 4 gallons of water to get rid of any impurities in the water.

Step 7

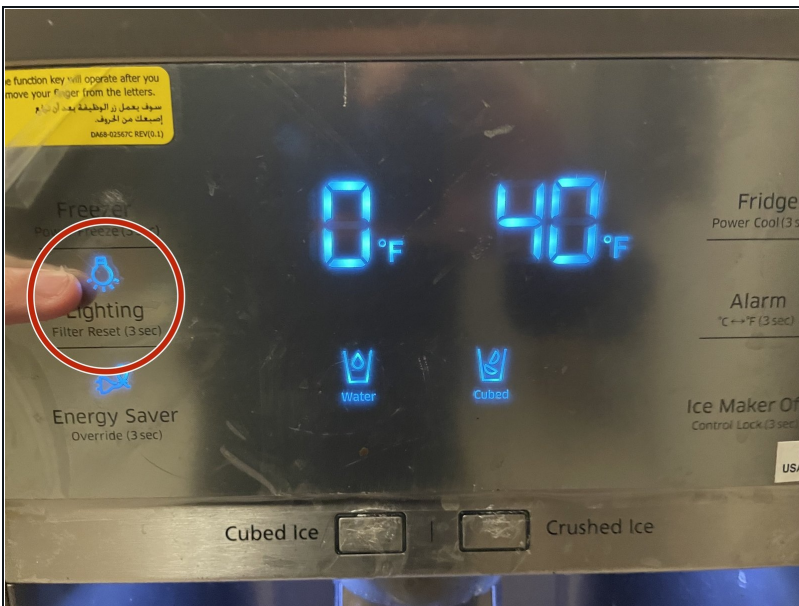

- Hold the "Reset" button for 3 seconds to reset the water filter.
- ① Once the red filter symbol disappears, the filter has reset for six months.

To reassemble your device, follow these instructions in reverse order.