



Playstation 3 Top Cover Replacement

Written By: iDeleted



INTRODUCTION

This is the main cover to the PS3. You must take this off to access everything but the hard drive.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [T10 Torx Screwdriver](#) (1)
-

Step 1 — Top Cover



- Remove the rubber screw cover near the hard drive cover with a spudger.

Step 2




- Remove the screw holding the top cover in place with a Torx T10 screwdriver.

Step 3



- Slide the top cover down about half an inch.
- Lift the cover off of the PS3.

Step 4

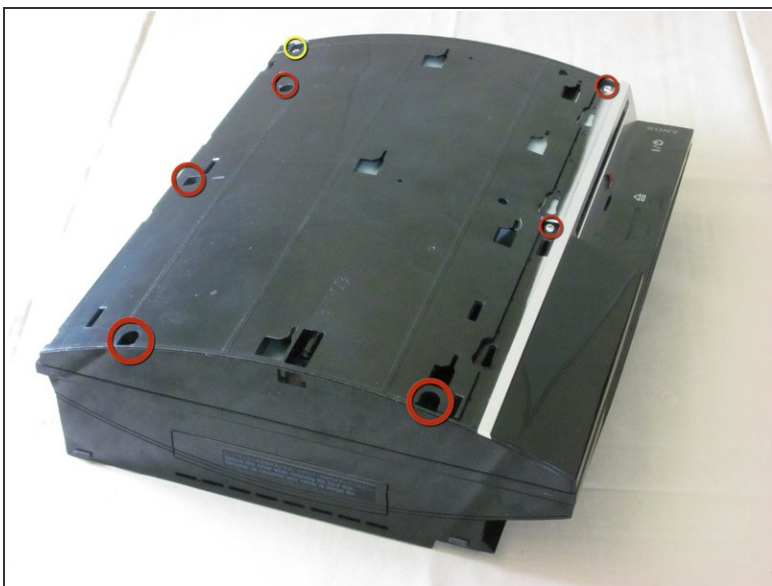

- Remove the seven screws in the top cover with a Phillips #2 screwdriver.
- ❗ One of the screws is shorter than the others. The short screw is marked in yellow.

Step 5



- You can now lift off the top cover.

To reassemble your device, follow these instructions in reverse order.