




ilo 1Gb Mp3 Player SD Card Replacement

This Guide shows how easy installing and replacing an SD Card is in the ilo 1Gb Mp3 Player.

Written By: tj курт01



Step 1 — Belt Clip

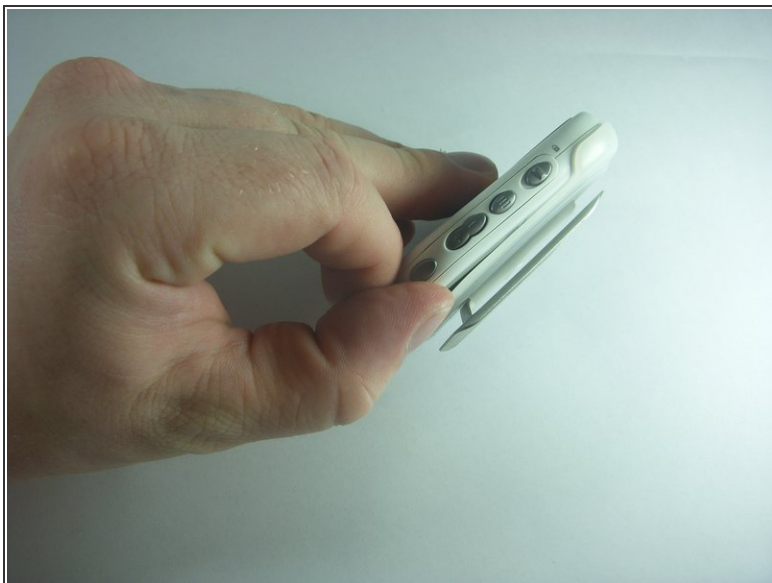

- Remove the belt clip by pulling the clip casing up and away from the device starting at the top over the slightly protruding headphones jack.

Step 2 — Battery Cover



- Remove the battery cover by gently pushing inward on the arrow on the cover.
- While maintaining pressure push the cover upward.

Step 3 — Battery



- Remove the Battery from the socket
- ⓘ When installing the battery take note of the signs displayed in the socket to determine which direction the negative and positive ends should be.

Step 4 — SD Card



- The SD Card slot is located under the battery case indicated here.
- The SD Card Slides into the slot as depicted in the photo and on the indicator above the slot.
- ☑ The ilo 1Gb Mp3 Player was only designed to accept SD Cards of 512mb or lower.

To reassemble your device, follow these instructions in reverse order.