




iPad 4 CDMA Home Button Control Board Replacement

Prereq only, new front panel adhesive strips.

Written By: Walter Galan

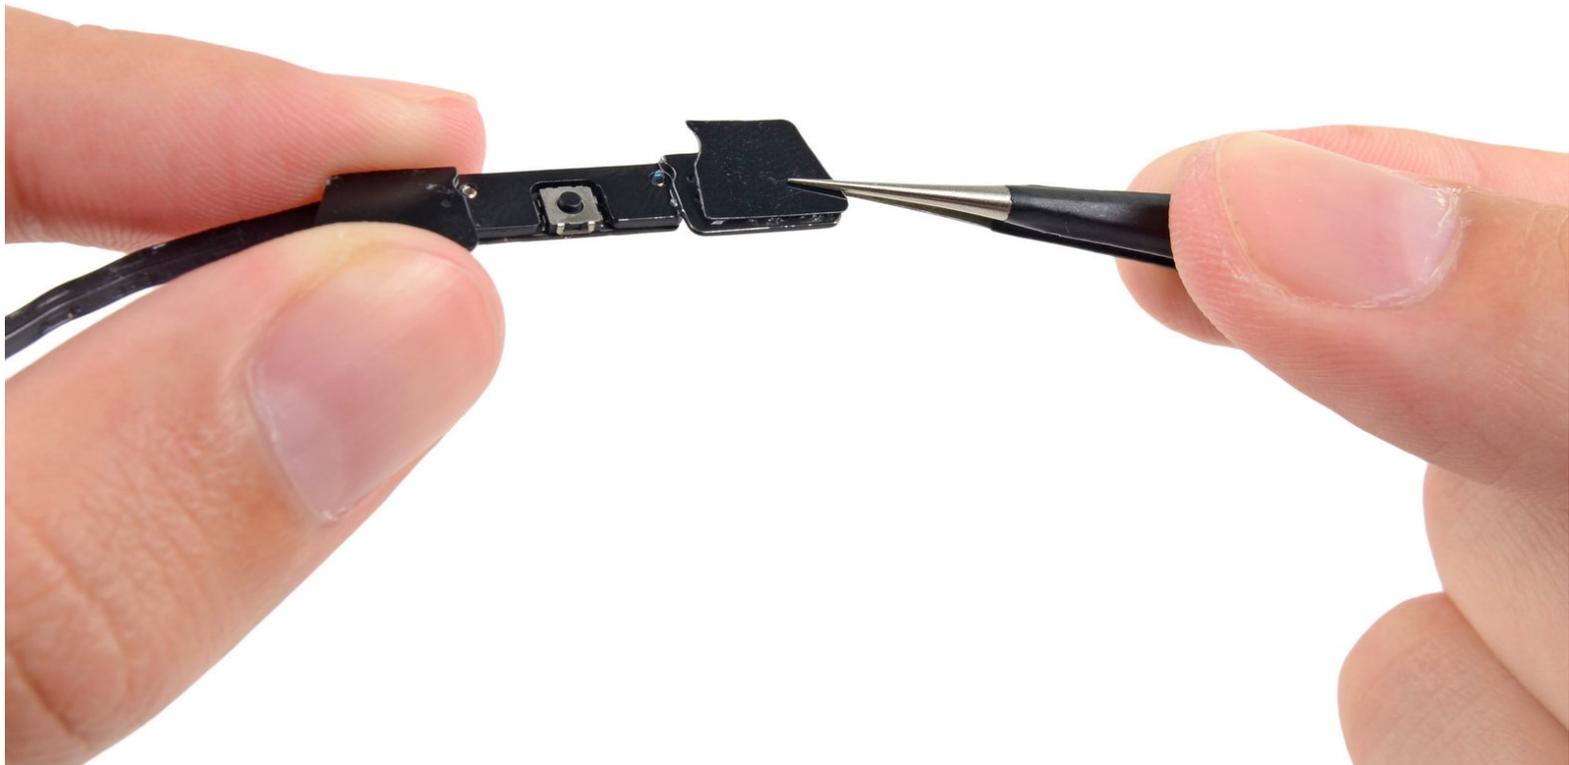


INTRODUCTION

Prereq only, new front panel adhesive strips.

TOOLS:

- [Tweezers](#) (1)
-

Step 1 — Home Button Control Board

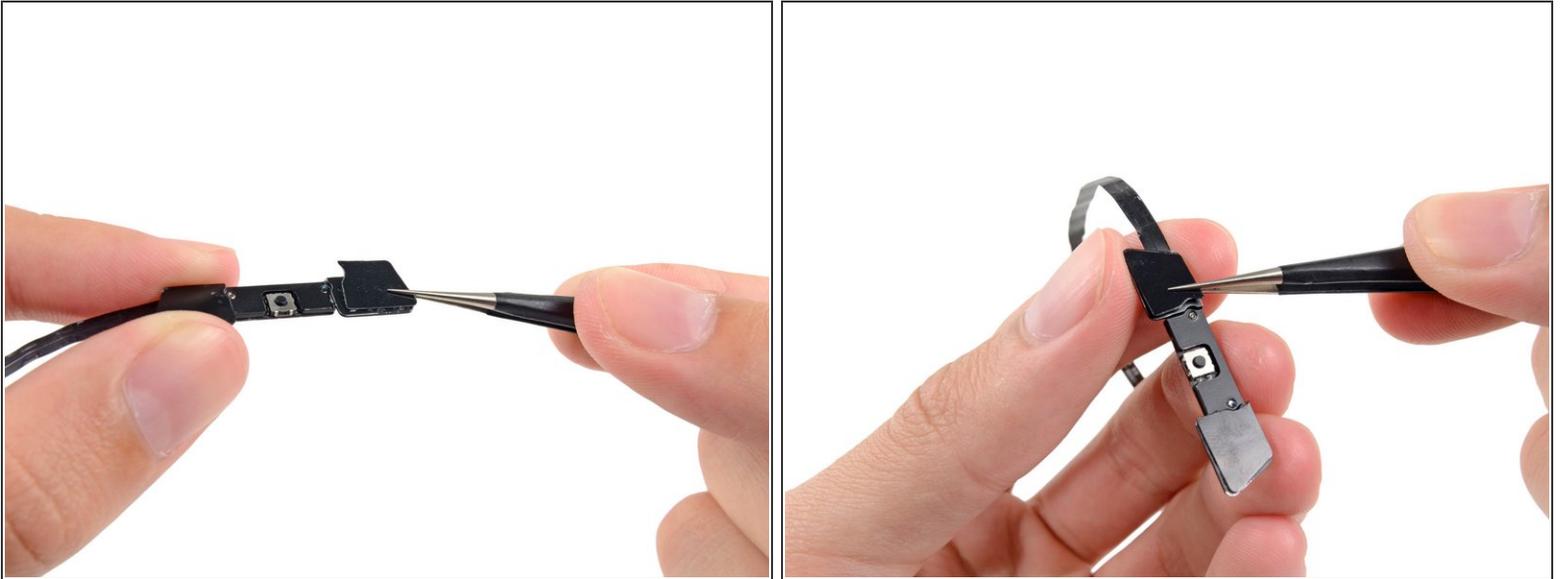

- ⓘ The two small notched trapezoidal strips will be used to attach the home button bracket to the front panel.
- Carefully peel off the first trapezoidal adhesive strip with a pair of tweezers.
- Using a pair of tweezers, place the first trapezoidal adhesive strip (minding its correct orientation) on the matching side of the home button mounting bracket.
- ⓘ Make sure to line up the profile of the strip with the edge of the mounting bracket.
- Repeat the procedure for the second trapezoidal adhesive strip.

Step 2



- Use a pair of tweezers to grasp the corner of one of the adhesive strips placed on the mounting bracket.
- Lift and peel the clear backing up off the adhesive strip, revealing the black adhesive strip.
- ☑ Repeat the procedure for the secondary adhesive strip.

Step 3



- Gently place the home button mounting bracket on top of the home button.
- ⓘ Make sure the home button mounting bracket is lined up with the bottom of the digitizer.

To reassemble your device, follow these instructions in reverse order.