



BlackBerry 7130e Disassembly

Written By: Sean Tiernan





TOOLS:

- [iFixit Opening Tools](#) (1)
 - [T6 Torx Screwdriver](#) (1)
-

Step 1 — BlackBerry 7130e Disassembly



- Using the T6 Torx screwdriver, remove the bottom two screws on the back of the phone.

Step 2



- Remove speaker phone cover by unsecuring the two latches on the edge close to top of the phone with the plastic opening tool.

Step 3




- Detach the speaker phone cover by pulling up on the bottom of the speaker phone cover.
- ⓘ As you detach the speaker phone cover you will notice a sticky glue sealing the rubber gasket from the cover to the speaker mesh. This is normal and will correctly reset the first few times the pieces are separated.

Step 4



- Remove top two screws with T6 Torx screw driver, from the back of phone.

Step 5

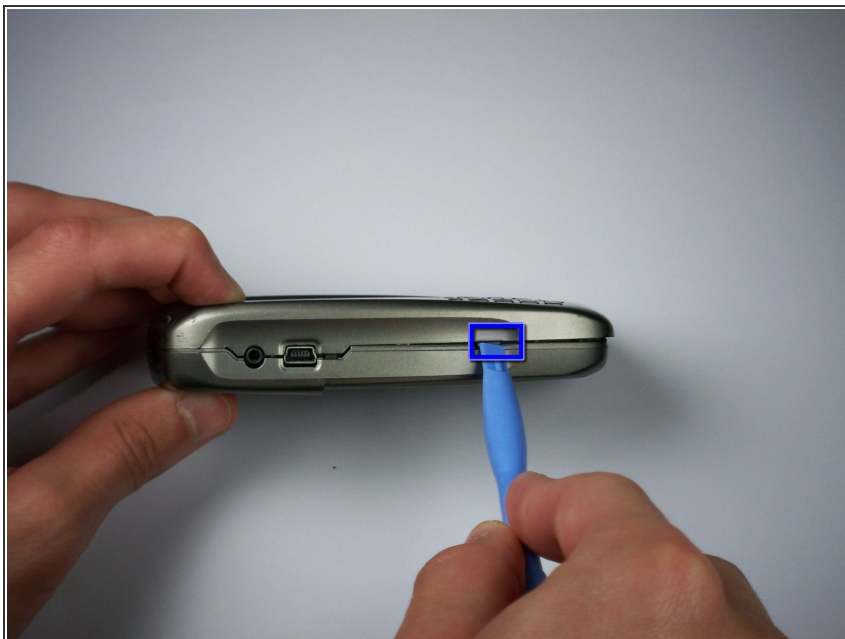

- Turn the phone sideways and unlatch the hinge on one side of the phone by pushing inwards and twisting to the side with the plastic opening tool.

Step 6



- You should now be able to easily separate the phone into two pieces.

⚠ The battery prong may fall out when the separation occurs, just don't lose it!

To reassemble your device, follow these instructions in reverse order.