




Sony Ericsson Vivaz (U5) Digitizer Replacement

Written By: ZFix

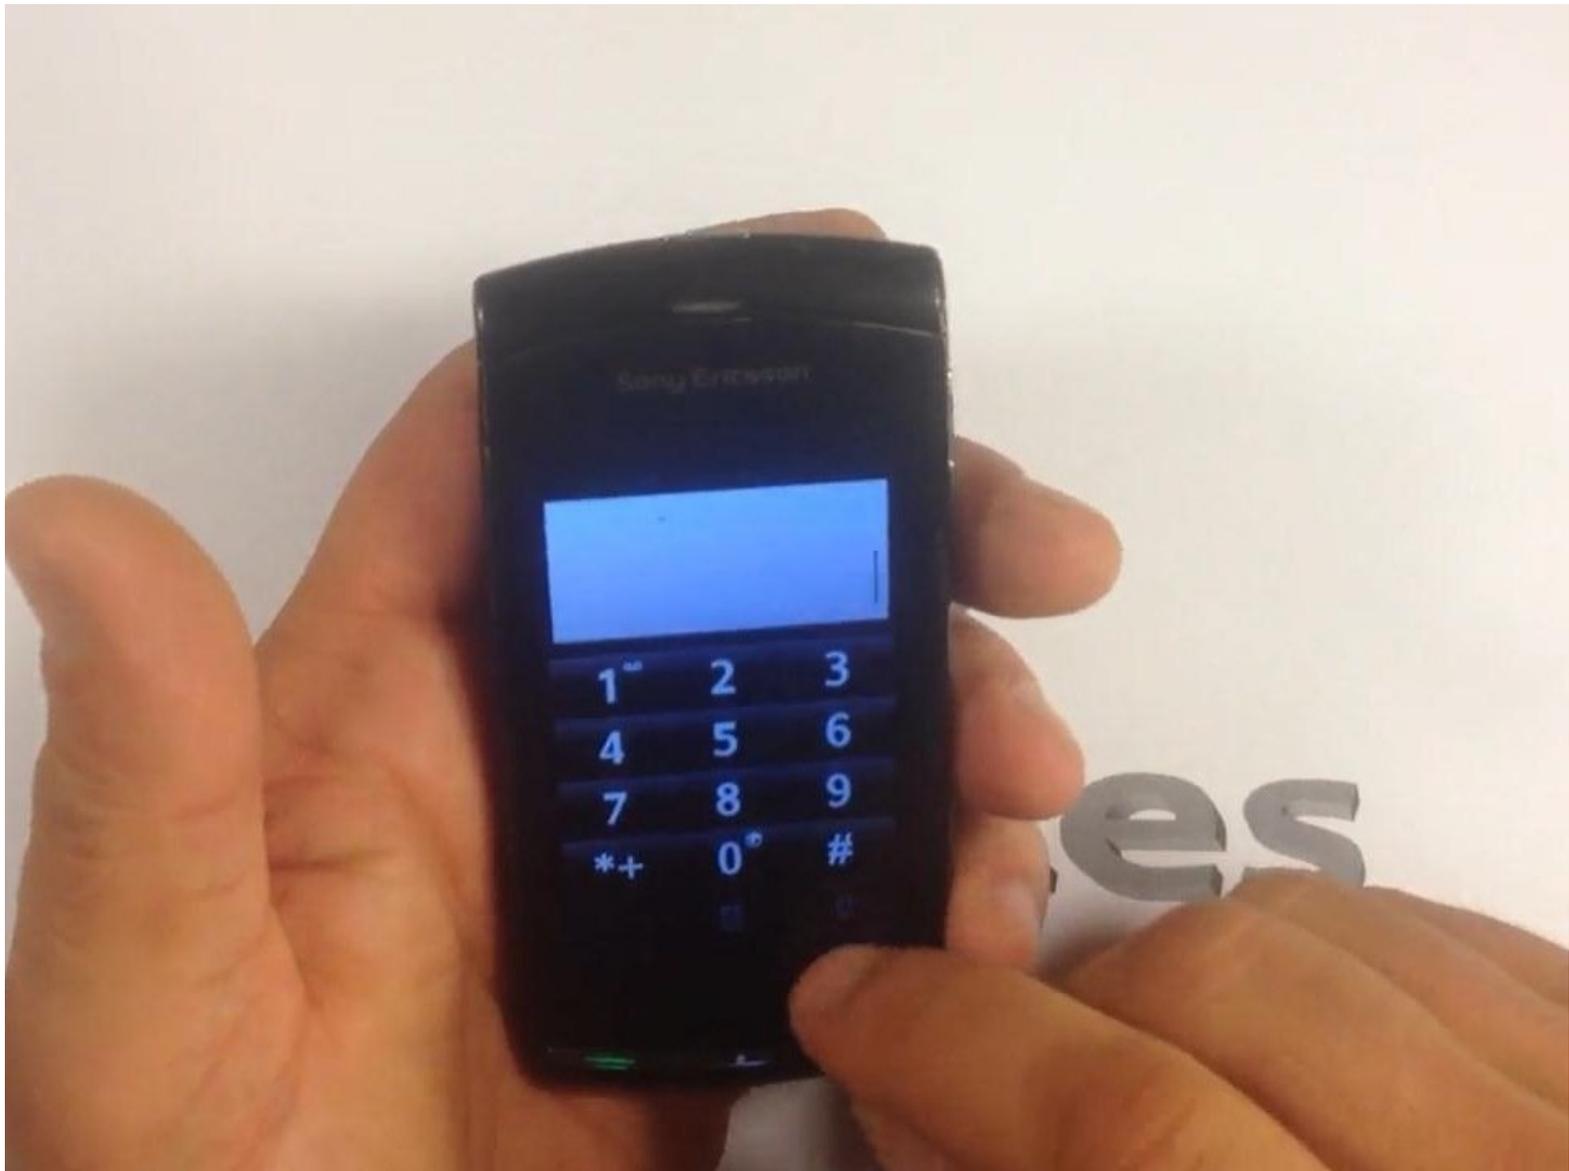

INTRODUCTION

How to change / replace Touch Screen / Digitizer - **Sony Ericsson Vivaz U5**, also known as Sony Ericsson Kurara!


Video Guide

[video: http://www.youtube.com/watch?v=zTJxE_O5KAE]

TOOLS:

- [Pro Tech Toolkit](#) (1)
-

Step 1 — Change / Replace Touch Screen

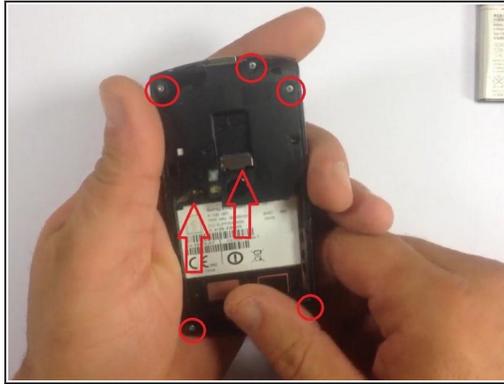

- First remove battery, sim card and memory card. You must remove seven screws.

Step 2



- Now remove this part.

Step 3



- This baseboards are sticked with a double-sided tape.

Step 4




- Remove the Touch Screen! To be more easy, heat it with hot air before doing so!

Step 5



- **Now is the time for the new Touch Screen.**

Step 6

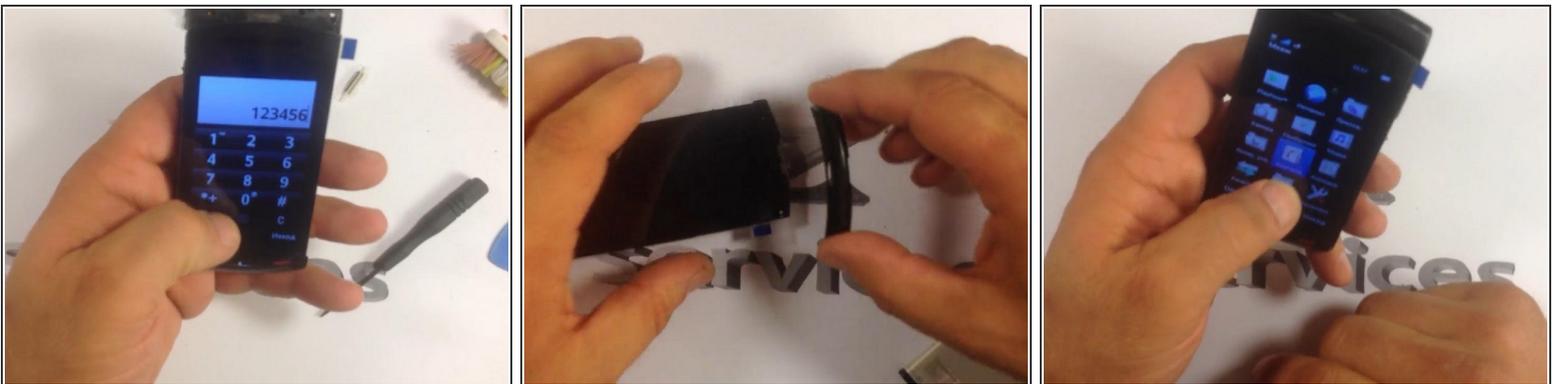

- **Test, assembling and... that is all.**

To reassemble your device, follow these instructions in reverse order.