



# Nokia 6030 LCD Screen Replacement

Replacing LCD Screen.

Written By: Spencer Woodworth



# INTRODUCTION

Replacing LCD Screen.

## TOOLS:


T6 Torx Screwdriver (1)

### Step 1 — Battery



- Press down on the grip on the back of the phone and slide the rear housing down towards the bottom of the phone.


### Step 2

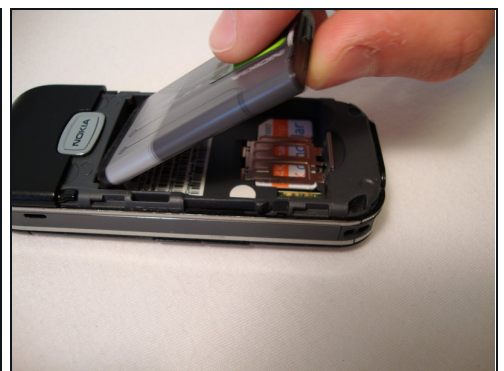

- Use your finger to gently pull the bottom of the battery up by using the slip found at the bottom of the phone.
- Lift out battery and remove.



### Step 3 — SIM Card

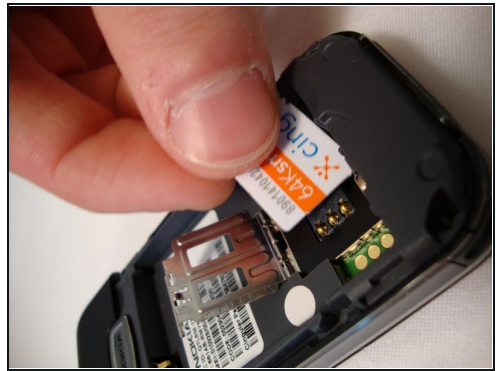


- Use your finger to lift the metal cage up.
- Remove SIM card.

### Step 4



- Use your finger to close the metal cage.

## Step 5 — Front Cover

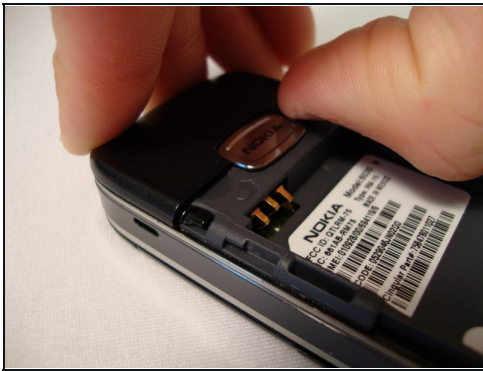

- Insert your two fingers under the two tabs found at the top of the phone underneath the black casing, then pull the casing up and slide it out slowly.

## Step 6



- After removing the top cover, turn the phone over so the screen is facing upwards.

## Step 7



- Use your fingers to slowly lift the screen back towards the bottom of the phone using the arrows found at the top of the phone.


## Step 8 — LCD Screen



- Remove the six screws found along the frame of the phone with a T6 Torx screwdriver and put them to the side.





## Step 9

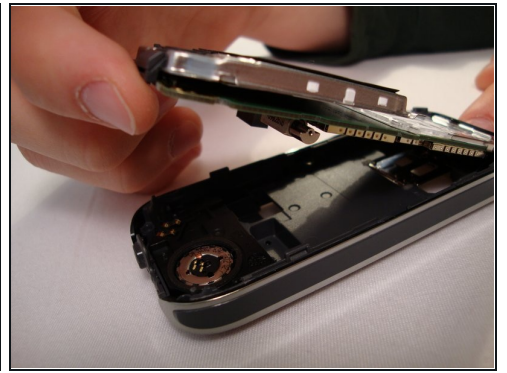

- Gently lift the top of the screen up.

⚠ Be cautious of loose parts.

## Step 10

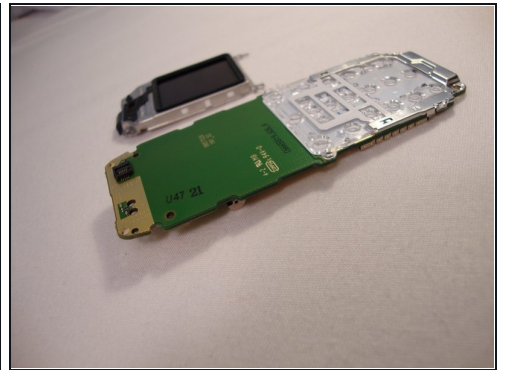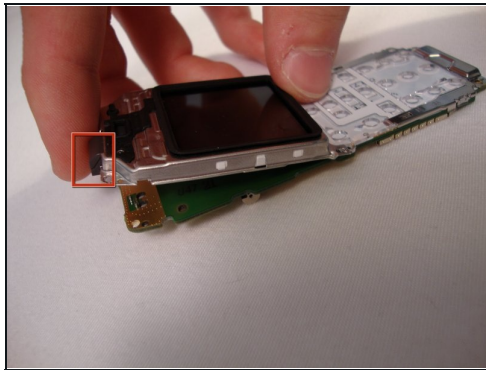

- Gently pull up on the grey plastic tab.

---

To reassemble your device, follow these instructions in reverse order.