


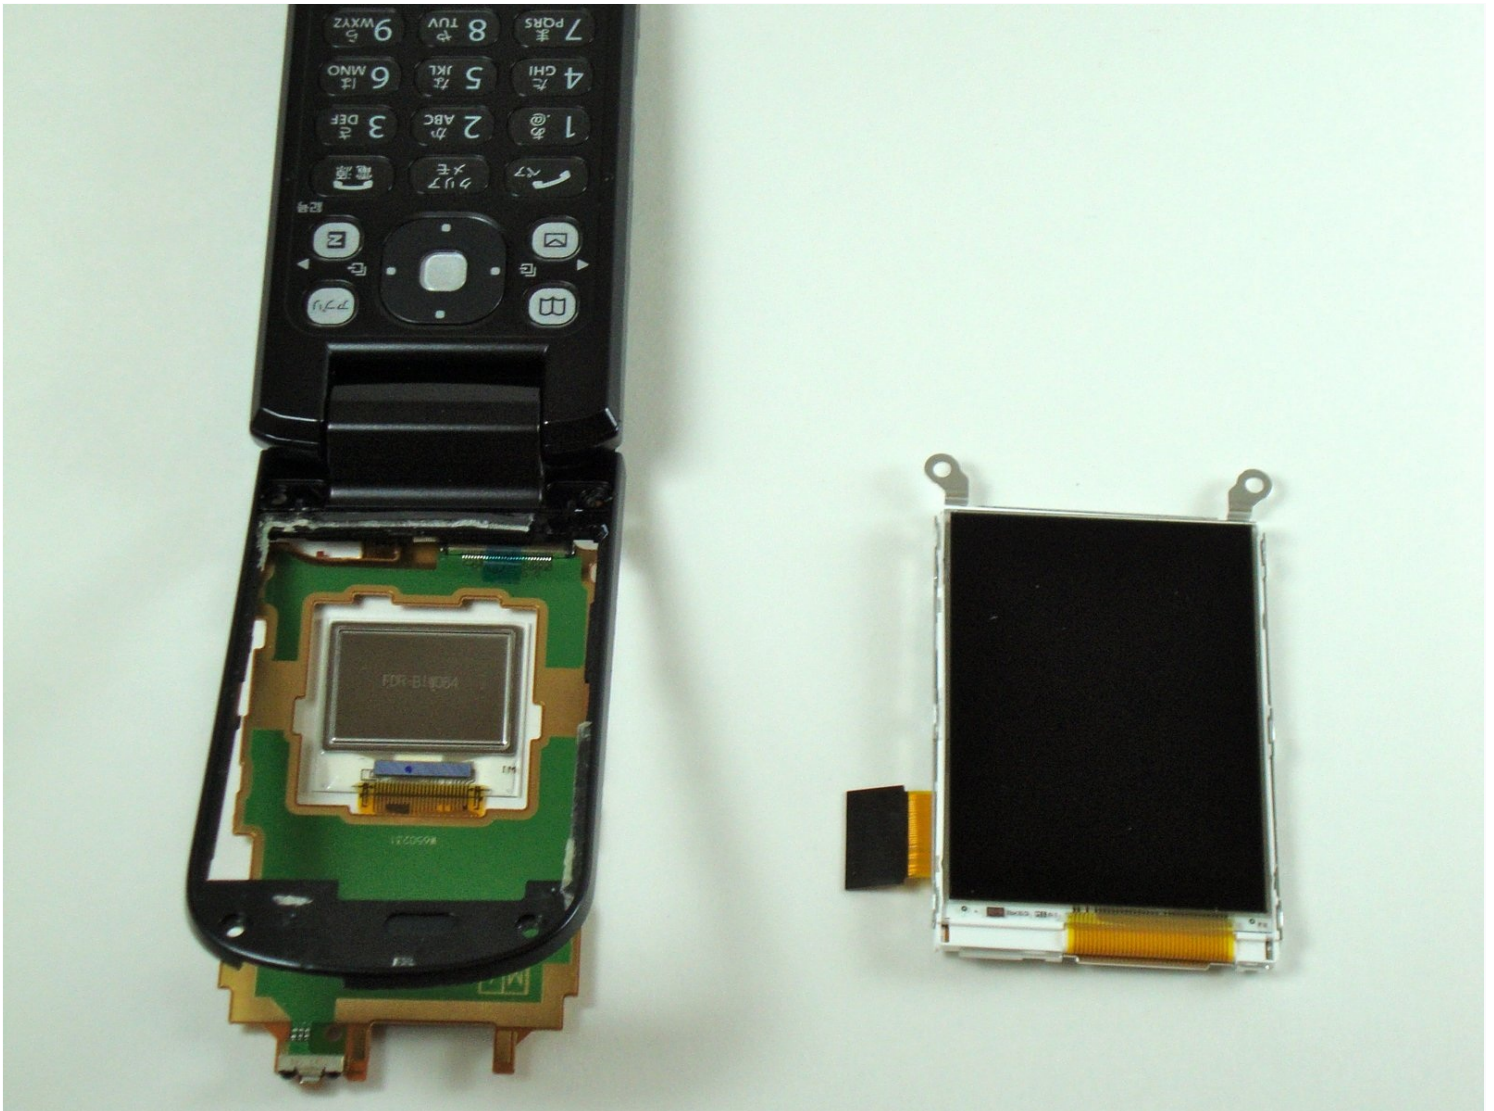

# Disassembling KDDI Kyocera A5521K Main LCD Screen

These instructions will demonstrate how to...

Written By: Dominic Grisafe



# INTRODUCTION

These instructions will demonstrate how to remove the main LCD screen from the KDDI Kyocera A5521K.

## TOOLS:

[Spudger](#) (1)



[Tweezers](#) (1)

[iFixit Opening Tool](#) (1)

[Tri-point Y0 Screwdriver](#) (1)

[Push Pin](#) (1)

## Step 1 — Disassembling KDDI Kyocera A5521K Faceplate

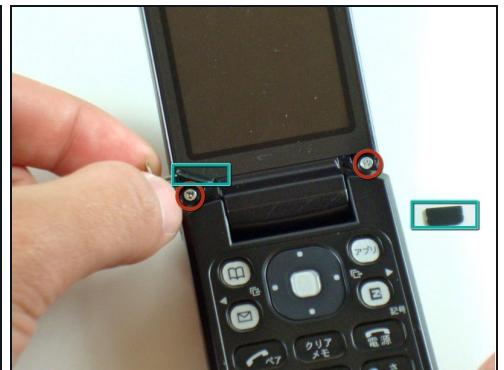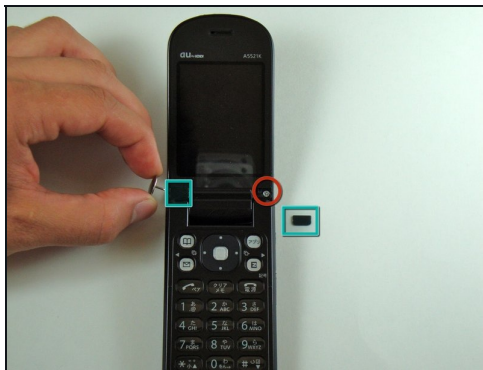

- Pry, with a metal probe, the black covers that are located by the pivoting joints of the phone.
  - Beneath the covers are screws.

## Step 2



- Remove the screws using a Y0 screwdriver.

## Step 3



- Use the iPod pry tool to remove the outer screen.
  - Two screws are now visible.

⚠ Be careful not to crack the screen upon removal. It is adhered strongly to the phone.




## Step 4




- Use the Y0 screwdriver to remove the screws.

## Step 5

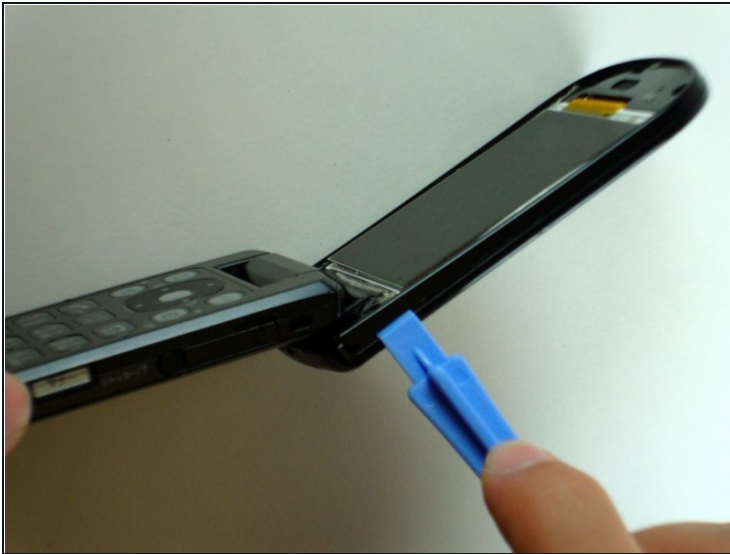


- Use the iPod pry tool to loosen the faceplate from the phone.
  - ① Slide the pry tool along the entire crease of the faceplate to completely detach it.

## Step 6

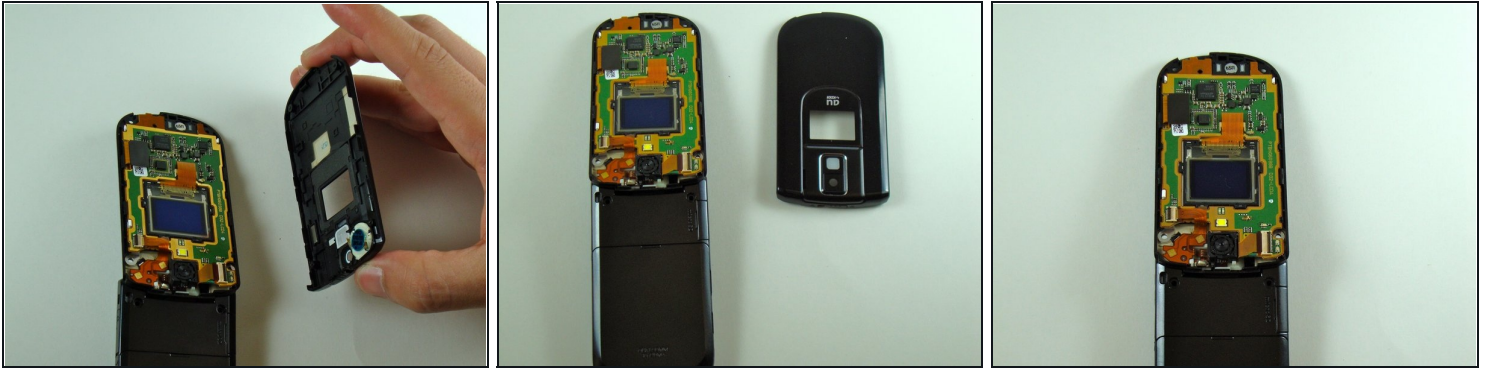

- Separate the faceplate from the phone.


## Step 7 — Camera

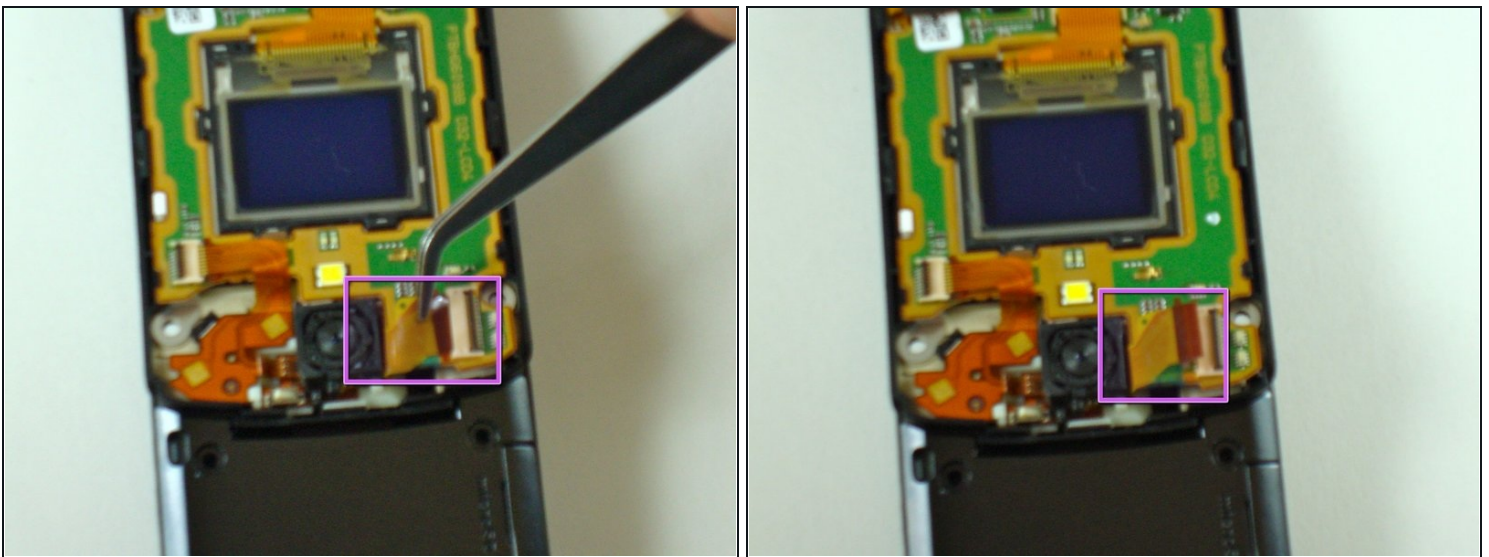

- Firmly grab the flexible circuit with [tweezers](#) to detach (or use your fingers if you can manage a firm grip).




## Step 8

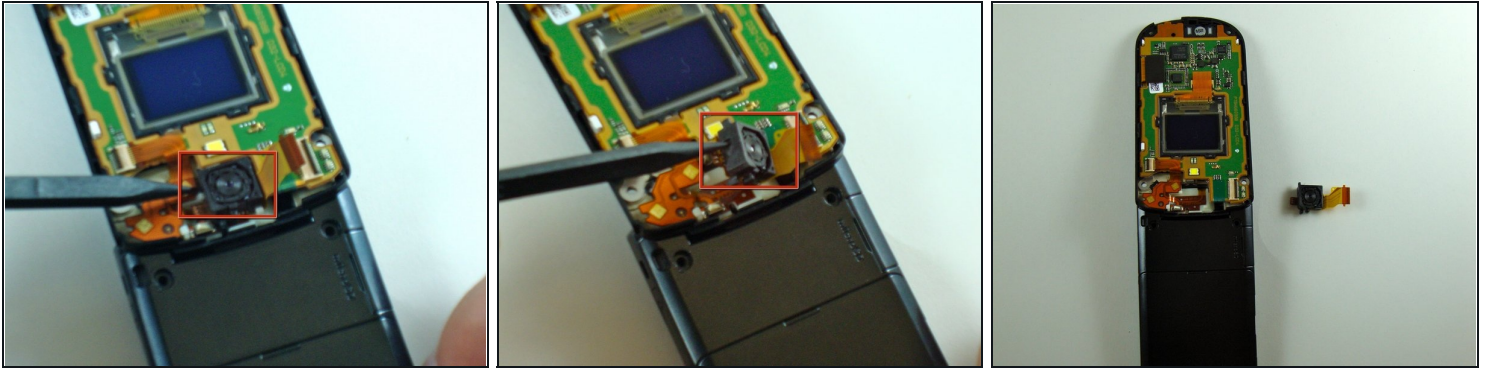


- Carefully pry up the camera unit with a spudger.  
⚠ Be careful not to damage the camera unit.
- The camera should now be separated from the phone.

## Step 9 — Main LCD Screen

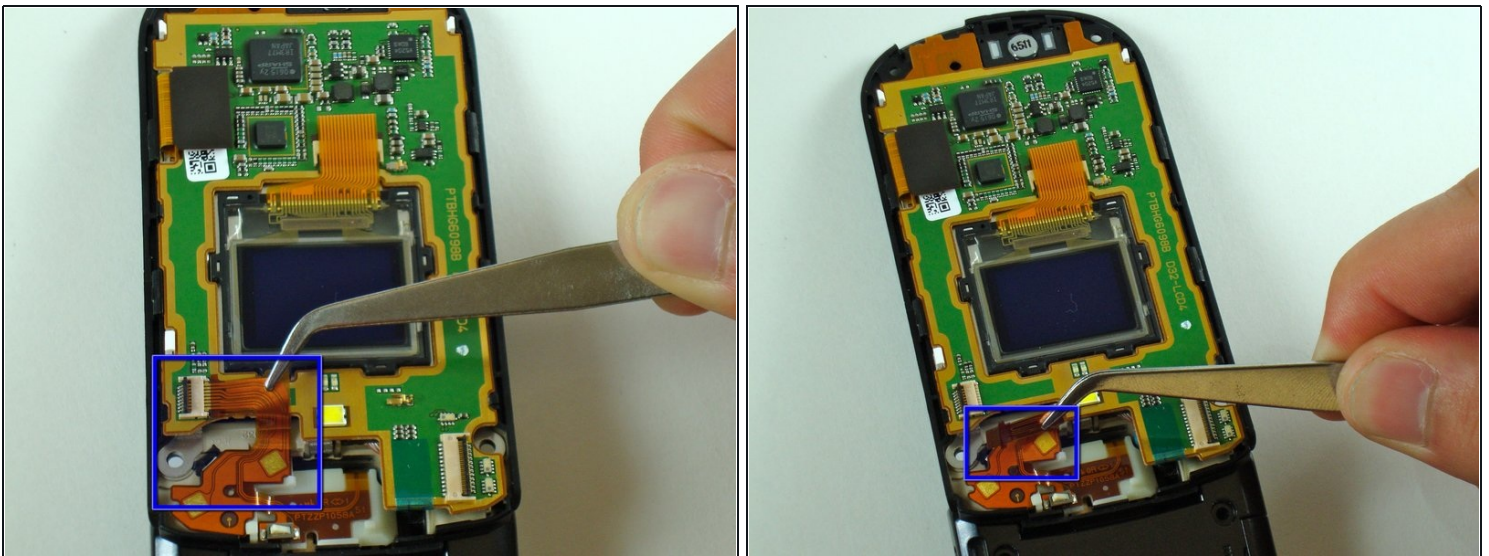

- Remove the flexible circuit shown using [tweezers](#) (or use your fingers if you can manage a firm grip).

## Step 10

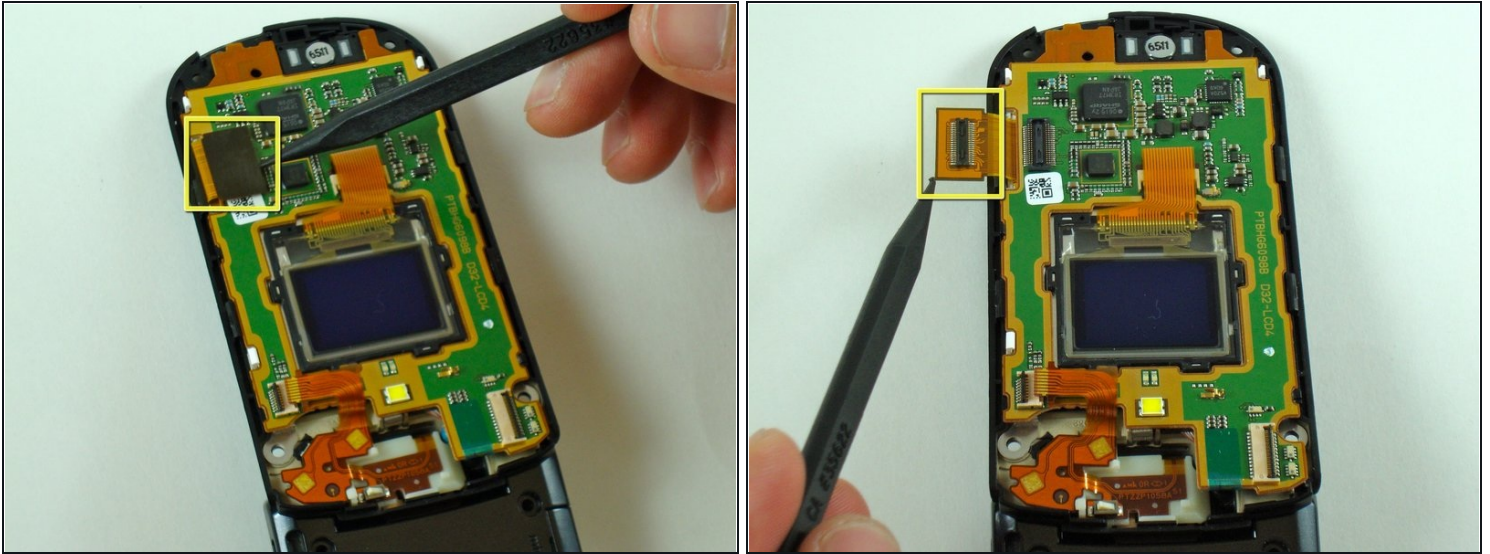

- Unplug the circuit connector.

## Step 11




- Grab the phone with both hands.
- Turnover the phone so that the main screen faces you.
- Firmly grasp the edges between your thumbs and fingers.
- Carefully push in the LCD screen from the remainder of the phone.

⚠ Be careful not to break the LCD screen.





## Step 12

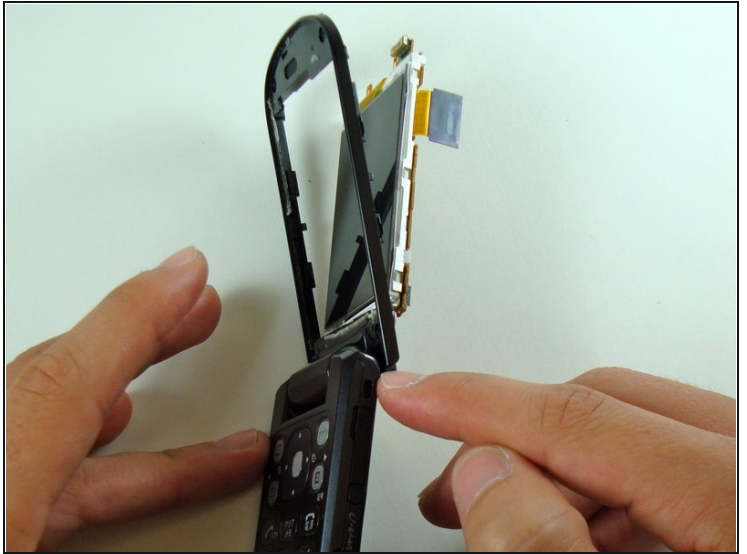

- The LCD screen and circuit board should now be partly detached from the frame.




## Step 13

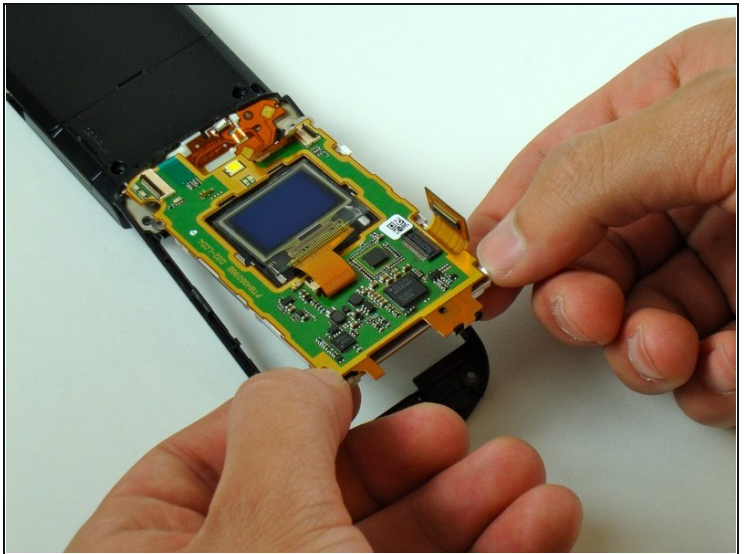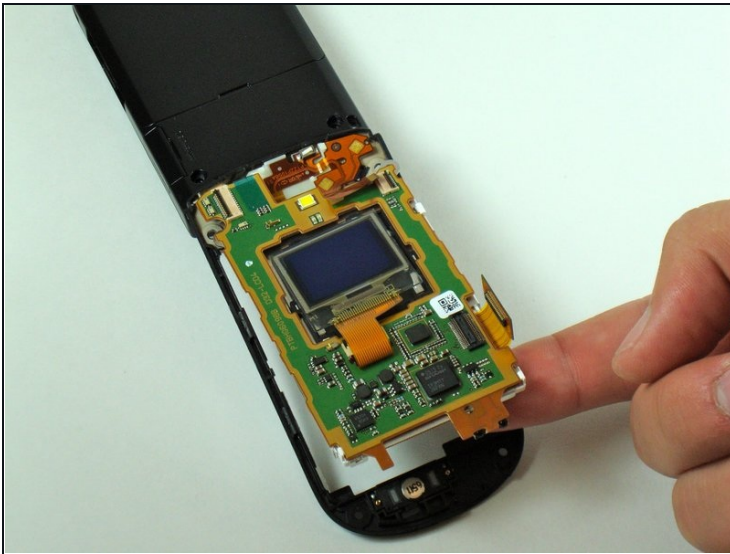

- Turn over the phone.
- Separate the circuit board from the back of the LCD screen.



## Step 14

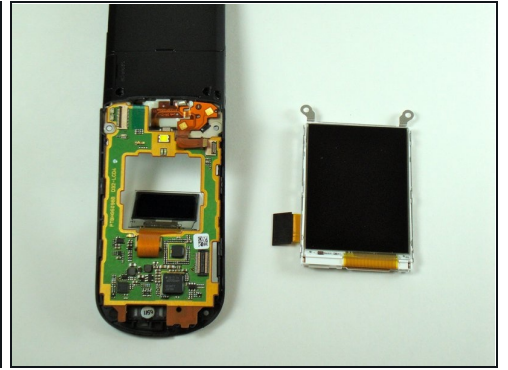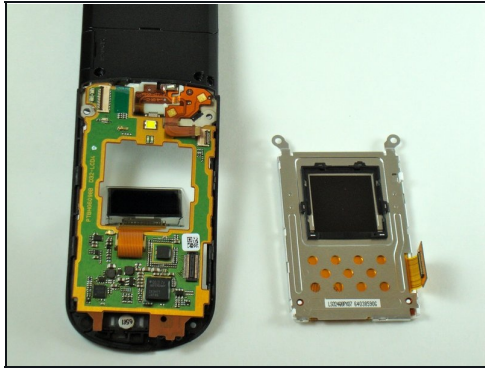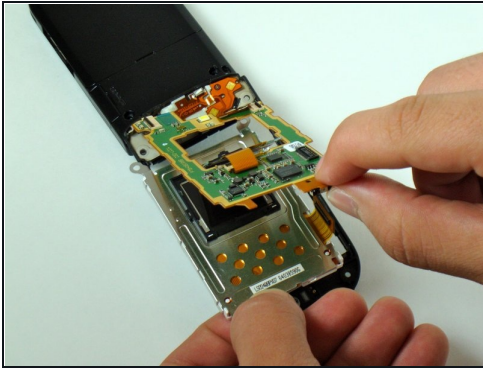

- Remove the LCD screen from the phone.

---

To reassemble your device, follow these instructions in reverse order.