



Nokia Lumia 620 Screen Replacement

Replace digitizer and/or lcd

Written By: ivan coene



INTRODUCTION

Don't forget to turn off the phone first.

When you disconnect the digitizer there is a rev number

it only works with the same rev


for example rev 1.3



TOOLS:

- [T5 Torx Screwdriver](#) (1)
 - [iFixit Opening Picks set of 6](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Screen

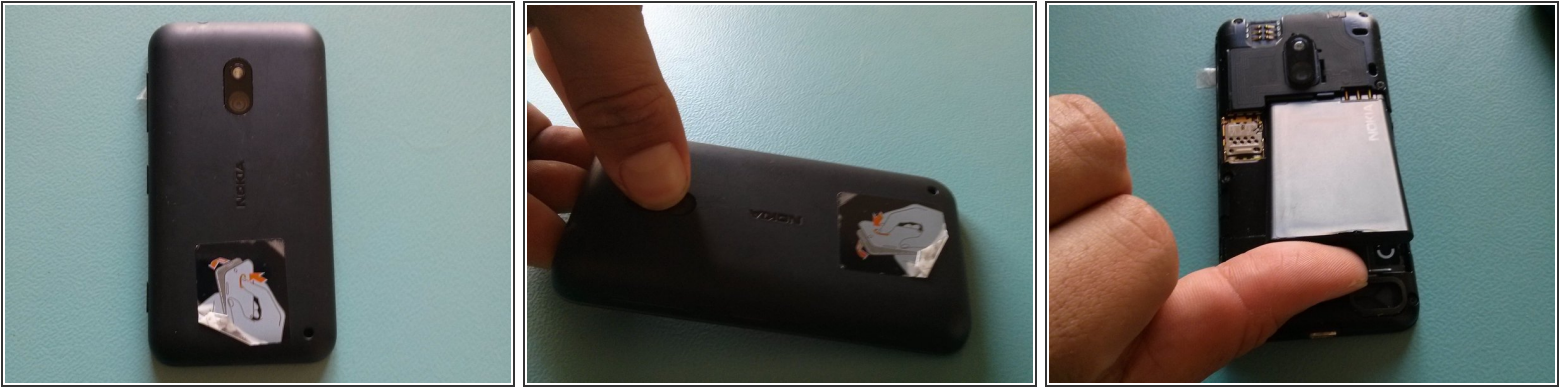



- Open cover
- Take out battery
- Take out the sim card-tray

Step 2 — Screws




- 4 x t5 screws
- 2x t5 screws (slightly shorter than the top and bottom screws).

Step 3 — Connectors

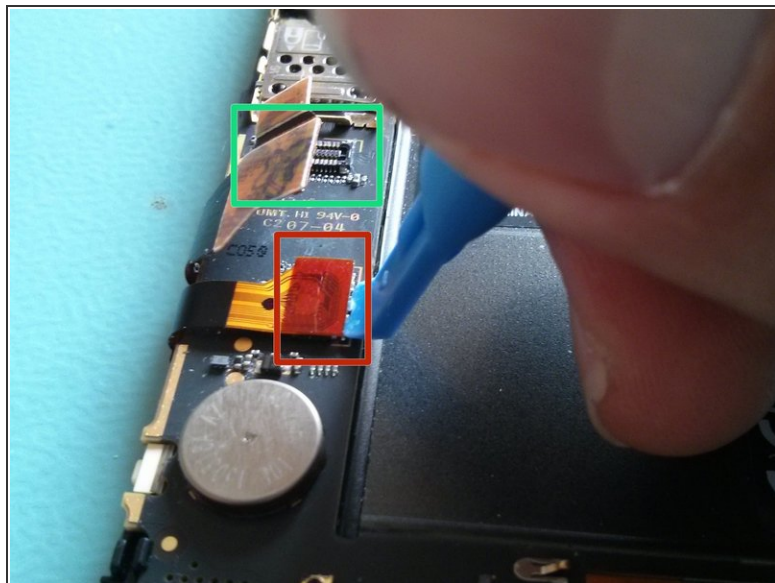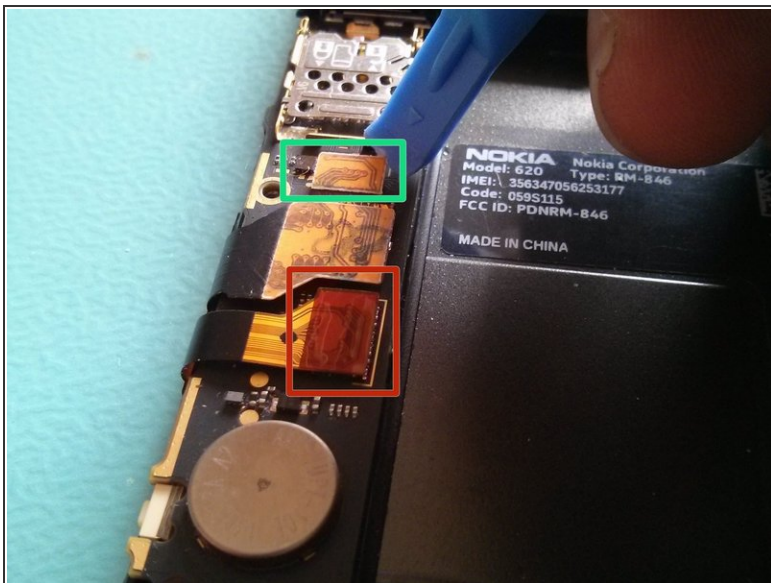



- Disconnect connectors
 - Digitizer
 - LCD

Step 4 — Main board

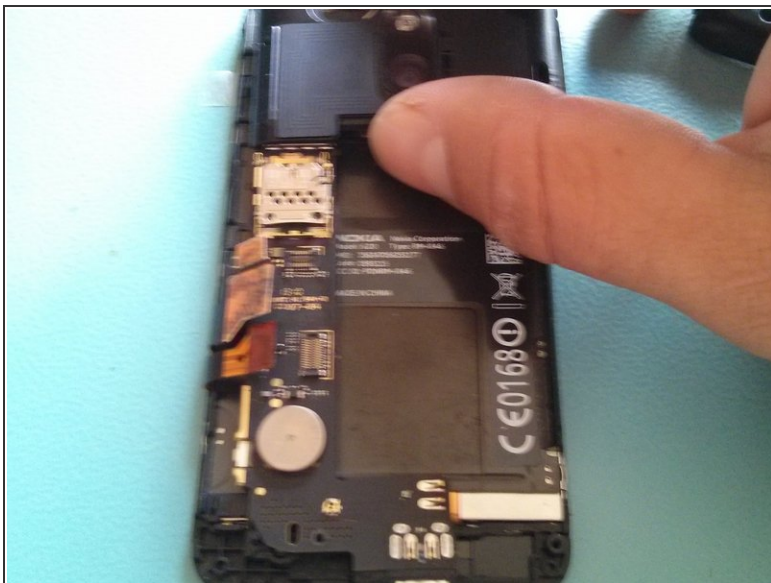


- Remove main board

Step 5 — Frame

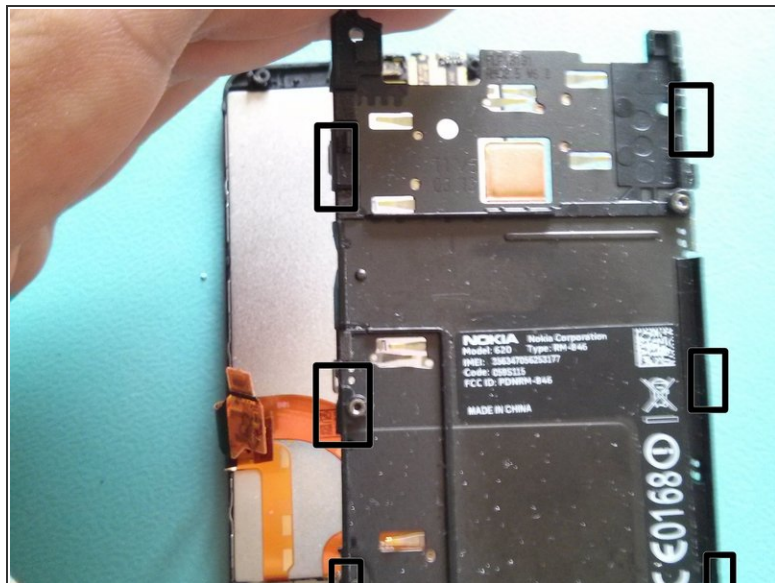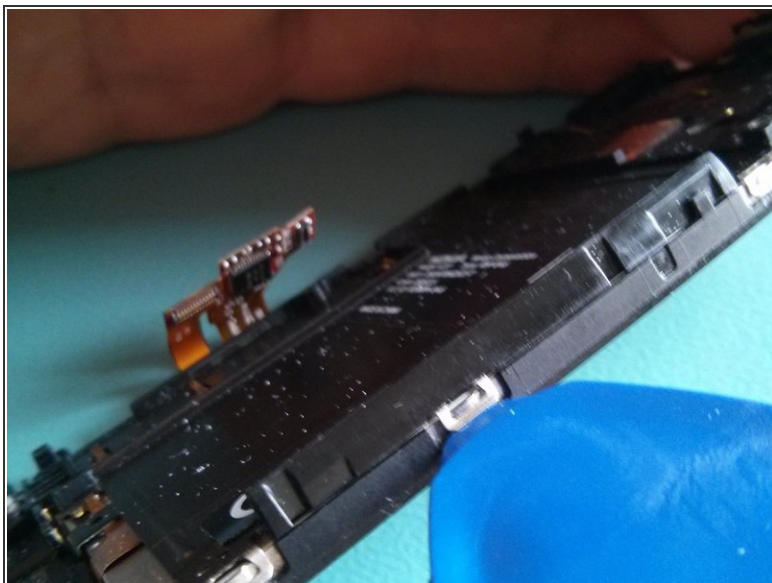


- Open the 6 clips

Step 6 — Speaker and front-camera

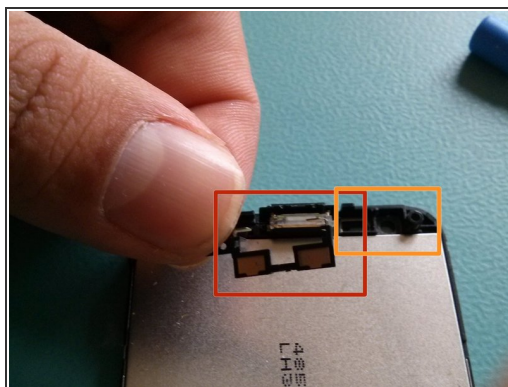



- Remove
 - Speaker
 - Front camera

Step 7 — Lcd

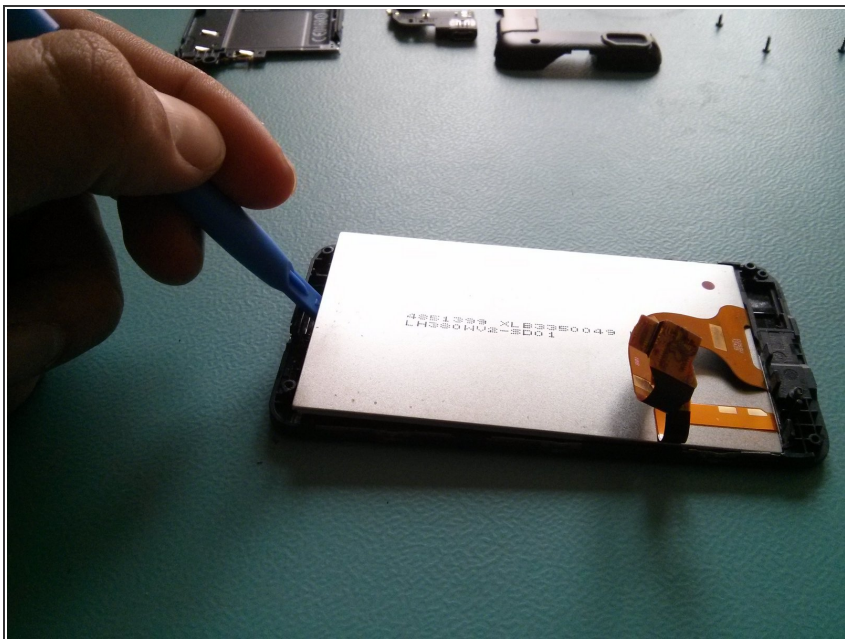

- Remove Lcd from digitizer

Step 8 — Done

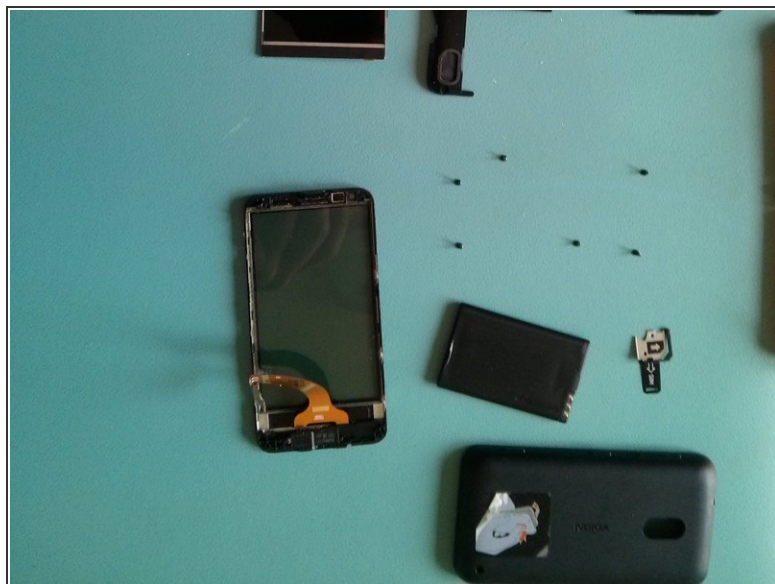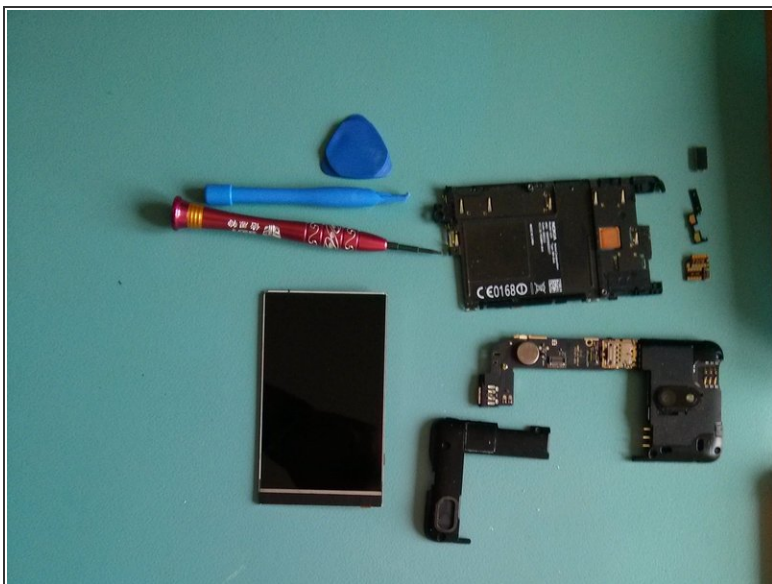

- You are ready

To reassemble your device, follow these instructions in reverse order.