




LG VX4500 Speaker Replacement

Replacing the speaker.

Written By: David Foster

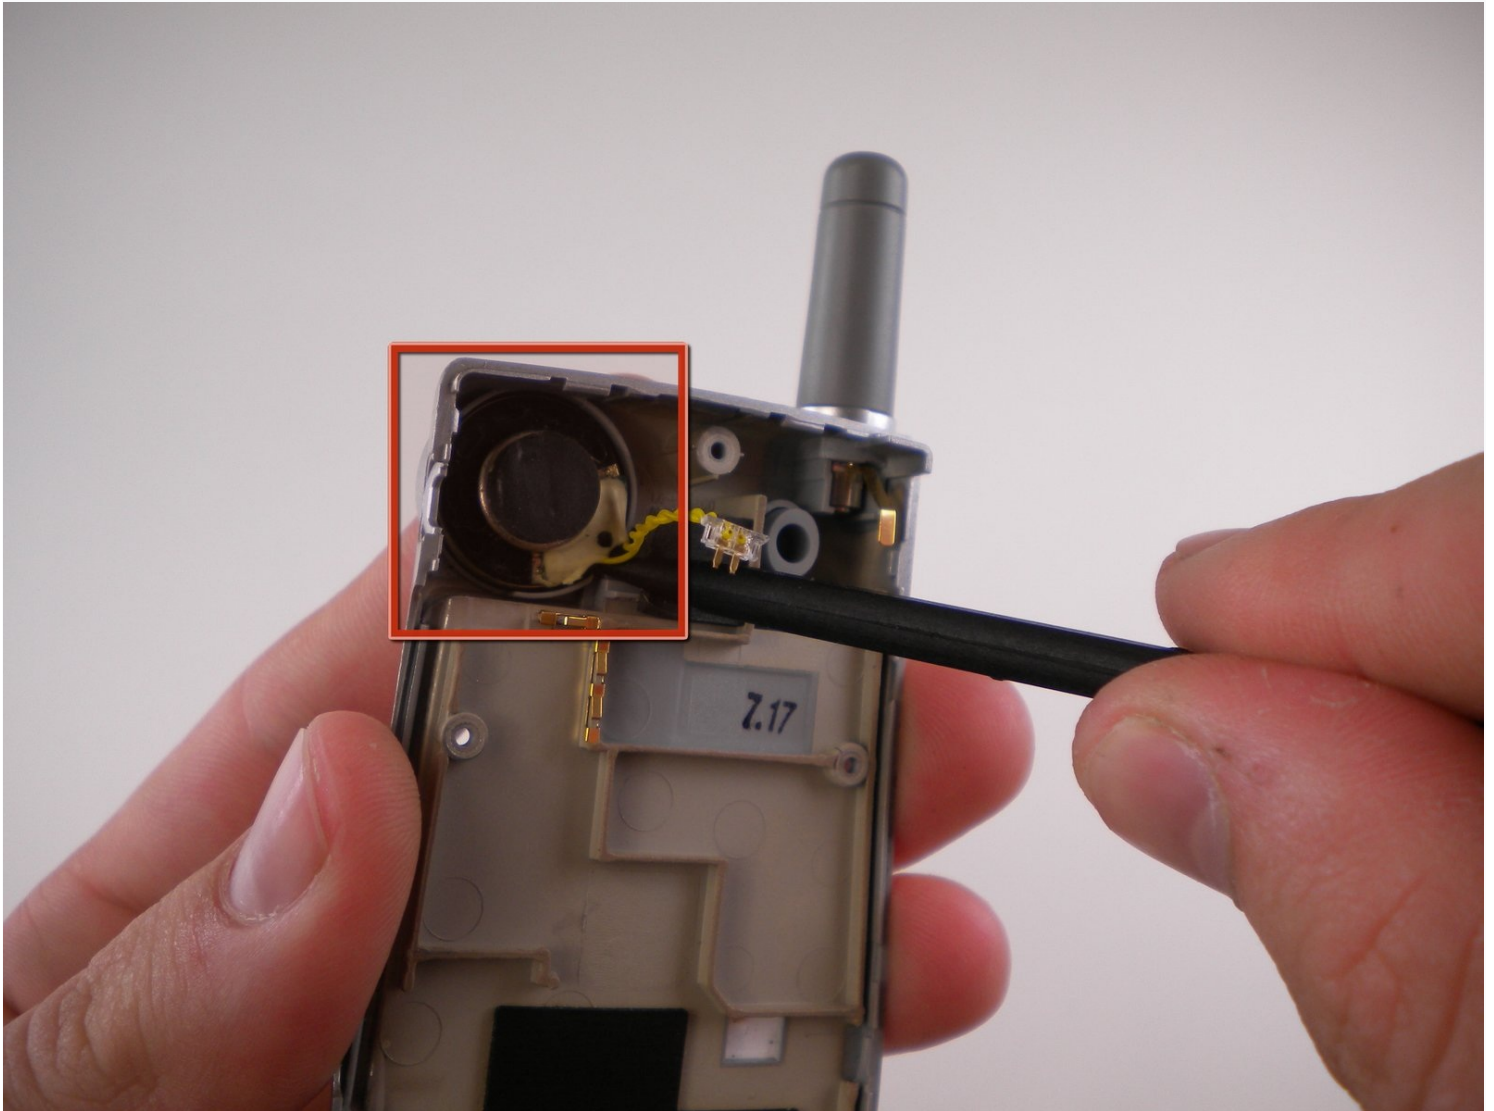

INTRODUCTION

Replacing the speaker.

TOOLS:

[Phillips #00 Screwdriver](#) (1)

[Spudger](#) (1)

[iFixit Opening Tool](#) (1)

Step 1 — Battery



- Turn the closed phone so that the back panel is facing you.
- Press down and forward firmly on the gray tab in the middle of the phone.

Step 2




- Now just lift up on the battery and remove it from the phone.

Step 3 — Rear Cover



- Remove the rubber grommet using a Spudger.


Step 4

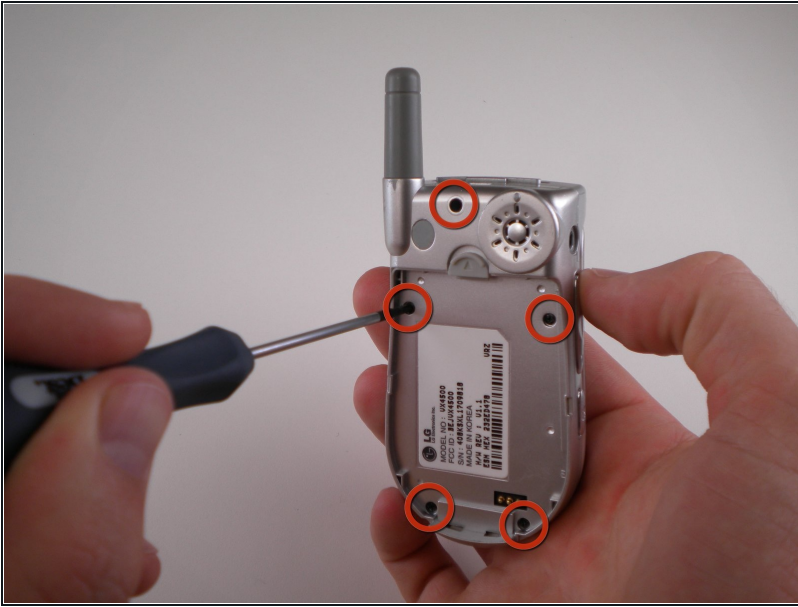

⚠ Be sure not to lose the screws.
They are small!

- Remove the five screws using a Phillips #00 Screwdriver.


Step 5

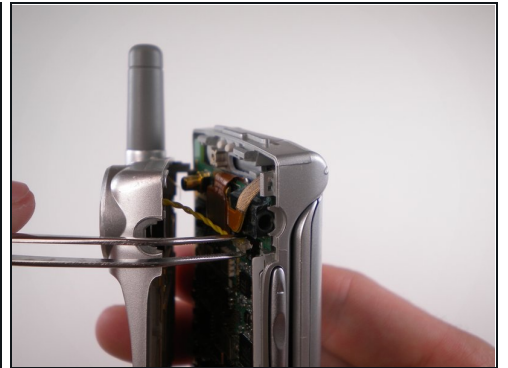

⚠ When removing back cover, be careful not to break the speaker wires.



- Using an Opening Tool, carefully pry off the back cover.
- Using [tweezers](#), gently pull the speaker wires out.

Step 6

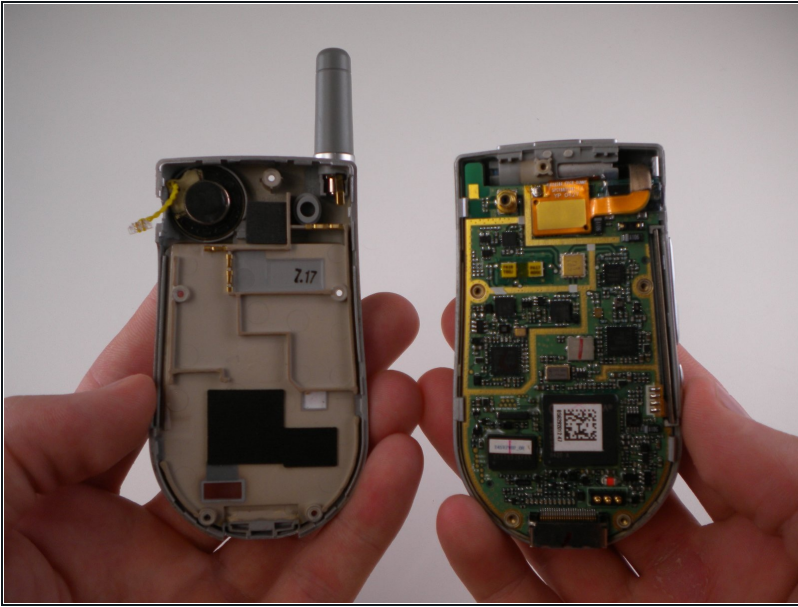


- Separate the two halves.

Step 7 — Speaker

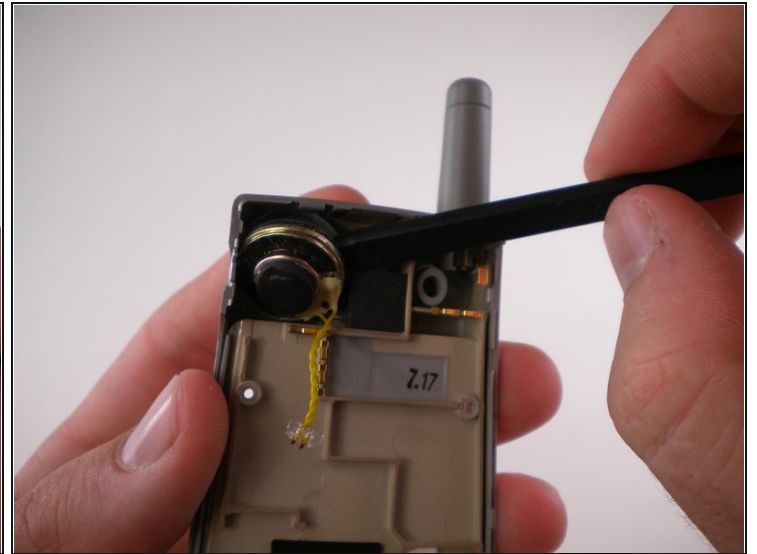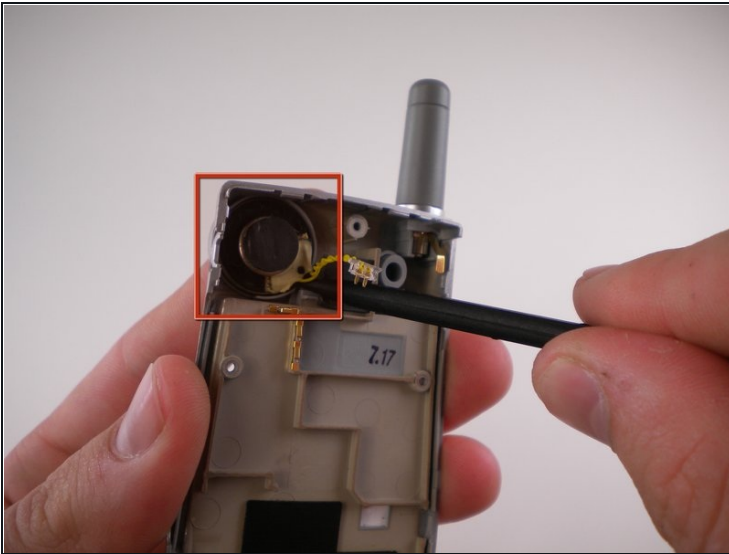

- Take top half of phone and pry up speaker using the Spudger.

Step 8

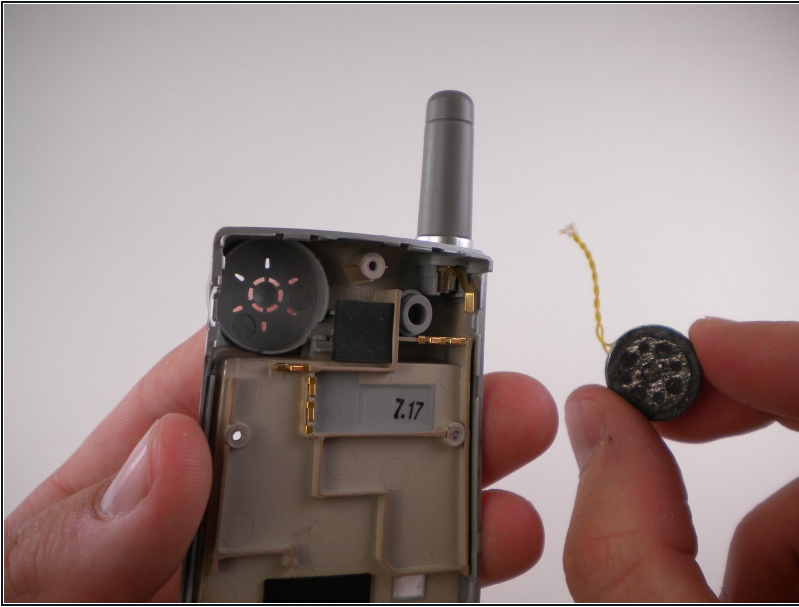

- Lift out speaker.

To reassemble your device, follow these instructions in reverse order.