




LG VX4500 Keypad Replacement

Replacing the keypad.

Written By: David Foster

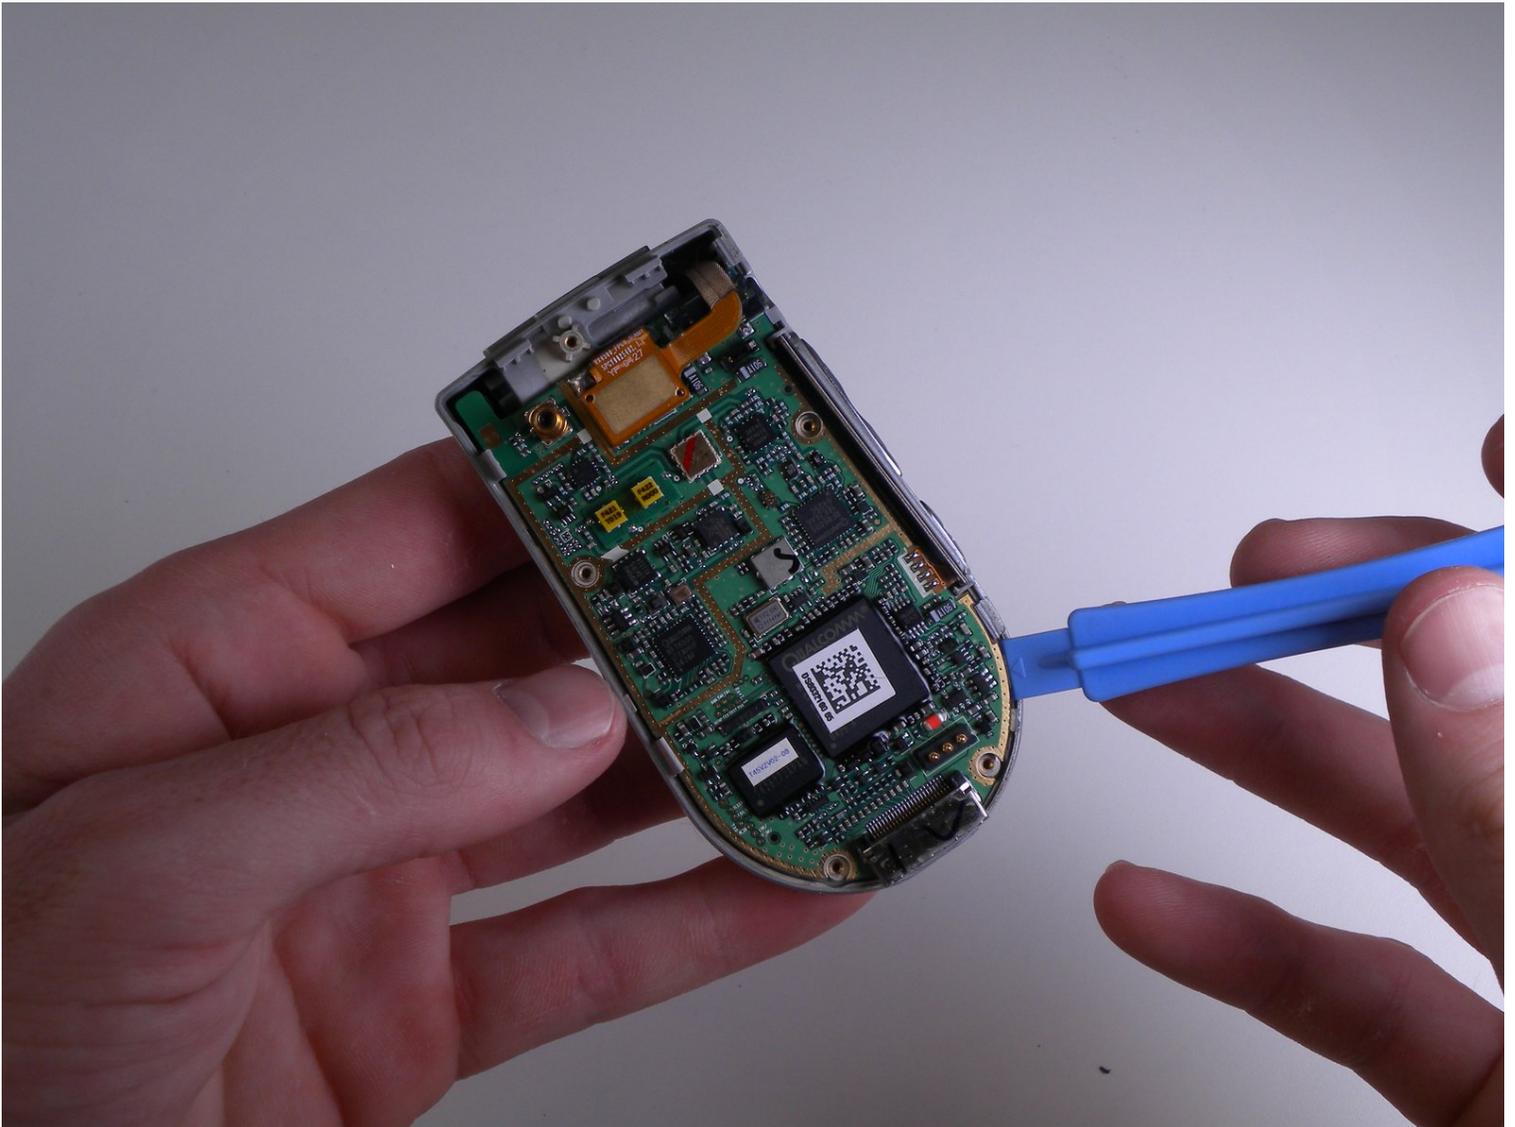

INTRODUCTION

Replacing the keypad.

TOOLS:

[Tournevis cruciforme #00](#) (1)

[Spudger \(spatule antistatique\)](#) (1)

[Outil pour ouvrir iFixit](#) (1)

Step 1 — Battery



- Turn the closed phone so that the back panel is facing you.
- Press down and forward firmly on the gray tab in the middle of the phone.

Step 2




- Now just lift up on the battery and remove it from the phone.

Step 3 — Rear Cover



- Remove the rubber grommet using a Spudger.

Step 4

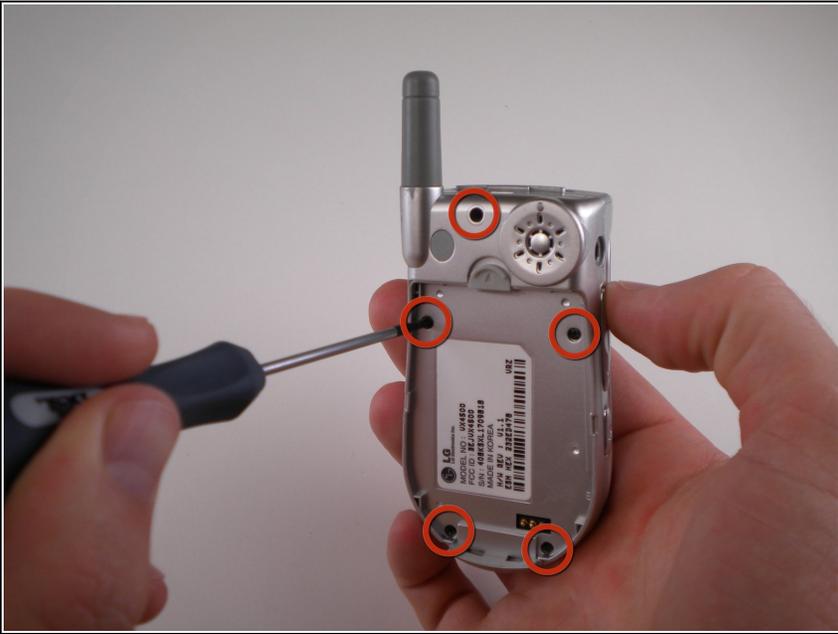

⚠ Be sure not to lose the screws. They are small!

- Remove the five screws using a Phillips #00 Screwdriver.

Step 5



⚠ When removing back cover, be careful not to break the speaker wires.




- Using an Opening Tool, carefully pry off the back cover.
- Using tweezers, gently pull the speaker wires out.

Step 6




- Separate the two halves.

Step 7 — Keypad

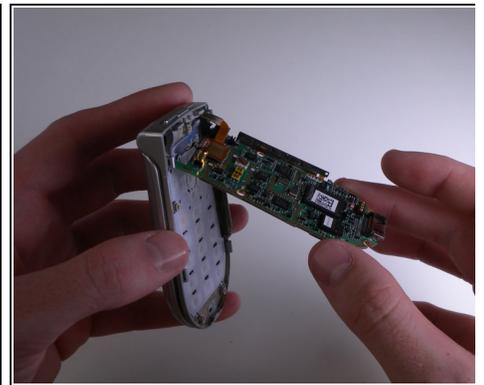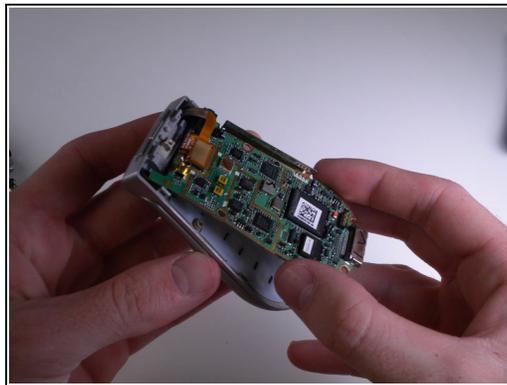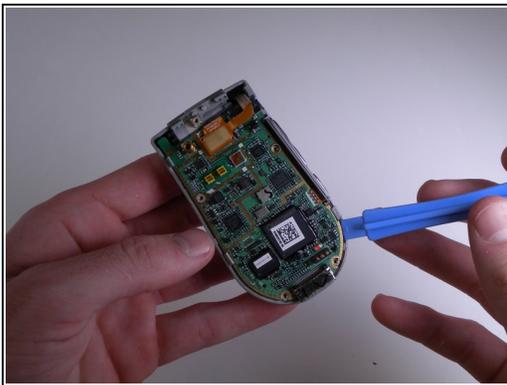


- Carefully pry and lift up on the logic board using an iPod Opening Tool.

Step 8

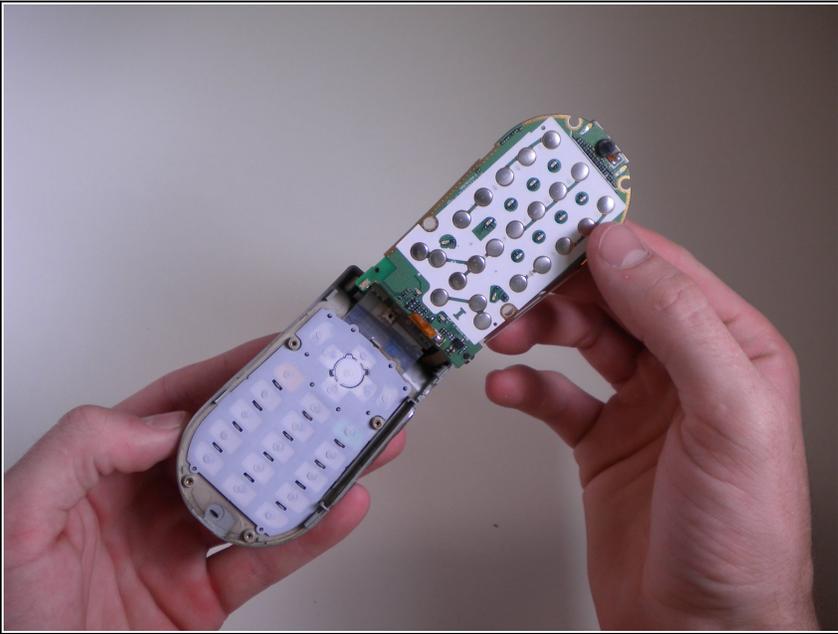

- Carefully flip the logic board up and out of the way.

Step 9

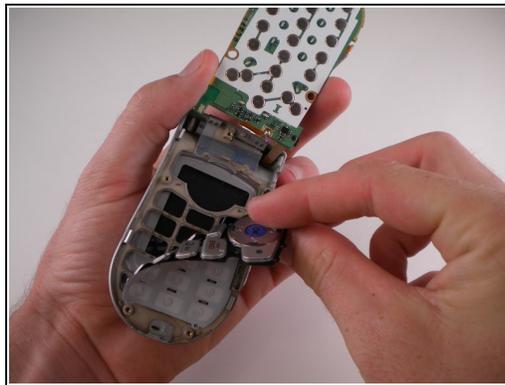

- Use an iPod Opening Tool to lift up on the keypad and pull it out.

To reassemble your device, follow these instructions in reverse order.