




# Dell Inspiron One 2020 Hard Drive Replacement

How to access and replace the hard drive.

Written By: Tyler

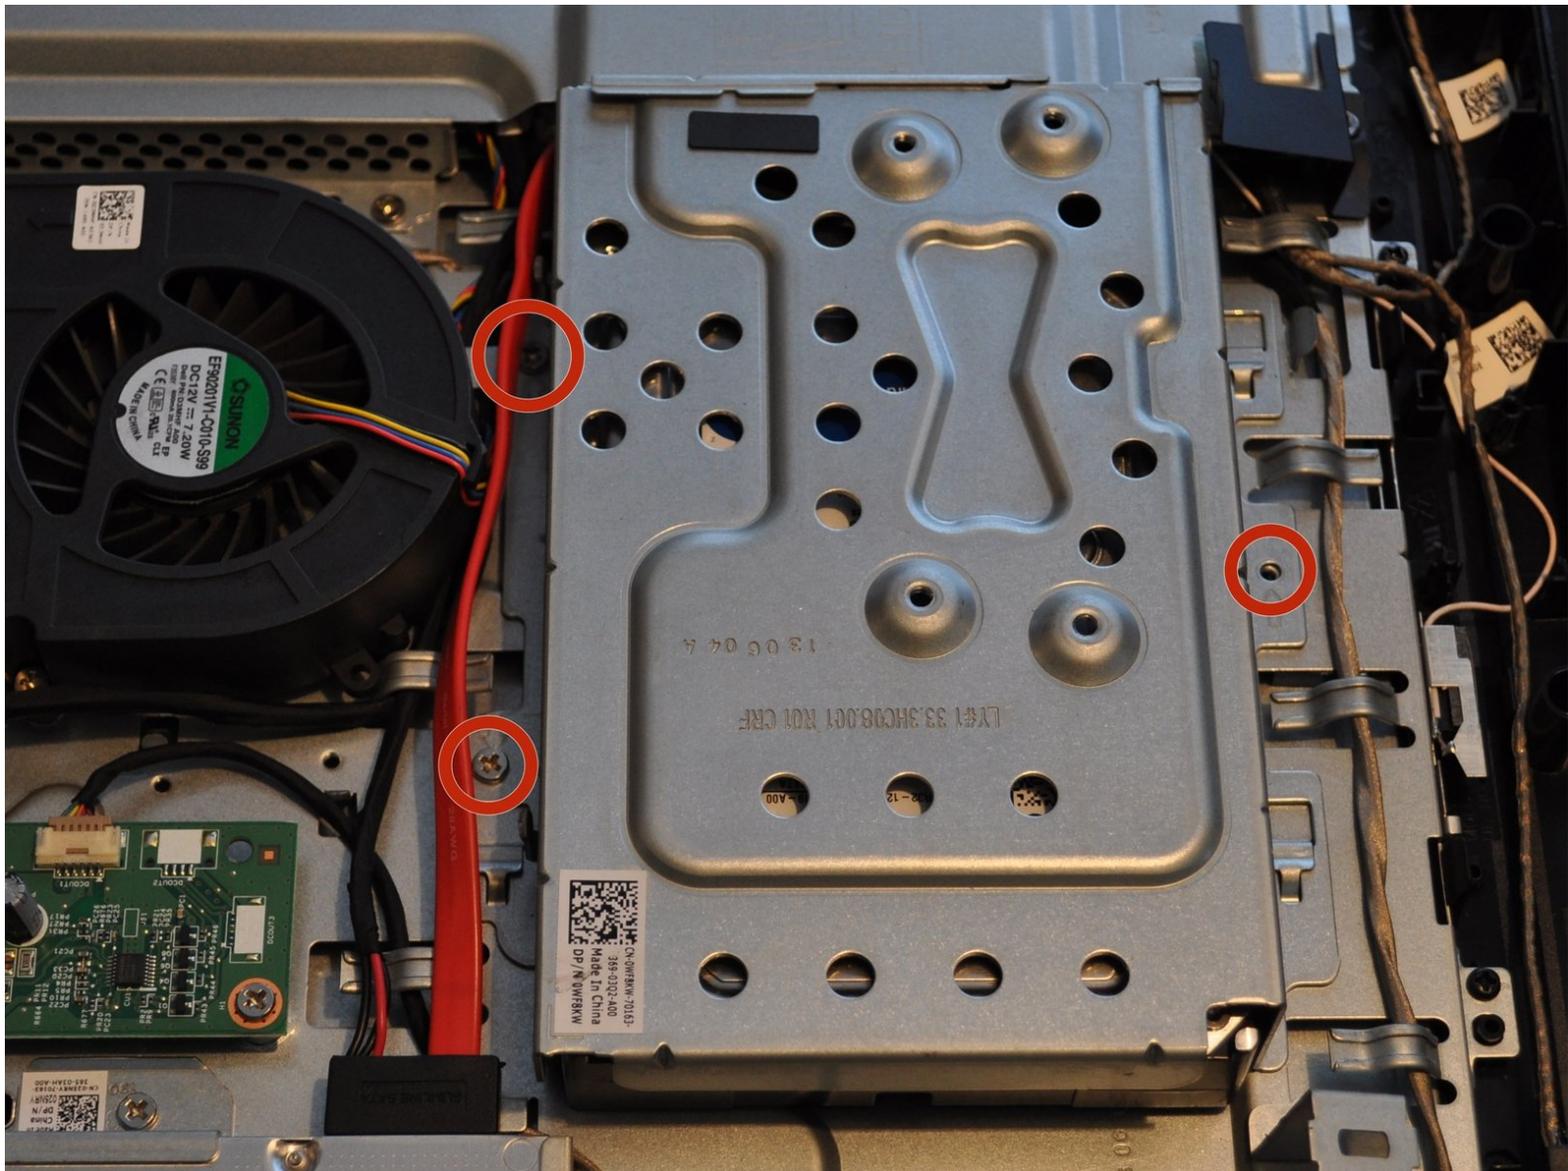

 **TOOLS:**

- [Phillips #2 Screwdriver](#) (1)
- [Spudger](#) (1)

 **PARTS:**

- [1 TB SSD / Upgrade Bundle](#) (1)
- [250 GB SSD / Upgrade Bundle](#) (1)
- [500 GB SSD / Upgrade Bundle](#) (1)
- [2 TB SSD](#) (1)




## Step 1 — Back Cover



 Place the all in one computer face down on a soft, clean surface to avoid scratching the front.

- Press the tab on the stand cover and lift up.

## Step 2

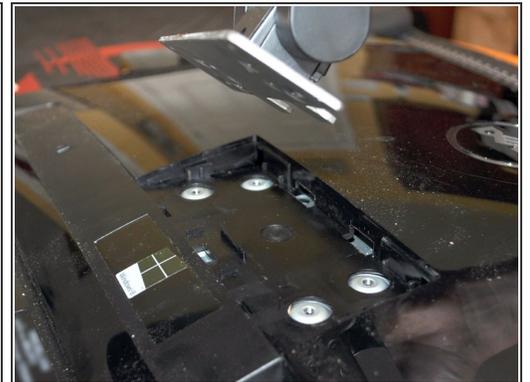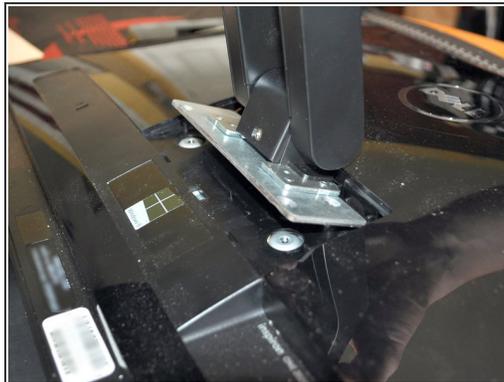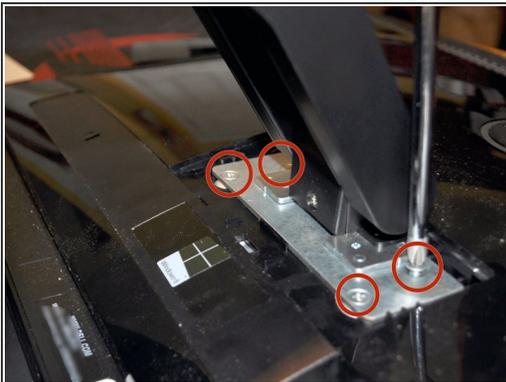


- Remove the four Phillips screws that attach the stand to the computer.
- Tilt the stand up and out.

### Step 3





- Starting from the optical drive, pry the back cover up with a plastic spudger.
- ⓘ The cover is held in place by fragile plastic clips. Careful to not break them.

### Step 4 — Hard Drive

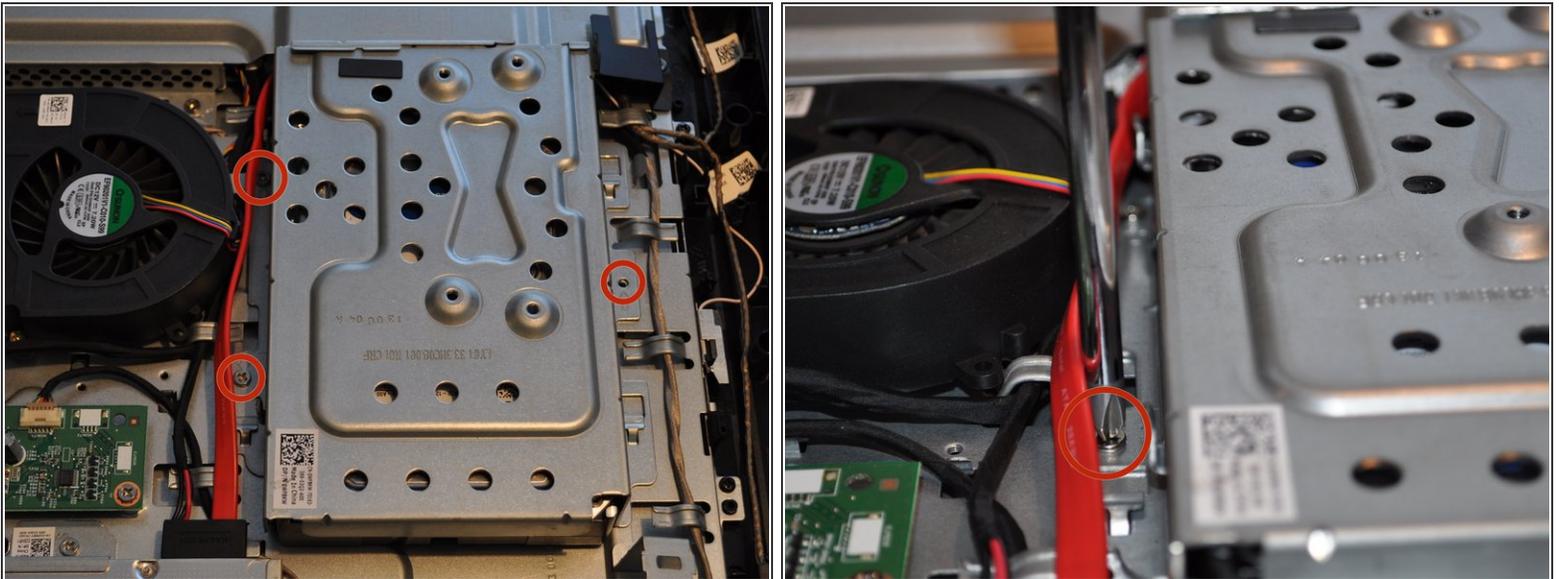



- Remove the three screws that hold the hard drive cage to the chassis.

## Step 5

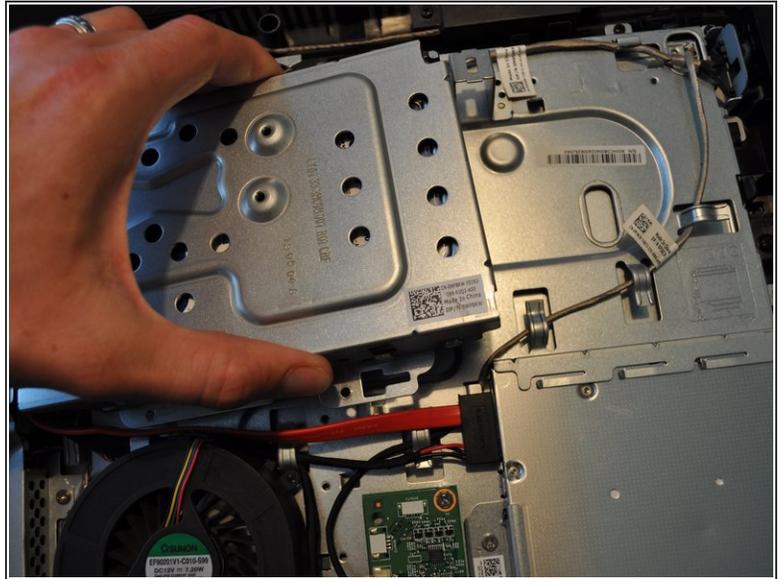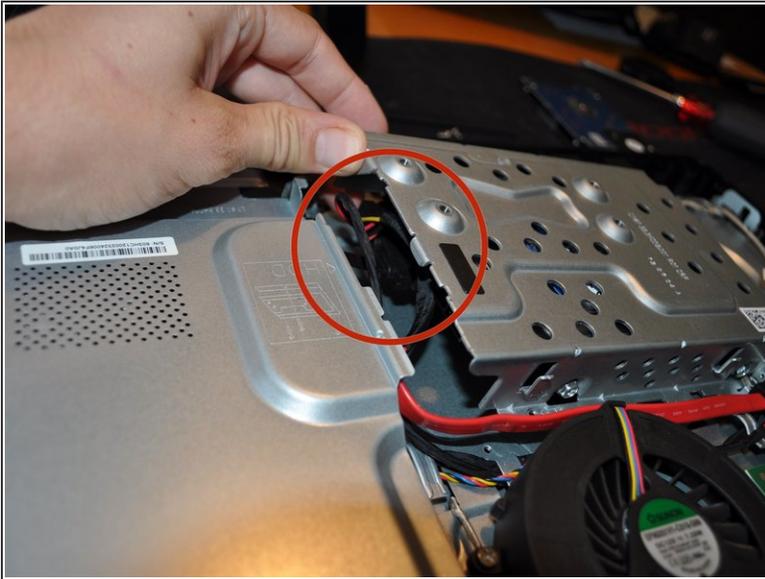

- Slide the hard drive cage out slightly to access and remove the power and SATA cable.
- ⚠ There isn't much slack in these cables, so don't slide the hard drive cage to far.
- ⓘ The power and SATA cables are connected together. On most other computers, these connectors are separate.
- Lift the hard drive cage out.

## Step 6

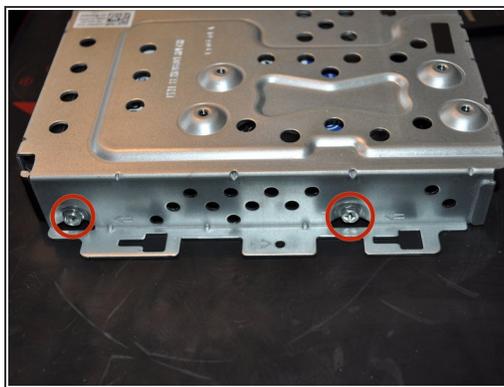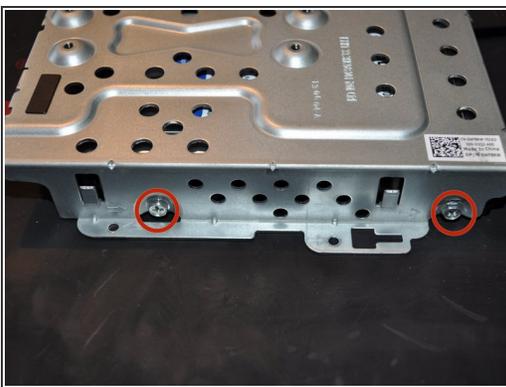

- Remove the four screws (two on each side) that attach the hard drive cage to the hard drive.
- Lift the hard drive cage off the hard drive.

This document was generated on 2020-11-15 01:56:37 AM (MST).

To reassemble your device, follow these instructions in reverse order.