



Disassembling Nokia 6236i Display

This guide helps you remove the display from...

Written By: Erik Lindahl




INTRODUCTION

This guide helps you remove the display from the phone.

TOOLS:


[Flathead 3/32" or 2.5 mm Screwdriver \(1\)](#)

Step 1 — Battery

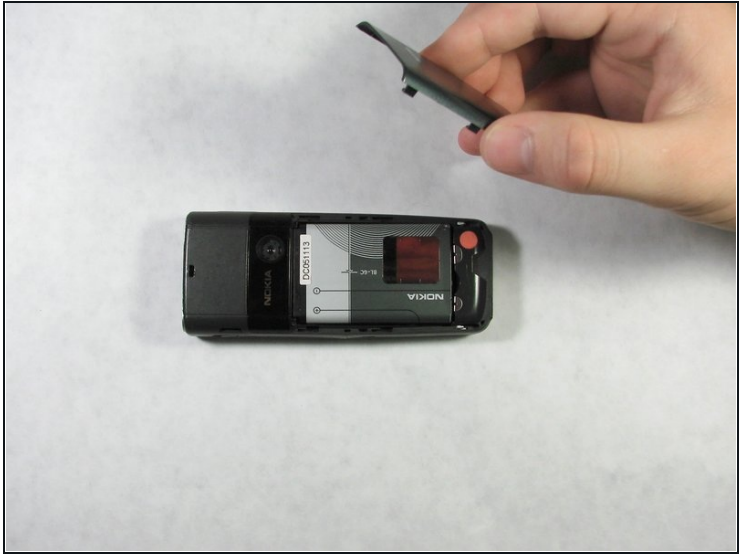

- Using your thumb, apply pressure to the battery casing (below the camera). Firmly pull towards the bottom of the phone.
- Lift the battery case off of the phone.

Step 2

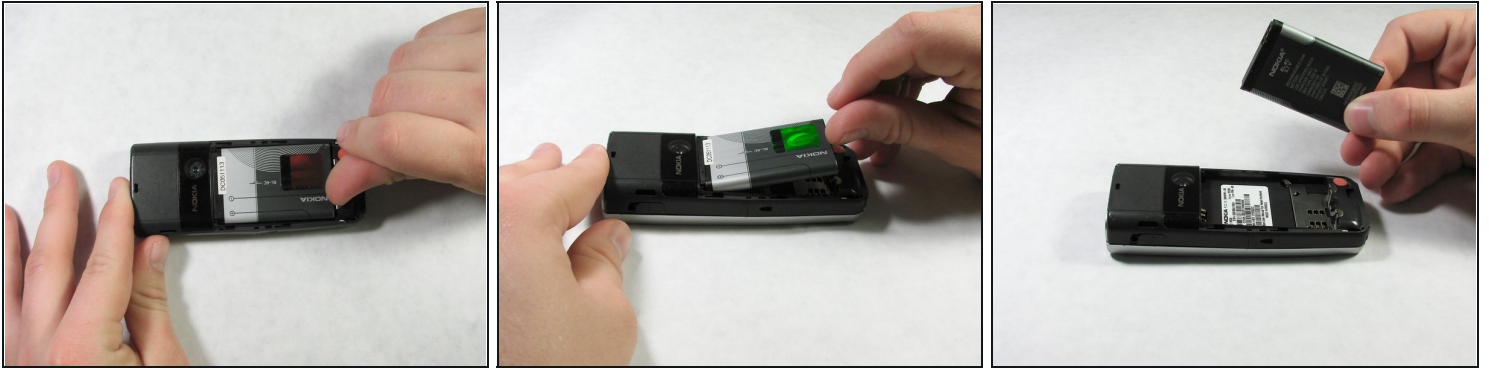


- Use your thumb to get underneath the battery and pull up and out from the bottom of the battery tray.
- The battery should lift out with minimal resistance.

Step 3 — Front Casing



- Insert a spudger into the indentation on the bottom right side of the device.
- Slide the spudger upward to a second indentation at the top of the phone.
- The front casing will detach from the phone.

Step 4 — Disassembling Nokia 6236i Display

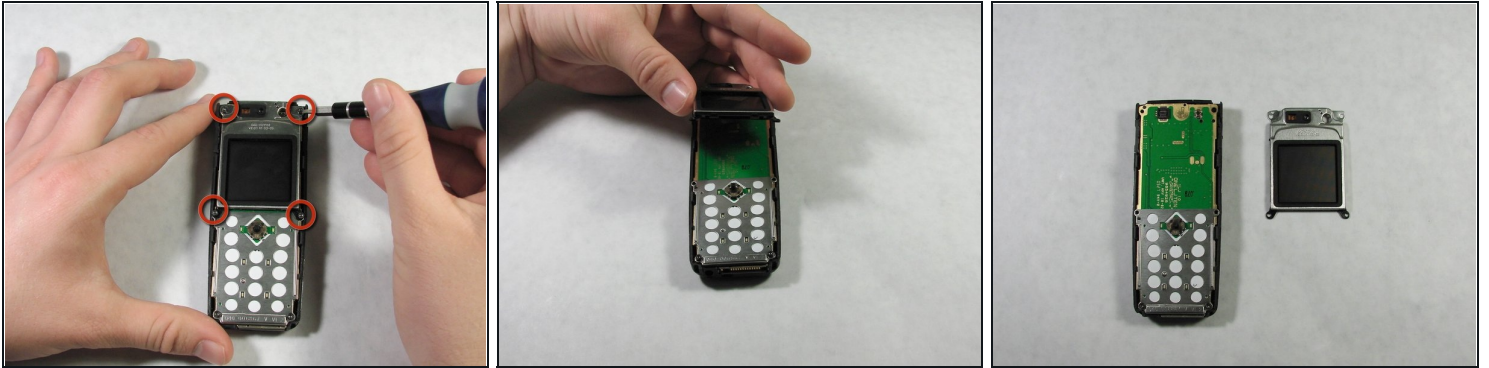

- Use the flathead screwdriver to remove four screws on the upper half of the phone.
- Lift the LCD up and off.

To reassemble your device, follow these instructions in reverse order.