




# HP G62-453 Teardown

This is a full teardown of an HP G62 series laptop. You will see how you can replace items too.

Written By: Kevin D

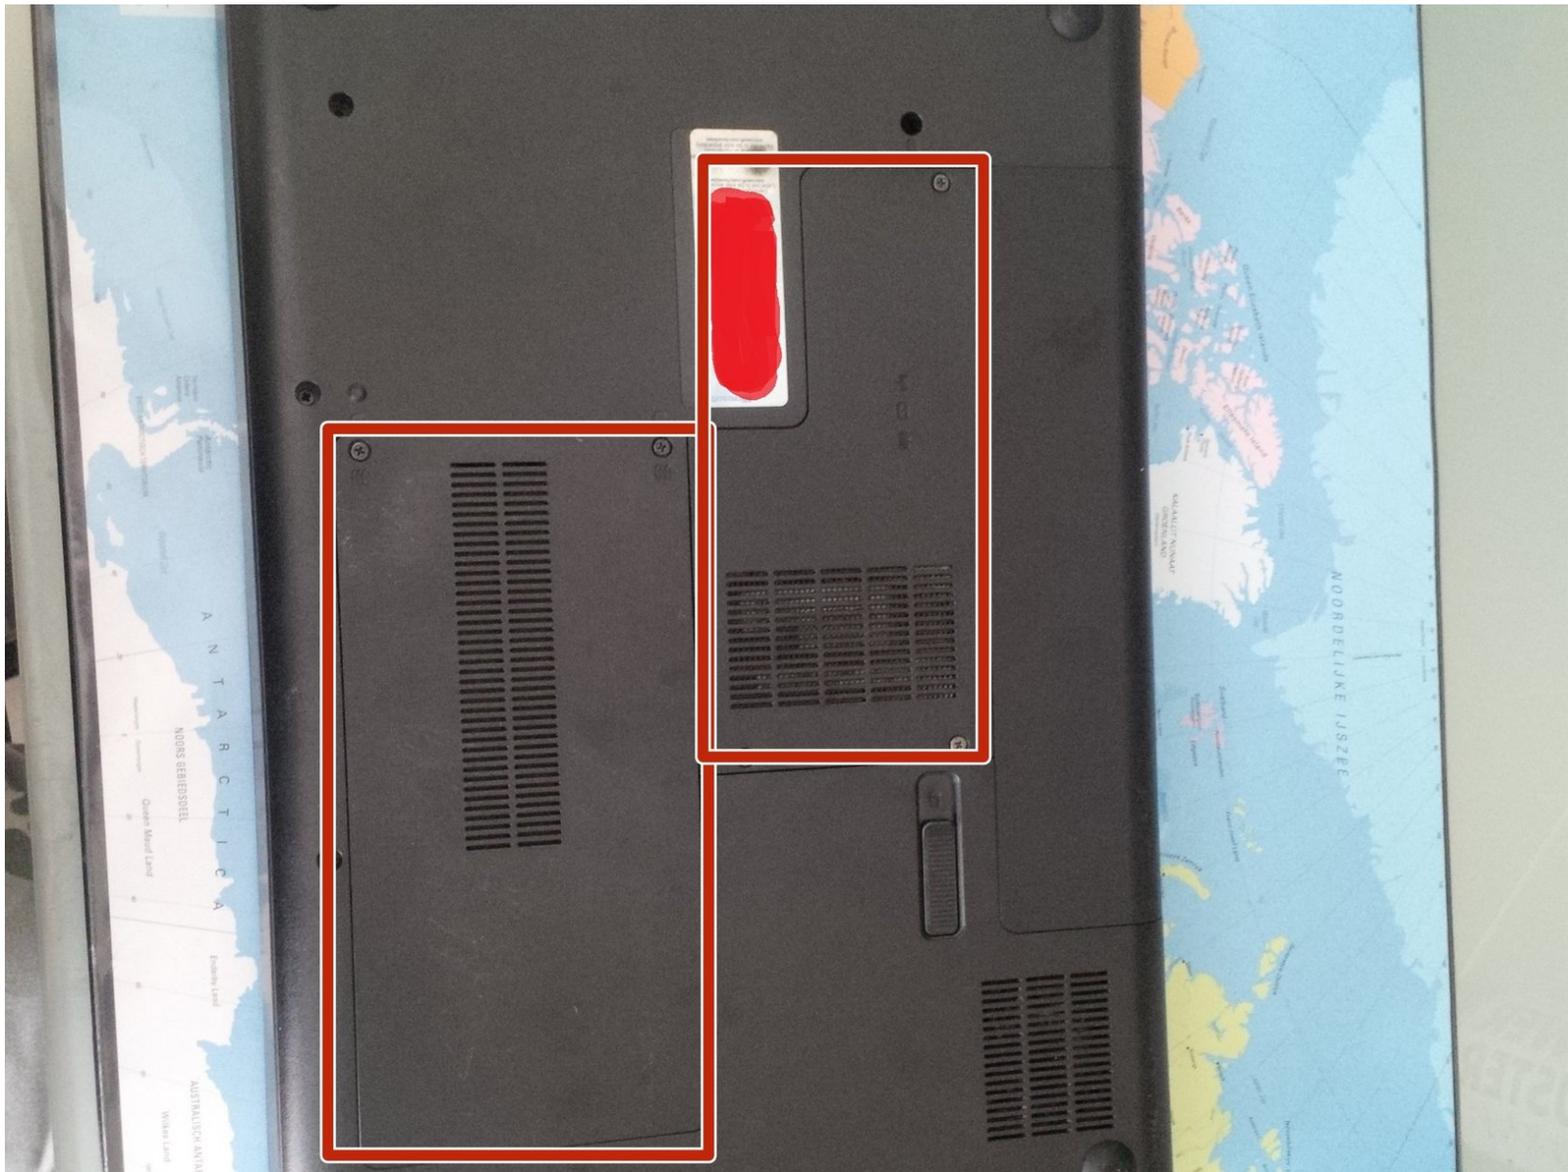

## INTRODUCTION

Hi everyone, here I am with a new guide (teardown/replacement)

Again, you will find little mistakes in my english, but as you know my native language is dutch ...

I hope you will like the guide.

Good luck!

---

### TOOLS:



- [Phillips #00 Screwdriver](#) (1)
  - [iSesamo Opening Tool](#) (1)
  - [prying tool iron spudger](#) (1)
  - [electricians tape](#) (1)
  - [Thermal Paste](#) (1)
-

## Step 1 — HP G62-453 Teardown




- Remove the 2 panels and the battery at the bottom of the laptop.
- After removing these panels, you'll see the RAM, HDD, and Wi-Fi module.

## Step 2

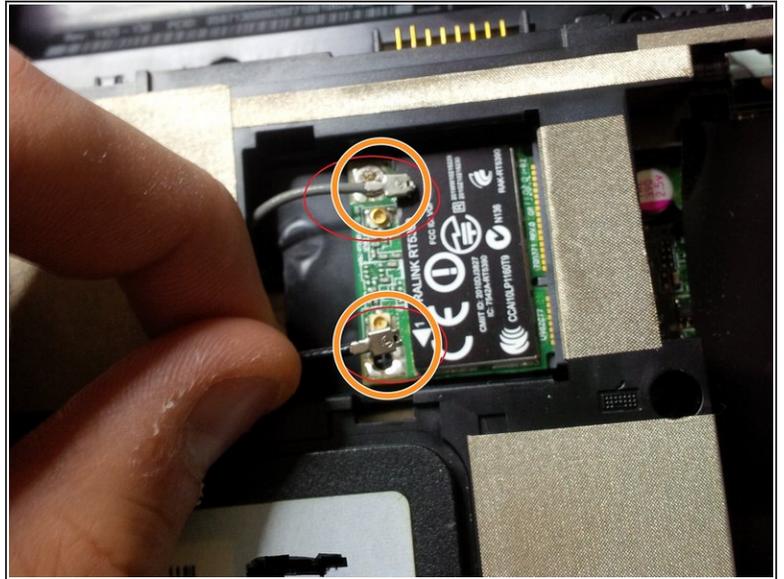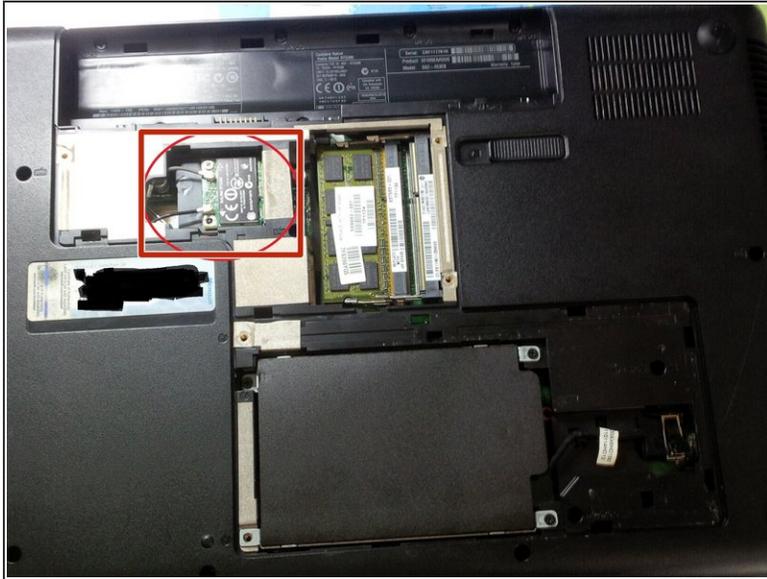


- Carefully remove the Wi-Fi antennas from the mini Pci-e adapter.
  - Note for reassembly: The black antenna attaches to 1 and the gray attaches to 2.
- ⓘ tip : Make a sketch of the laptop, where all the screws are, and how to put it back afterwards.
- Remove the mini Pci-e Wi-Fi adapter by removing the small screw. Lift the screw side gently, then pull out.

## Step 3

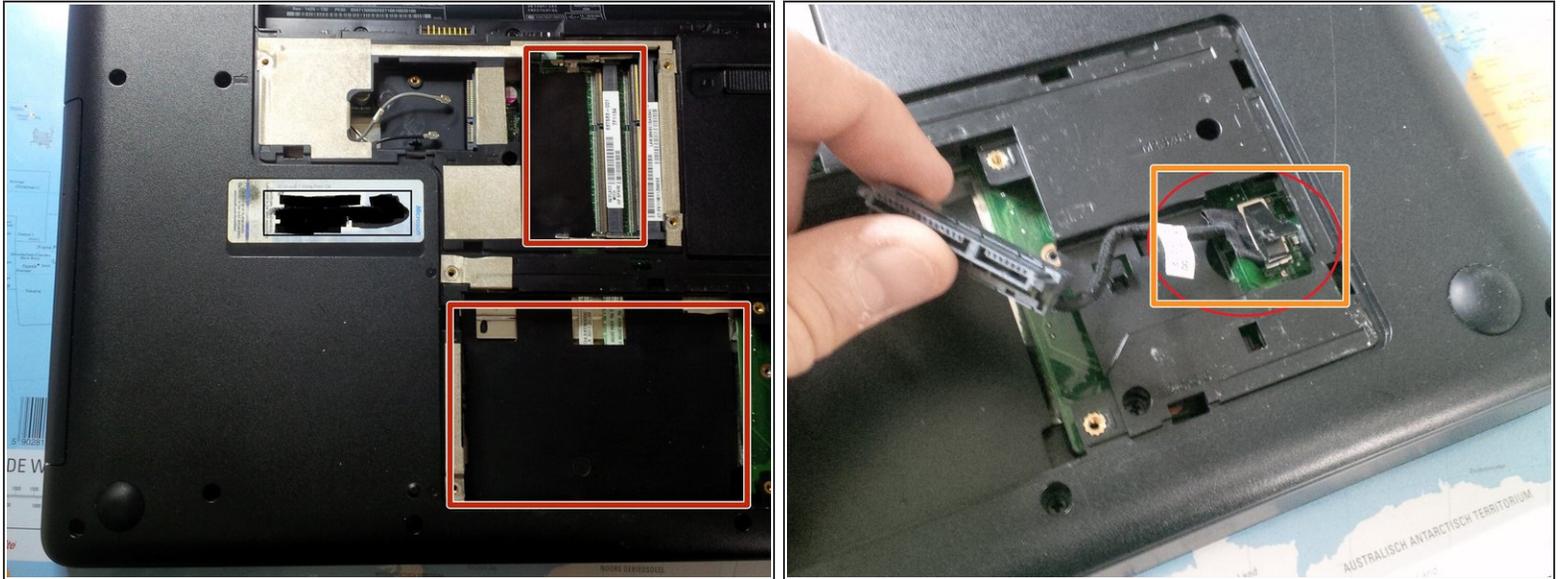


- Now remove the HDD and the RAM
  - Remove the HDD by removing the three screws and pulling the Sata connector from the motherboard.
  - Remove the RAM by pulling apart the clips on either side of the top stick. The stick should pop up, then pull it out. Repeat for the bottom stick.

## Step 4 — Keyboard Screws

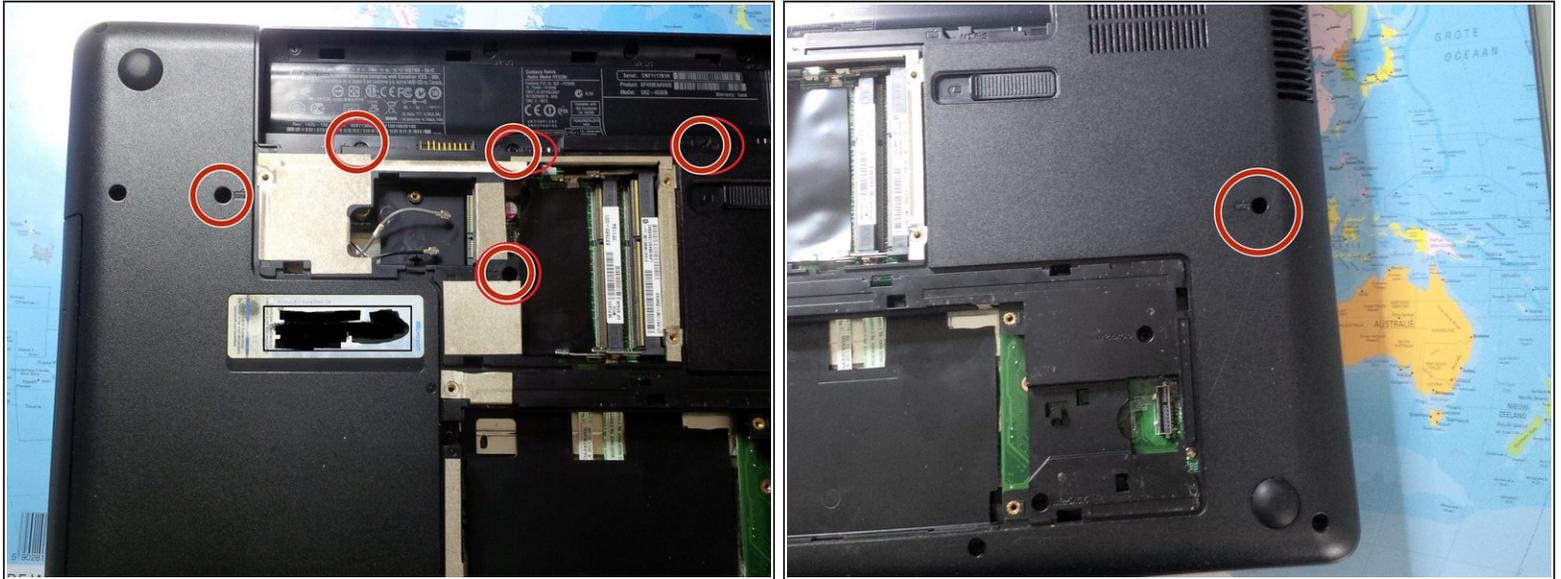

- Remove the 6 keyboard screws.

## Step 5 — DVD Drive Bay

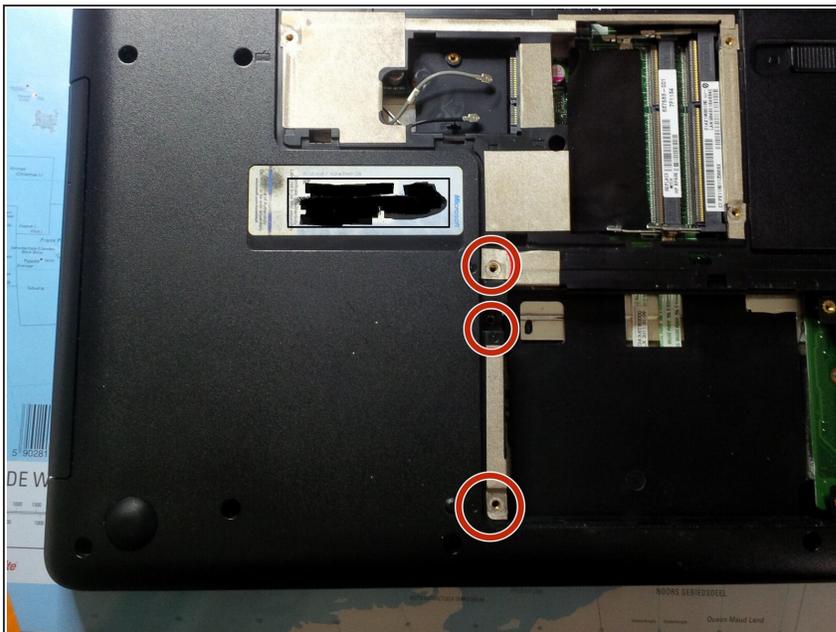

- Remove the DVD drive bay by prying a little spudger between the case and the drive cover. Then gently pull it out.
- ⓘ The screws should already be removed from the removal of the panel.

## Step 6 — Case Screws Pt. 1



- Next, we will remove the screws from the rest of the case.
  - Start by removing the screws hidden in the battery compartment (M2.5x3).

## Step 7 — Case Screws Pt. 2





- Now remove the 10 remaining case screws (M2.5x6.5).
  - There are 2 hidden screws in the HDD compartment (see last picture).

## Step 8




- After removing all the screws, we can remove the keyboard.
- ⚠ Be careful because you can break keys or the entire keyboard.
- Use a spudger to pry and search for the "locks"
- use your hand to gently remove the keyboard. You will here clicks.
- ⚠ Be careful for the thin connector under the keyboard.
- open the socket by clicking it up. pull the connector gently away from the socket.

## Step 9

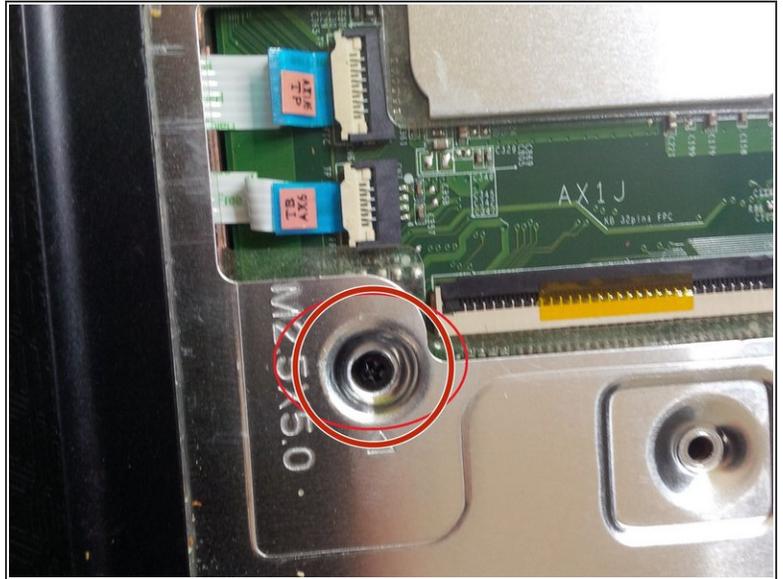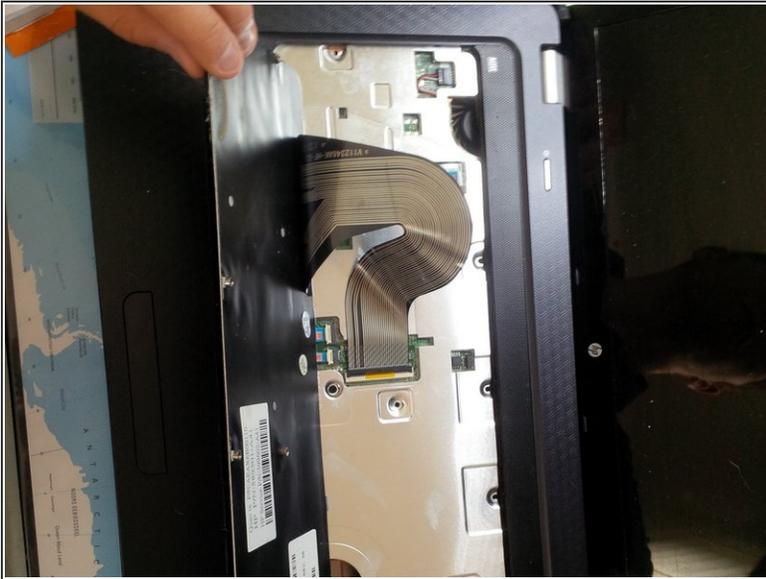


- There are hidden screws under the keyboard. Remove them. (M2.5x6.5)

## Step 10

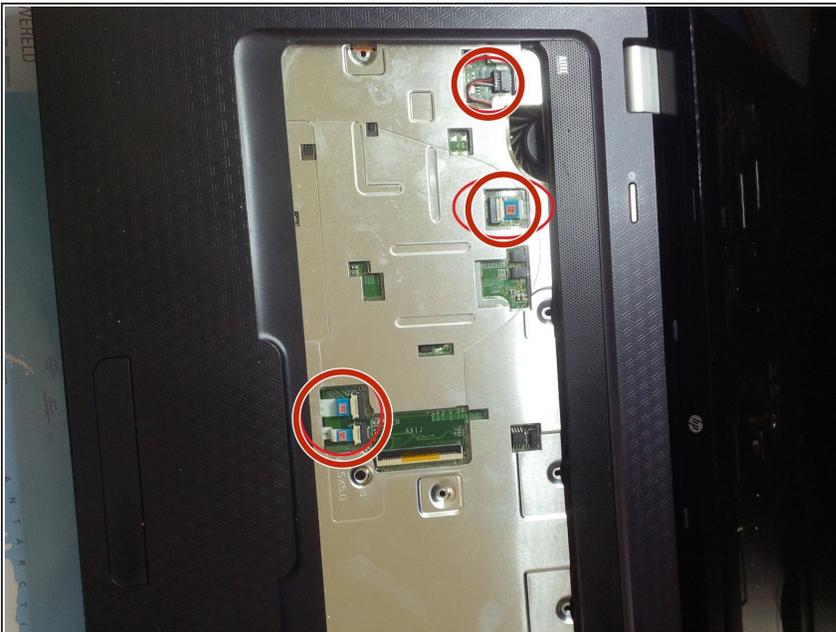


- remove all the visible connectors.
  - ⓘ the other connectors are from the power button and the mouse pad.

## Step 11

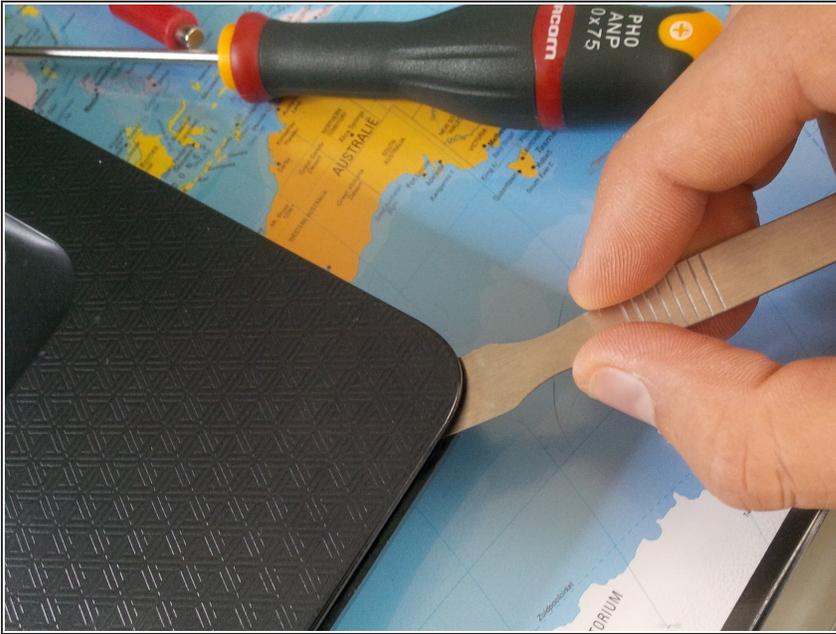


- Now gently remove the case with a spudger and a isesamo opener.
- Gently slide the spudger/opening tool to open the case.
- You will hear clicks.
- be careful for the connectors.

## Step 12

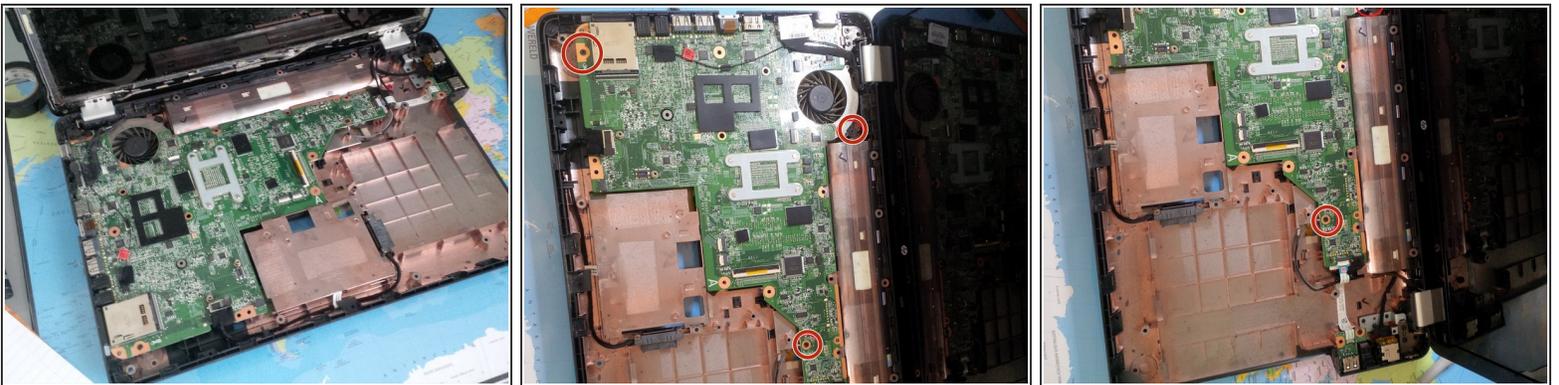


- After you've removed the case you will see the motherboard.
- Remove the screws from the motherboard.

## Step 13

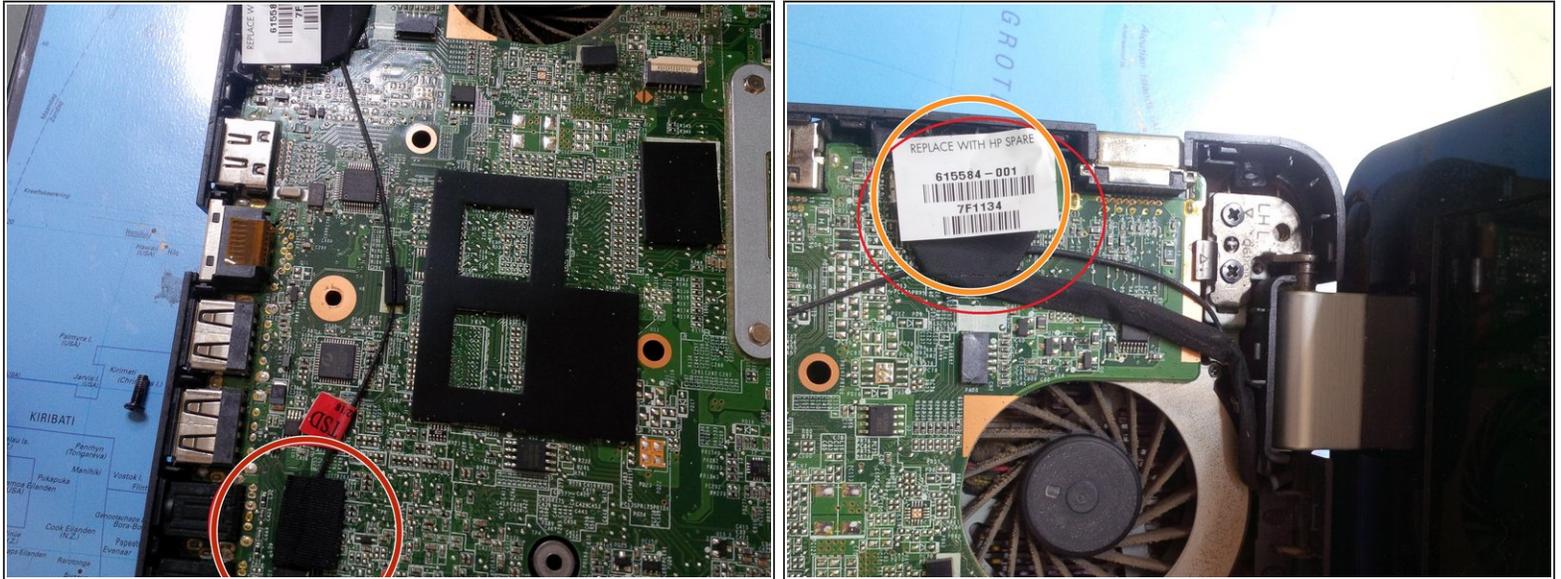


- remove the connectors of the screen.
- ⓘ be careful with the connector (the bigger of the two.) (With the HP SPARE sticker)
- Remove the sticker ( HP spare) And pull the connector out of the socket.
- ⓘ if you put back the screen and the connector afterwards , maybe you can tape the LCD cable to the motherboard with electrical tape. It will fit better then and you have less troubles with the screen.

## Step 14

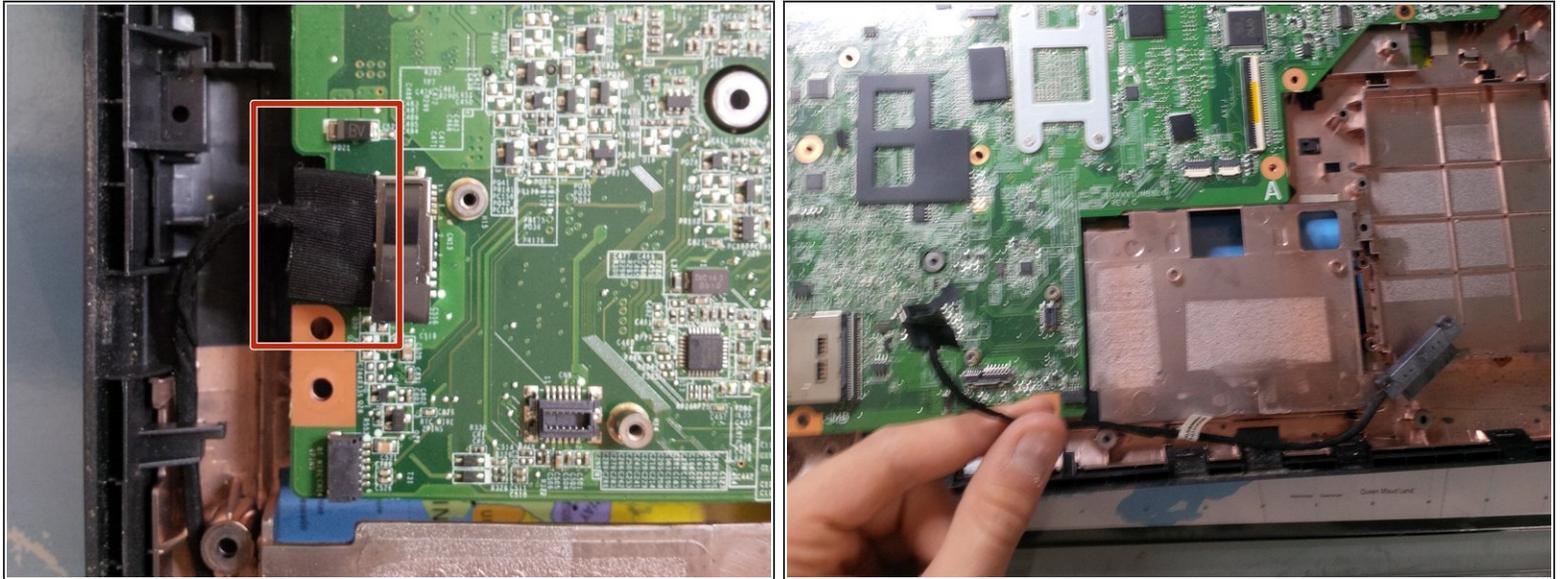


- now we will remove the sata dock from the dvd player.
- like the other connectors , just pull it out the socket. but be gentle.

## Step 15

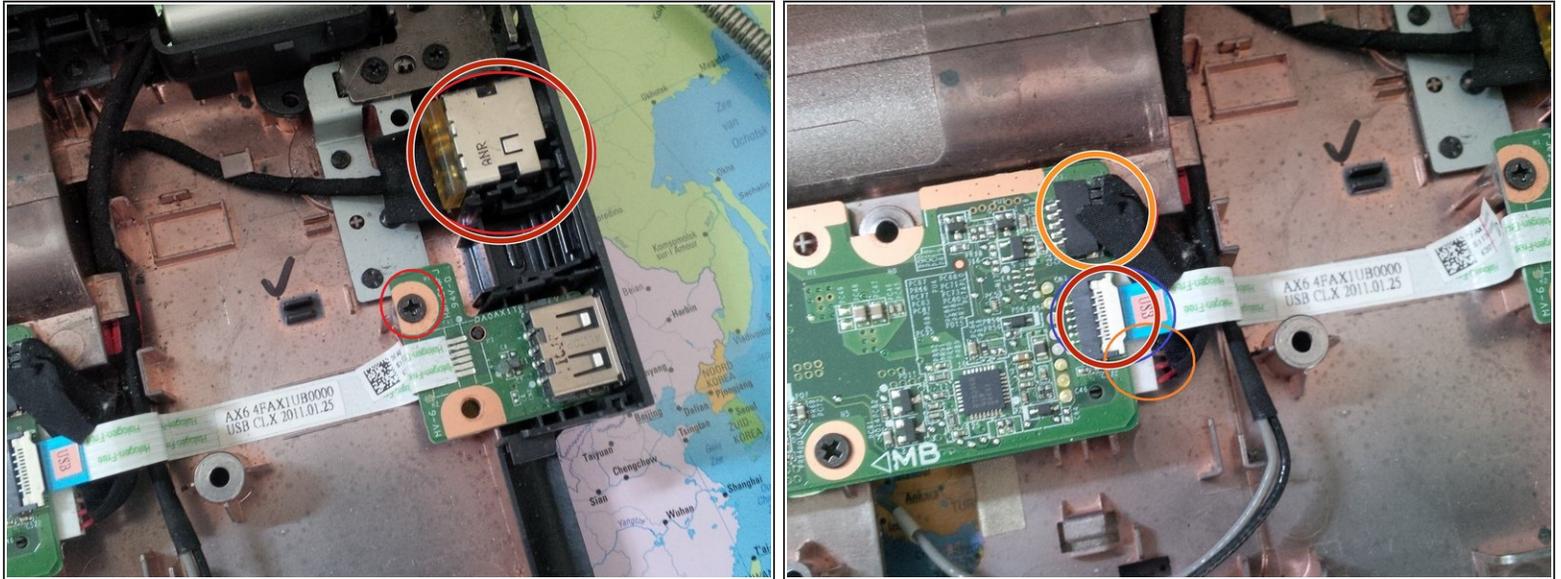

- now remove the usb connctor + the dc jack connector.
- you can remove the dc jack (head) by pulling it out (sliding). if it's loose, then you can remove the connector from the motherboard.
- if you remove the usb connector, be careful because the cable is taped to the case. pull gently

## Step 16

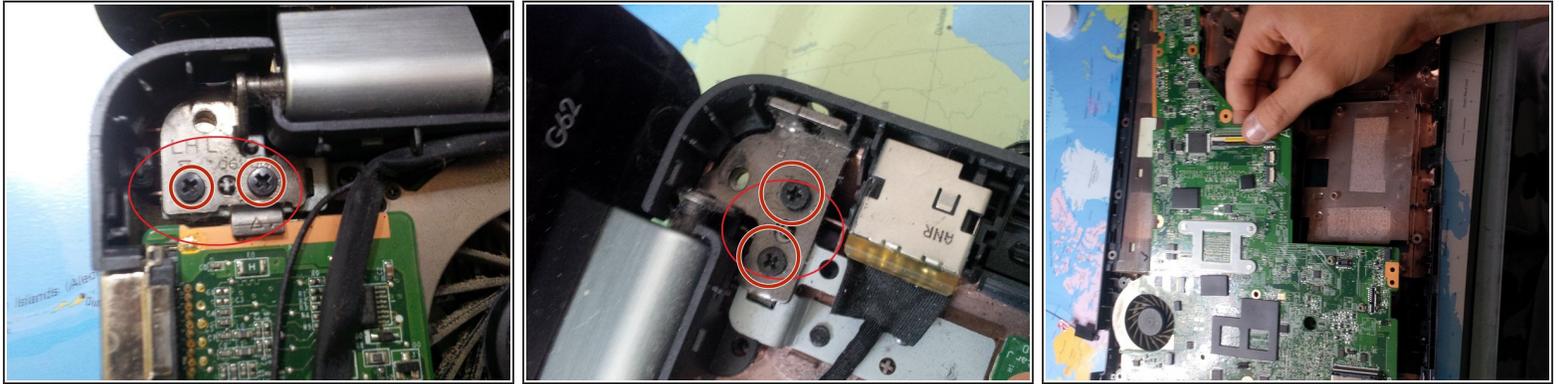


- after removing all the cables/ wires and screws, we can remove the screws from the screen hinges.
  - after removing the screws from the hinges, put the entire screen apart.
- we will remove the motherboard first. see picture 3. you can remove the motherboard by pulling it up and sliding it to the right.

## Step 17




- if you have to remove the LCD screen connector you have to remove the case around the screen. same thing if you have a broken screen..
- ⚠ be carefull if you remove the case around the screen. it's taped to the screen. i removed the case with an spudger. But first remove the 2 screws hidden under a black round sticker at the bottom of the screen, just above the grey hinges.
  - after removing the screws , slide the spudger around the case, you will hear the clicks

## Step 18

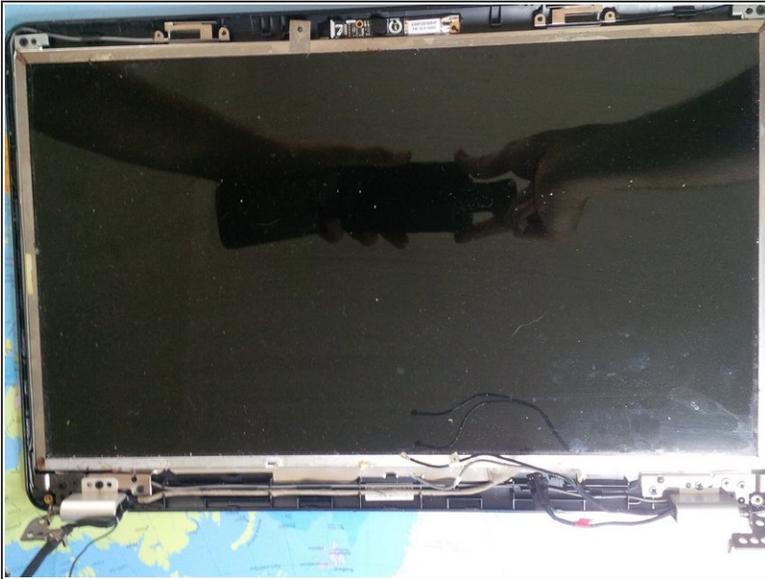

- after removing the case. this is the screen internal.
- above you will see the camera, the wifi antenna's . under you'll see the hinges and at the left the lcd connector.
- you can remove the grey plastic caps by removing the screw(s), under the plastic cap you will find the cables running trough..

## Step 19

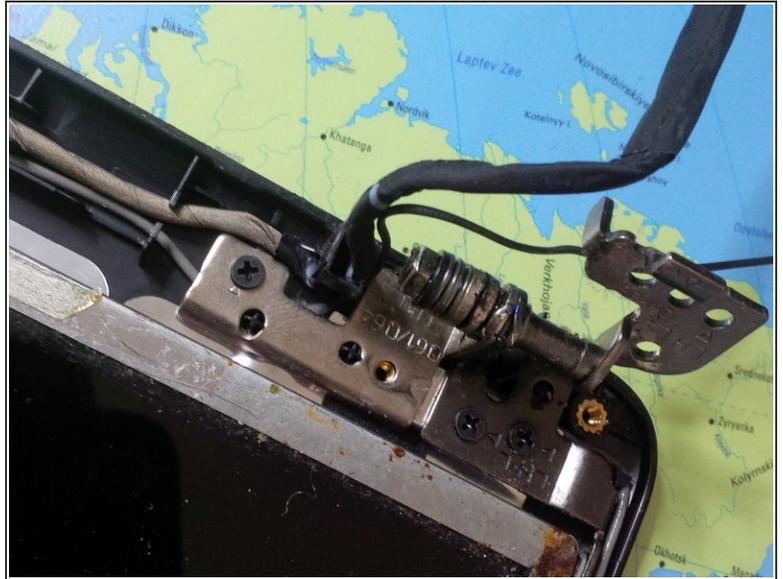

- you do the same thing at the other side.

⚠ if you remove, or going to remove the screen, be careful with the cables, most of them are taped to the case or screen.

- At the second picture you see the wires after removing the plastic grey cap. if you have problems with screen failure ( like a black screen or bad connection) its best to check this cable first before buying a new one. The wires are sliding to the cap and sometimes they get cut.

## Step 20



- Now the last steps.. we will put some new coolpaste to the soldered CPU and GPU
- first remove the 4 screws of the cooling socket.
  - remove the socket, be carefull for the little power socket attached at the motherboard, running to the cooling fan.
- and than put some drop of cooling paste on the CPU/GPU

To reassemble your device, follow these instructions in reverse order.