



# Installing the Battery for a bObi Robotic Vacuum

How to properly install bObi's battery after initial purchase or in case of replacement.

Written By: Chelsea



---

## INTRODUCTION

How to properly install bObi's battery after initial purchase or in case of replacement.

---

### TOOLS:


- [Phillips #2 Screwdriver](#) (1)
-

## Step 1 — Battery



- Use a phillips head screwdriver to remove the two screws holding the battery cover down.
- Lift the battery cover up.

## Step 2

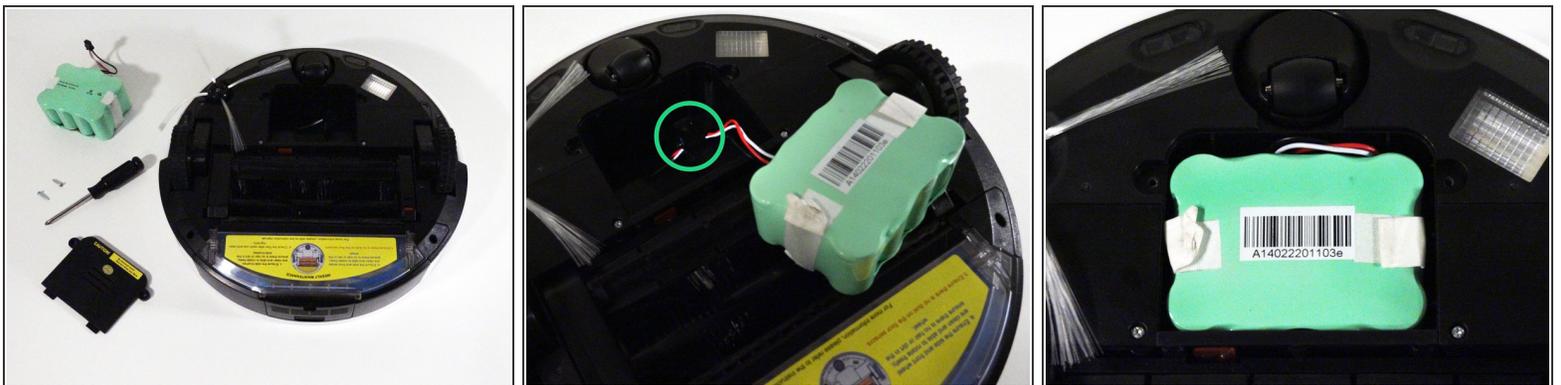

- Plug in the battery's circuit plug.
- Lower the battery into bObi.
- ⓘ Tuck the wire into the side of the battery. do not push it underneath the battery itself.

### Step 3



- When both are lowered into the compartment, replace the battery cover. Ensure it lies flat overtop the battery.
- Reinstall the two screws to finish assembling bObi's battery.