



Disassembling HP Officejet J3680 Rear Plastic Panel

This guide will show the users of an HP Officejet J3680 how to remove the rear plastic panel to access the interior of the device. The removal of this panel is necessary for replacing failed components on this device. Prerequisite Only

Written By: Evan





TOOLS:


- [T10 Torx Screwdriver](#) (1)
-

Step 1 — Unplug the Device




- Remove the plug from the outlet and from the back of the device
- Remove the USB Cable from your computer and from the back of the device.

Step 2 — Remove Screws From Under the Control Panel

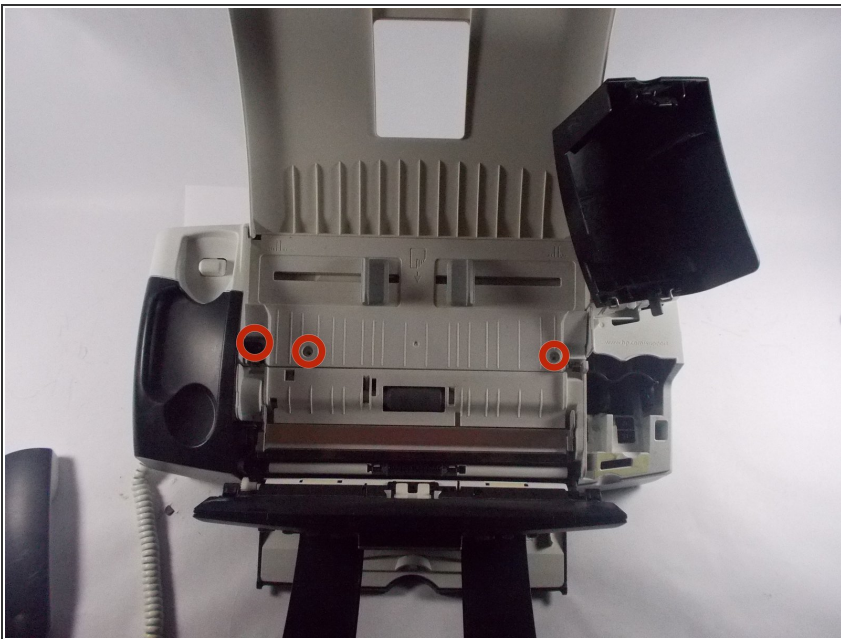

- Using your Torx T10 screwdriver, remove the screws indicated in the picture. Screws are 13mm in length.

Step 3 — Remove Screws Underneath the Ink Cartridge Cover

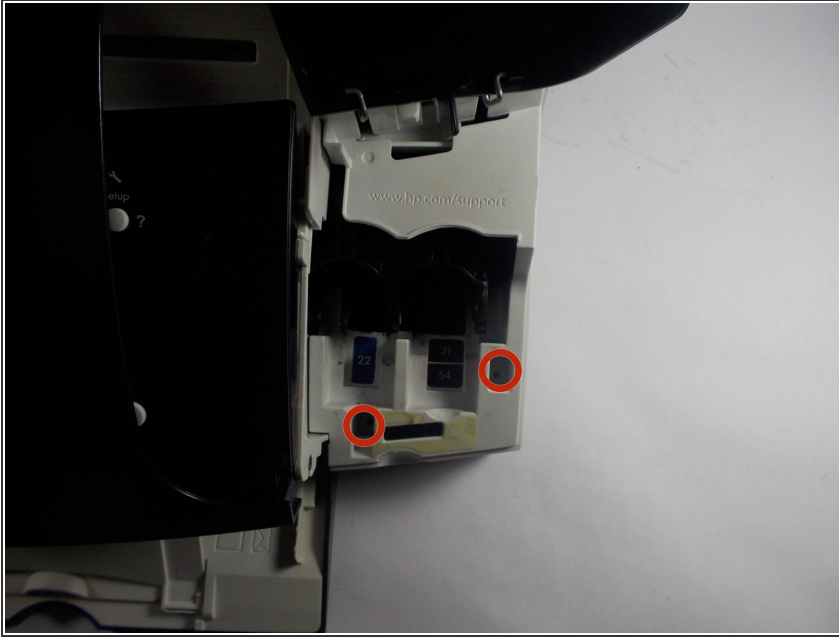


- Using your Torx T10 screwdriver, remove the screws indicated in the picture. Screws are 13mm in length

Step 4 — Remove Screws from Underneath the Phone Panel




- In step 2, you removed the screw from the blue indicated area.
- Gently pop off the black cover that the phone rests on. Underneath this cover, you will find two more screws.
- Using your Torx T10 screwdriver, remove the screws indicated in the picture. Screws are 13mm in length

Step 5 — Remove the Screws from the Rear of Device

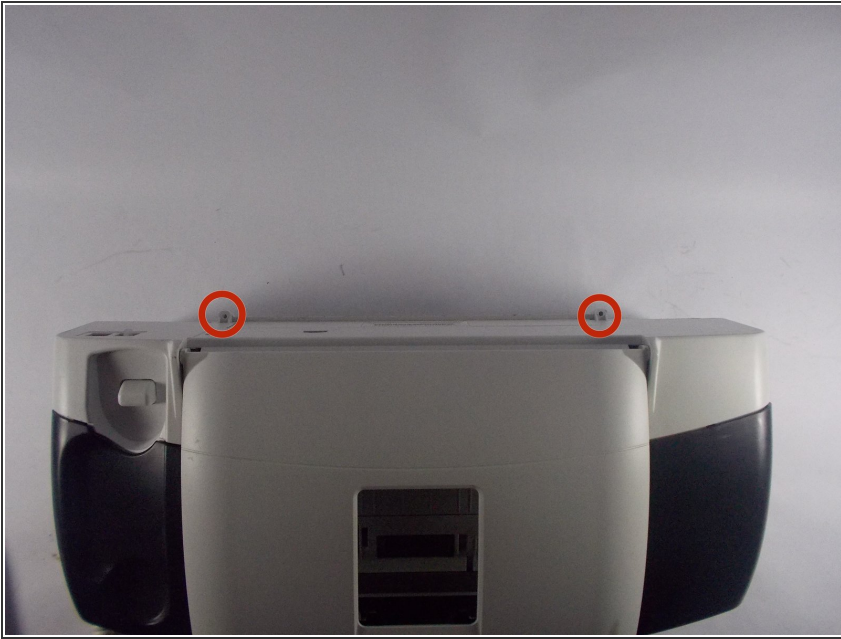

- Using your Torx T10 screwdriver, remove the screws indicated in the picture. Screws are 13mm in length.

Step 6 — Remove Rear Plastic Panel

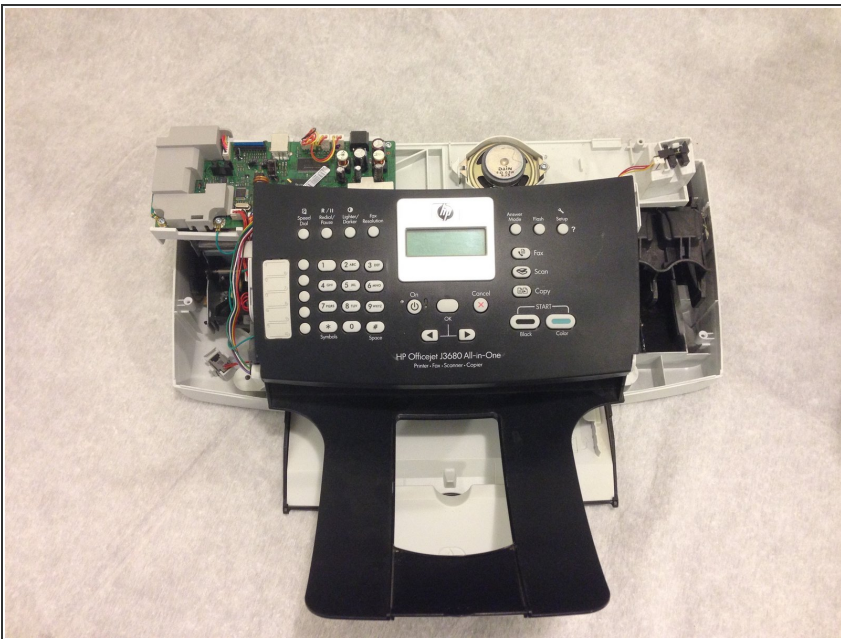

- Once the rear plastic panel has been removed, you are ready to replace and repair the necessary parts.

To reassemble your device, follow these instructions in reverse order.