

Alcatel One Touch Fierce Rear Facing Camera Replacement

Use this guide to replace the rear facing...

Written By: Cody Stouffer



INTRODUCTION

Use this guide to replace the rear facing camera on your Alcatel One Touch Fierce.

TOOLS:


iFixit Opening Tool (1) Phillips #000 Screwdriver (1) Tweezers (1)

Step 1 — Rear Case



- Pry with a plastic opening tool, or your fingernail, in the divot at the bottom left corner of the phone.
- Lift the rear case by the corner nearest the divot and remove it from the phone.

Step 2 — Midframe

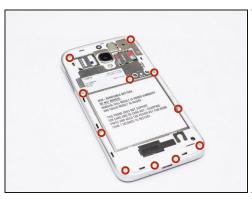





- Remove the 11 Phillips #000 screws.
- The midframe should lift free.

Step 3 — **Rear Facing Camera**





• Use a pair of <u>tweezers</u> to gently disconnect the camera connector and remove the rear facing camera.

To reassemble your device, follow these instructions in reverse order.