



HP Deskjet 3000 j310a Repair Printer Cover Replacement

This guide will show how to take the cover of the printer off, including the outer black cover and the inner red cover.

Written By: tdambruoso



INTRODUCTION

This guide is simple, and a prerequisite to all other repairs made to the printer. Taking off the cover allows access to all parts.

TOOLS:

- [T8 Torx Screwdriver](#) (1)
-

Step 1 — Disconnect Printer



- Begin to disassemble the printer by disconnecting from all power sources and computers. Keep cords separate and allow the printer to cool for 5 minutes.

Step 2 — Remove Bottom Cover



- Flip the printer upside down and locate the cover on the left hand side. It is rectangular shape and is


held in place by two screws.
Unscrew these screws and take off cover.

Step 3 — Release Paper Output Tray




- To release the tray from the printer, you must manually pull it out. Hold the tray and push towards one side of the printer. Then pull away from the printer towards the other side. Keep output tray separate.

Step 4 — Unscrew Cover

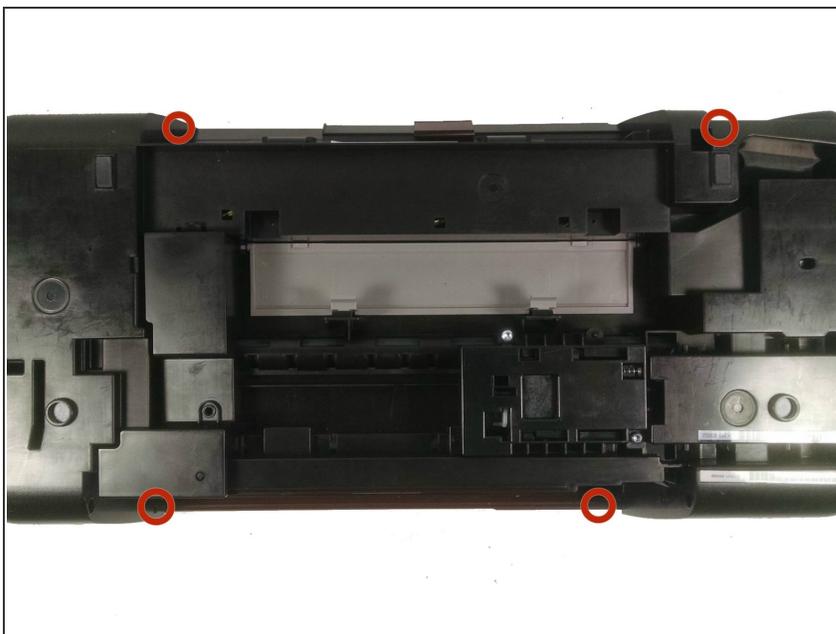

- Turn the printer upside down. Locate the four screws holding the cover in place. These will be on the edges of the cover.

Step 5

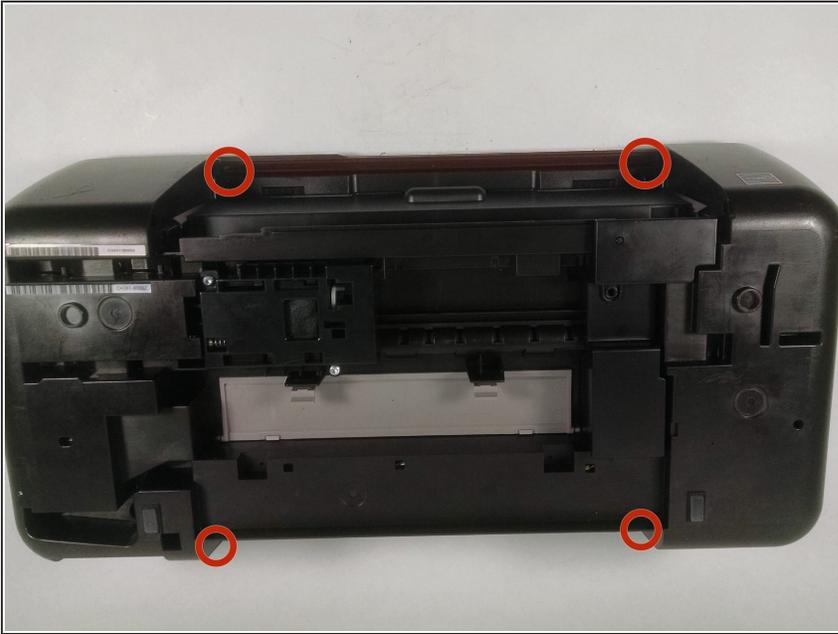

- Unscrew the four screws, keeping them separate. Turn the printer back right side up



Step 6 — Pull Off Top



- Place fingers on the edge of the red cover. Begin to pull upwards to release the top portion, working your

way around the printer. Make sure that it does not fall back into place.

Step 7 — Disconnect Cover

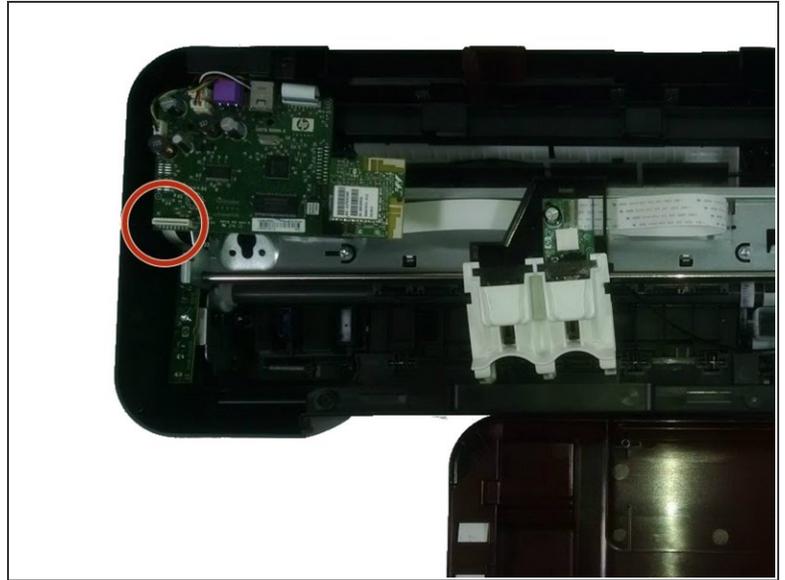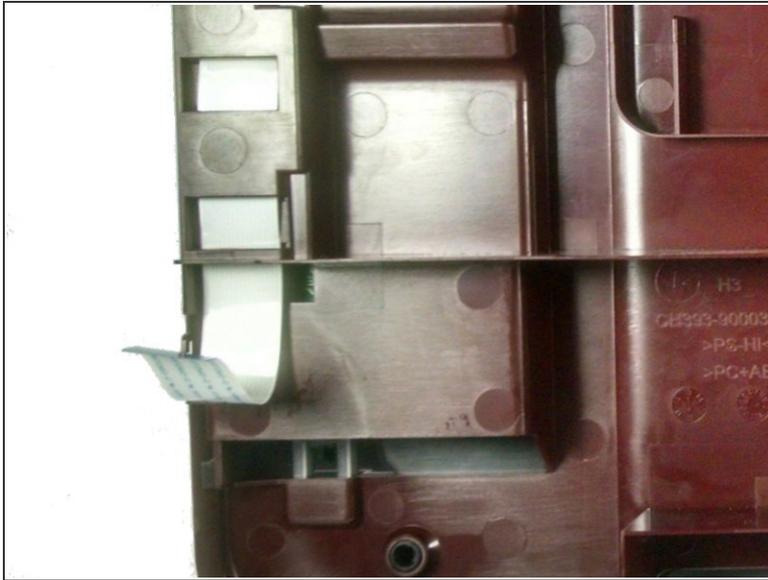

- Once the top is loose, there will still be a connection wire between the printer and the cover. This wire will be about one inch wide and white, located under the buttons.

Step 8



- Detach the wire from the printer by pulling the blue-sealed end from the white holder.

To reassemble your device, follow these instructions in reverse order.