



Hard Disk Drive / Solid State Drive Replacement

This will guide you in replacing the Hard Disk Drive / Solid State Drive of a Sony Vaio VPCF132FX

Written By: trickster





TOOLS:

- [Pro Tech Toolkit](#) (1)
-

Step 1 — Battery



- Remove all wires then flip the laptop

Step 2




- Remove the battery

Step 3 — Hard Disk Drive / Solid State Drive



- Remove the screws.
- Slide the HD cover outward then lift.

Step 4

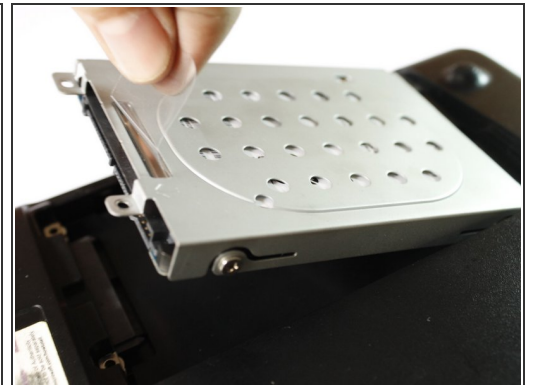

- Remove the screws.
- Slide to where the arrow points to unlock the HD.

⚠ Hold it at the side. Never touch the circuits.

Step 5



- Remove the 4 screws at the side and remove the HDD/SSD

To reassemble your device, follow these instructions in reverse order.