




HP ZBook 15 4G Network Module Replacement

This guide will demonstrate how to replace a broken 4G network module.

Written By: Grant Terris

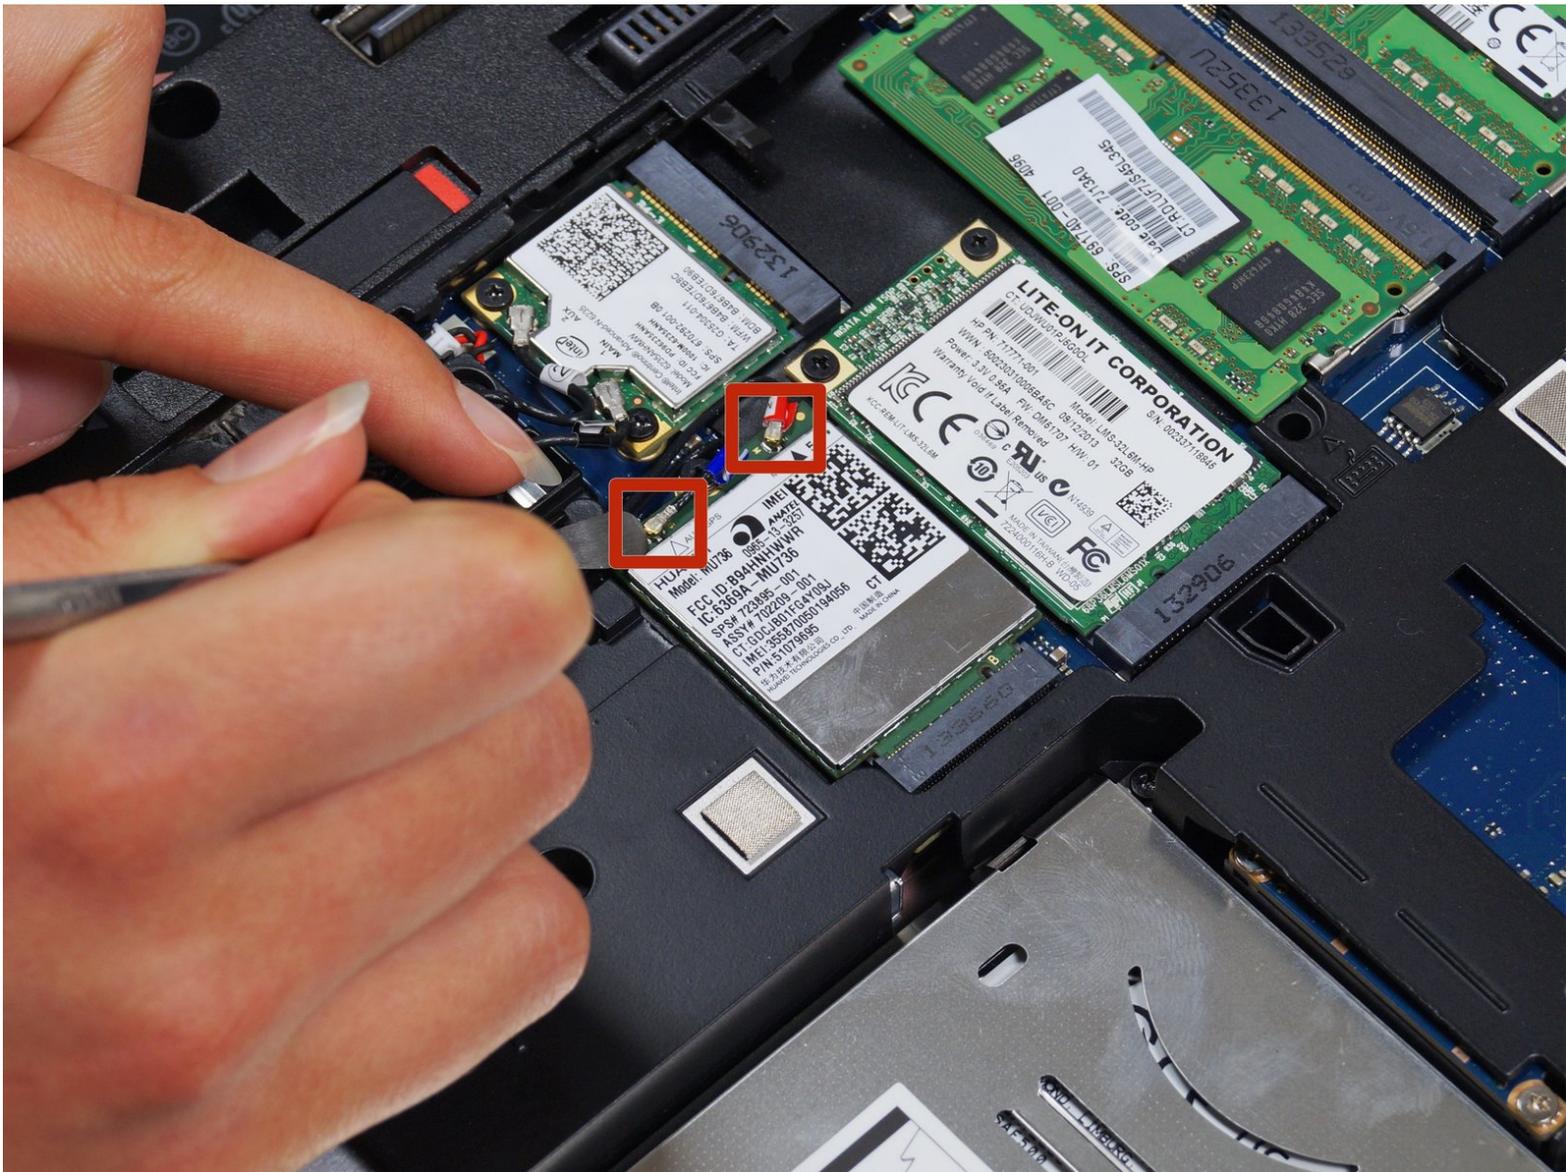

INTRODUCTION

The ZBook 15 comes with a 4G wireless network module that allows you to connect to the internet via a SIM card provided by a wireless network company. If you need to replace the 4G network module on your laptop, follow this guide!

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
-

Step 1 — Battery




- Flip the laptop over.
- Slide the lever with the battery symbol beside it firmly until the battery pops out.
- Remove the battery from the laptop.

Step 2 — Back Cover





- Slide the right lever firmly to the right.
- Slide the cover towards yourself to remove it.

Step 3 — 4G Network Module

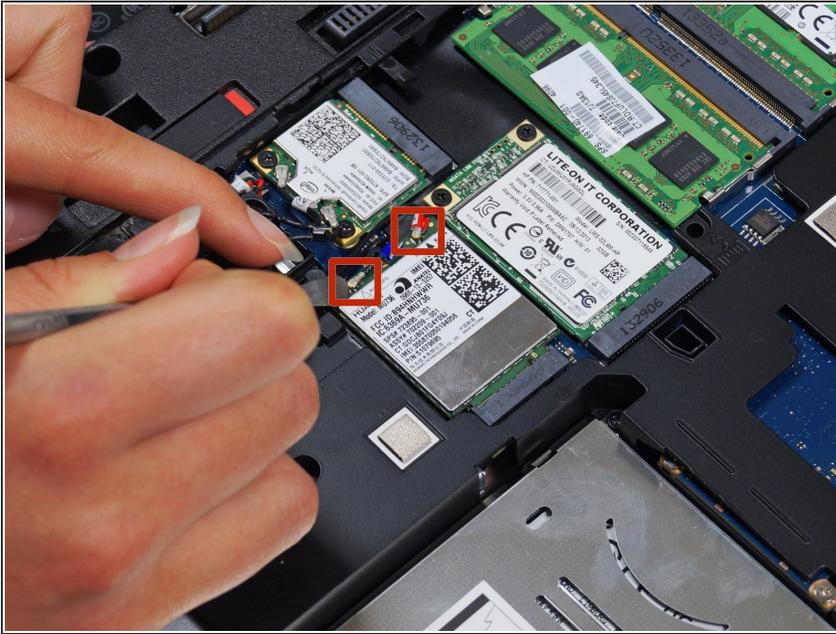

- Remove the two connectors by lifting gently with a metal spudger.

Step 4

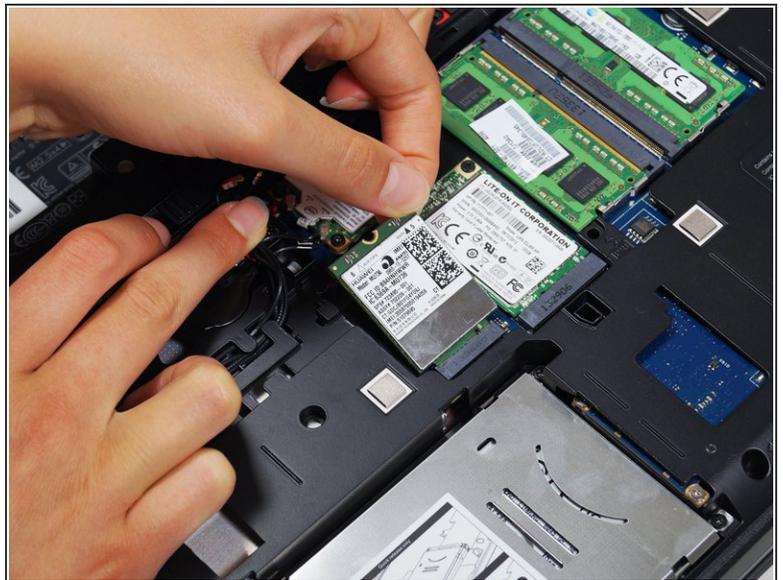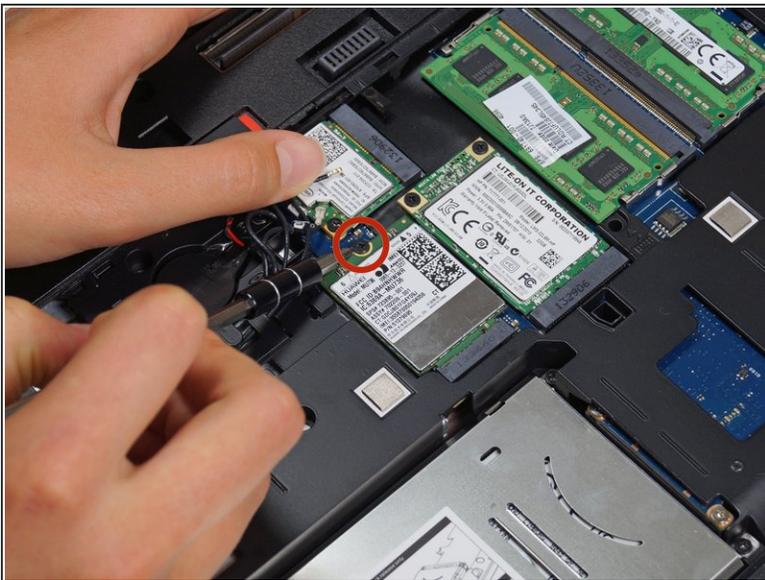

- Remove the 3mm screw with a Phillips #0 screwdriver.
- Remove the 4G Module by lifting up and out.

To reassemble your device, follow these instructions in reverse order.