


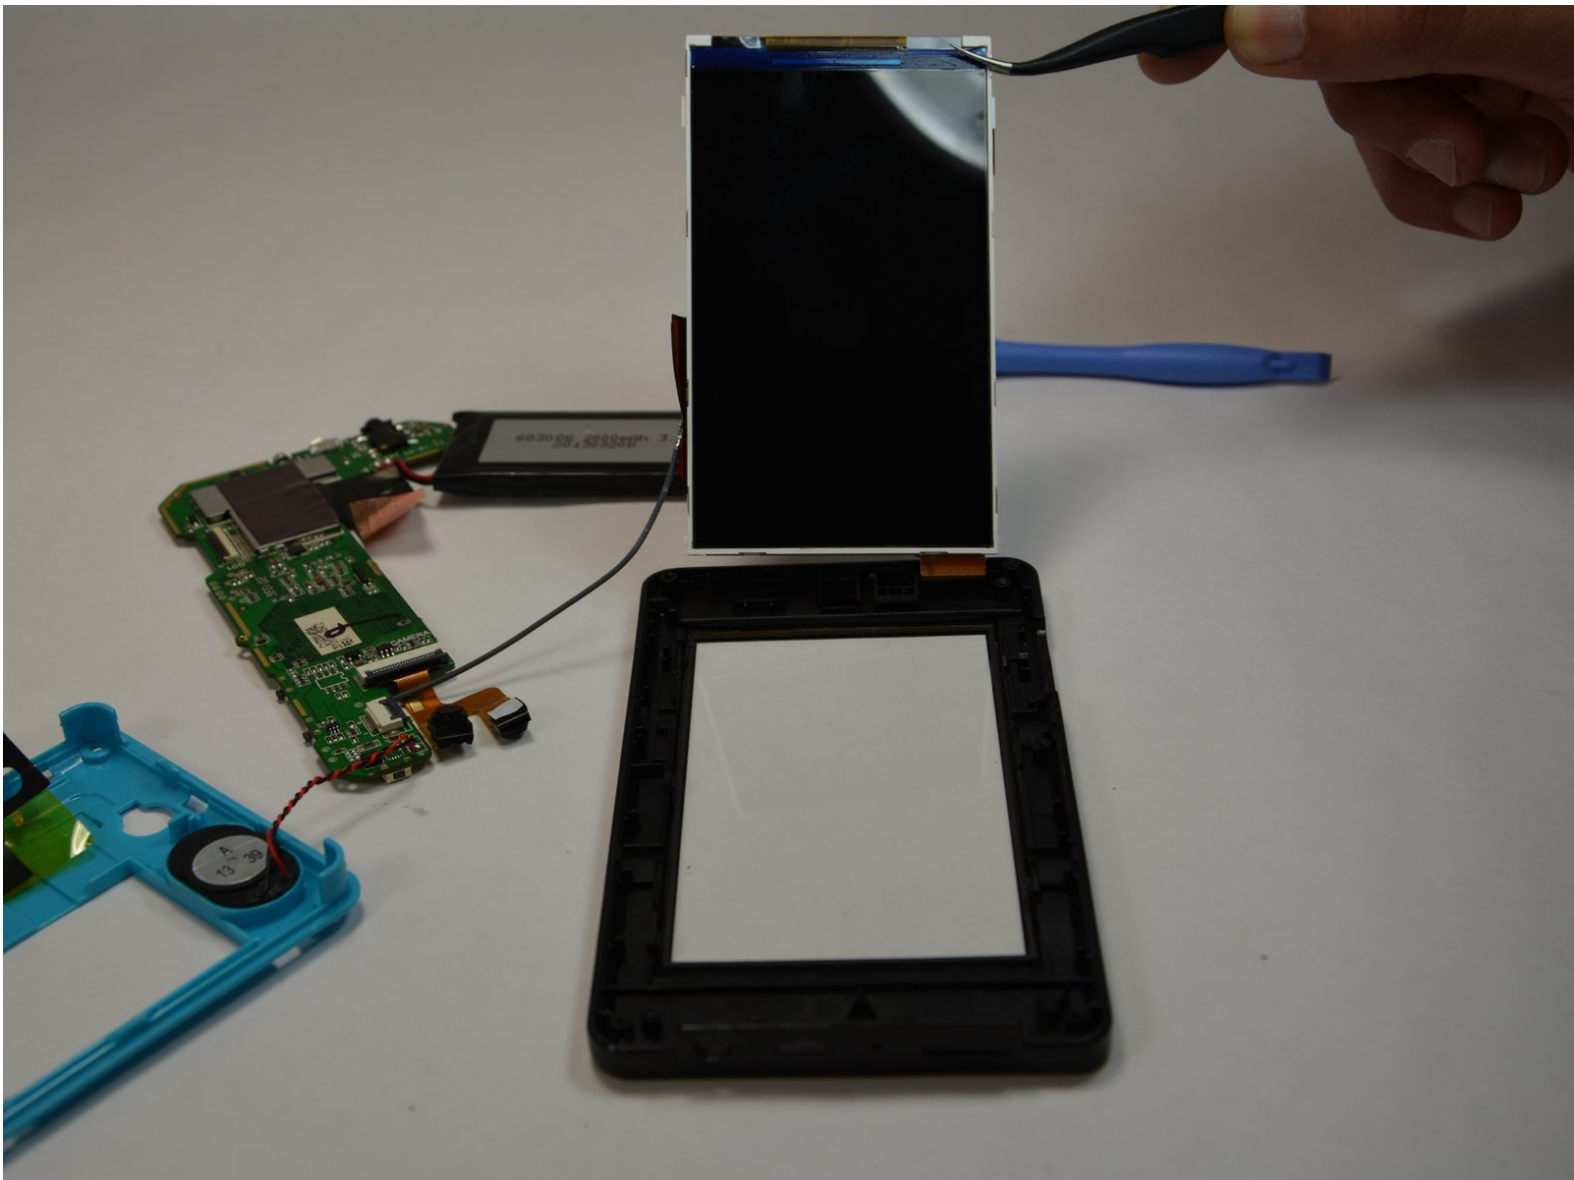

Kurio Touch 4S Screen Replacement

This guides will show you how you replace your screen.

Written By: Ali



INTRODUCTION

This guide will show you how to replace your broken screen.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [Soldering Iron](#) (1)
-

Step 1 — Screen



- Make sure to open the back cover easily using the plastic opening tool

Step 2



- Remove back cover by prying away from the Kurio.
- ⓘ The easiest place to remove the cover is from the bottom and top; try to open it from right to left sides.

Step 3




- To remove the battery, make sure the four 5mm Phillips screws on each side of your device is open using the Phillips#1 Screwdriver.

Step 4



- After you remove your four 5mm Phillips screws, use your plastic opening tool to help you open the plastic cover of your device.
- ⓘ All these screws are identical so don't worry if you get them out of order.

Step 5

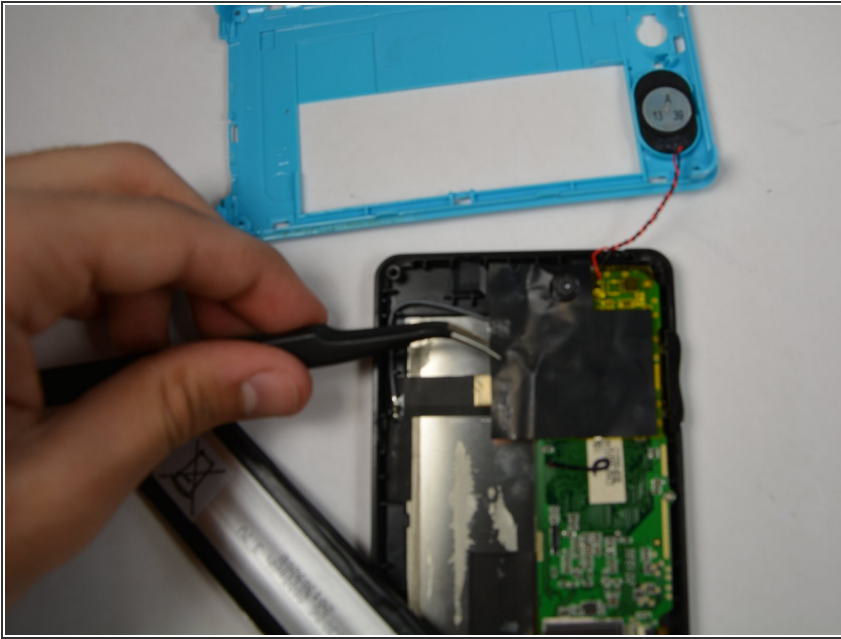


- Remove the plastic cover that is covering the camera area.

Step 6



- Separate the two halves of your Kurio Touch 4S and lay them besides each other.

Step 7

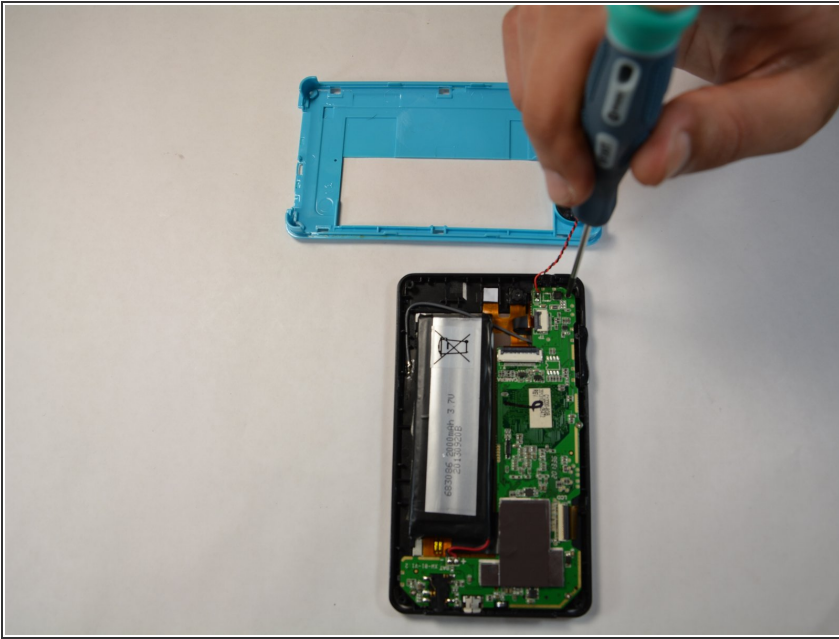

- Use Phillips # 1 screw to open the 4 screws on the motherboard.
- ⓘ Open the screws gently and do not apply too much force as you could damage the motherboard.

Step 8




- Use the plastic opener to remove the battery.

Step 9



- Use tweezers to remove the black tape that is attached to the motherboard.

Step 10

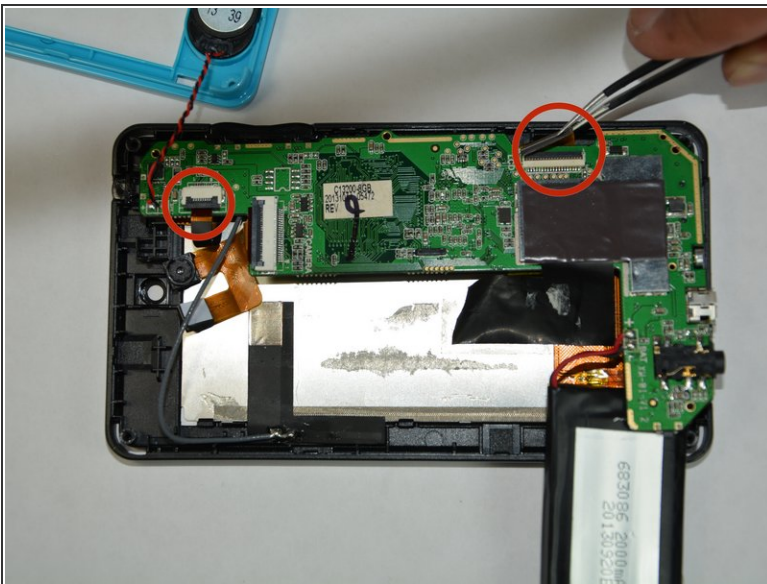


- Detach all the wire that are connected to the motherboard.
- Also remove the camera module and other components that are attached to the motherboard.
- ⓘ For more information on soldering [Click here](#)

Step 11




- Remove the motherboard with the help of plastic opener.
- ⓘ Detach the power plug before you remove the motherboard.

Step 12

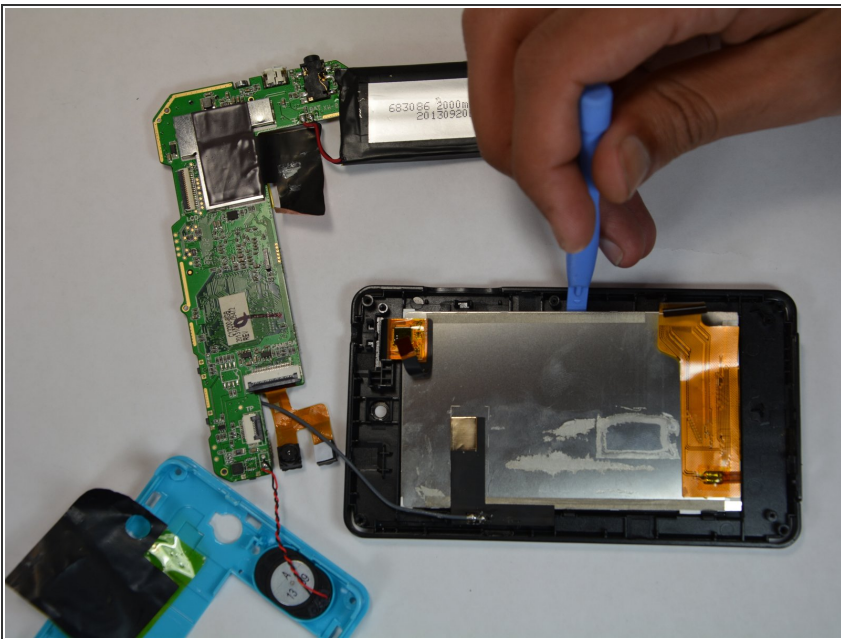

- Use the Plastic opener to remove the screen.
- ⚠ Do not apply too much pressure as the front cover could be damaged.

Step 13

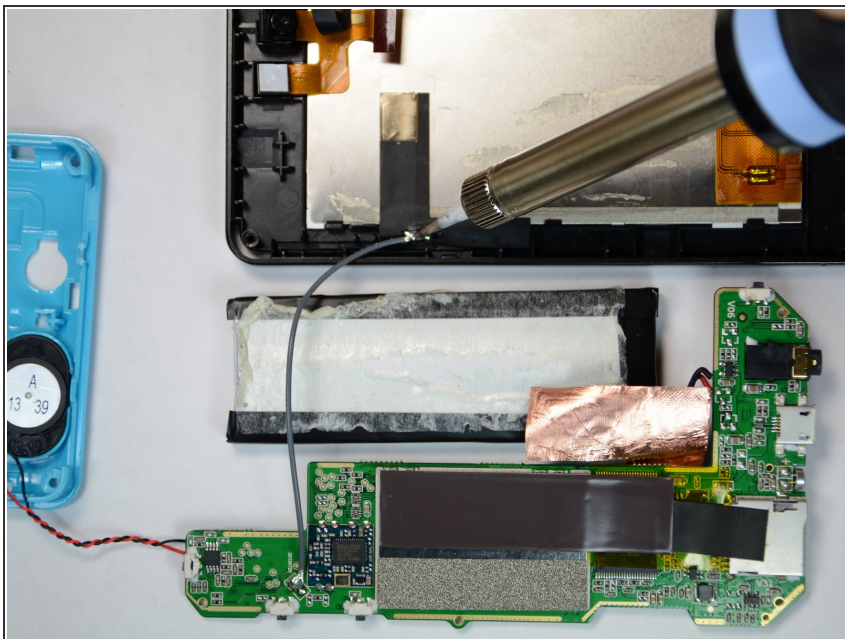

- Use the soldering tool to remove the wire that is attached to the screen & the motherboard.

Step 14



- Use tweezers to remove the screen from your Kurio Toich 4S.

To reassemble your device, follow these instructions in reverse order.