



Lenovo Thinkpad T500 Trackpad Buttons Replacement

Written By: nicO Gurney






TOOLS:

Tournevis cruciforme #0 (1)

Spudger (spatule antistatique) (1)

Step 1 — Trackpad Buttons

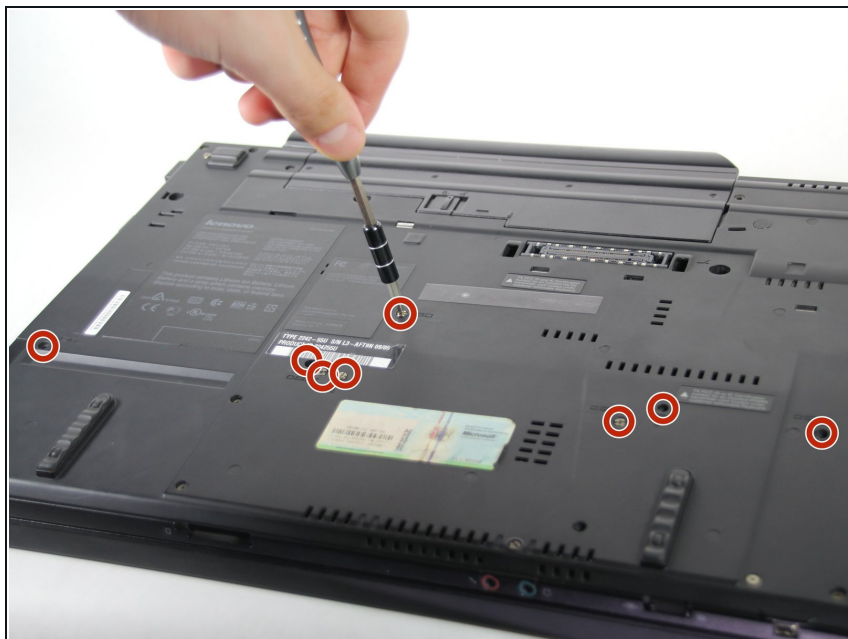

- Remove the eight 14mm screws using the Phillips #0 Screwdriver.


Step 2



- Lift the palm rest panel up.


⚠ Be sure to lift the panel **slowly**; there is a ribbon cable attached to the bottom.

Step 3

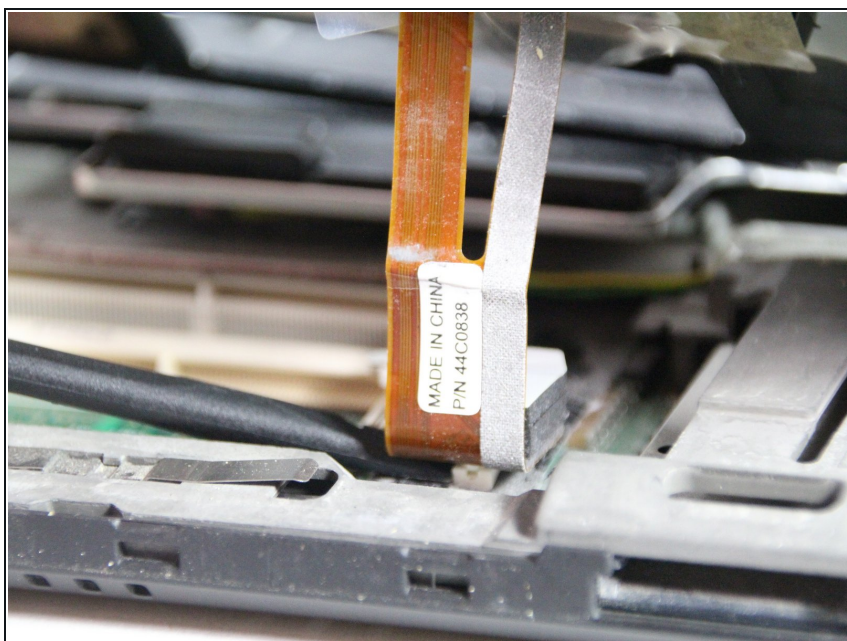


- Use the spudger to disconnect the ribbon cable.

Step 4

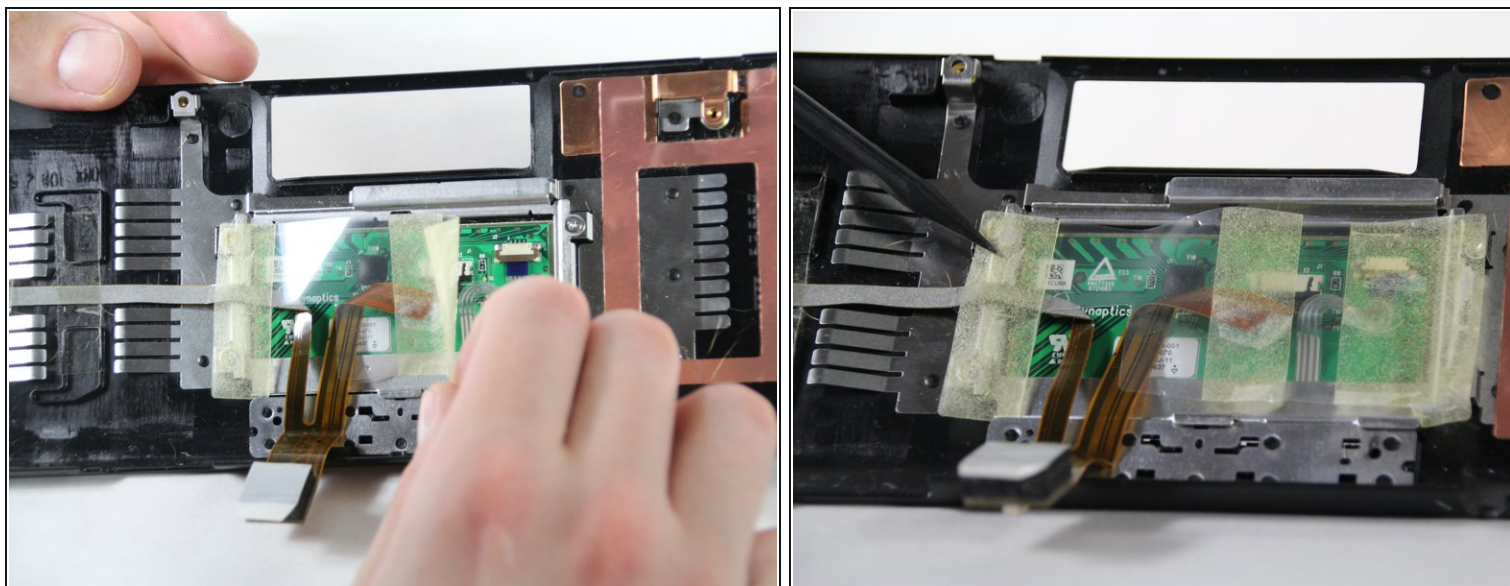



- Remove the tape, using the spudger if necessary.

Step 5

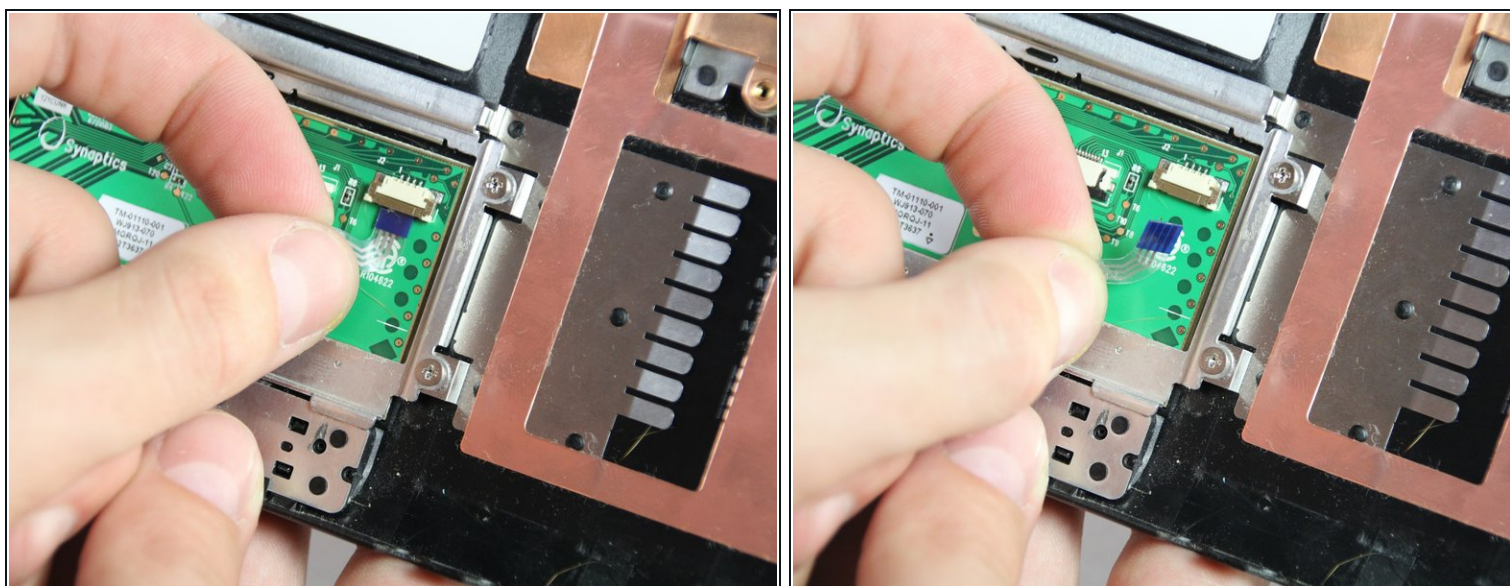



- Disconnect the clear ribbon cable.

Step 6

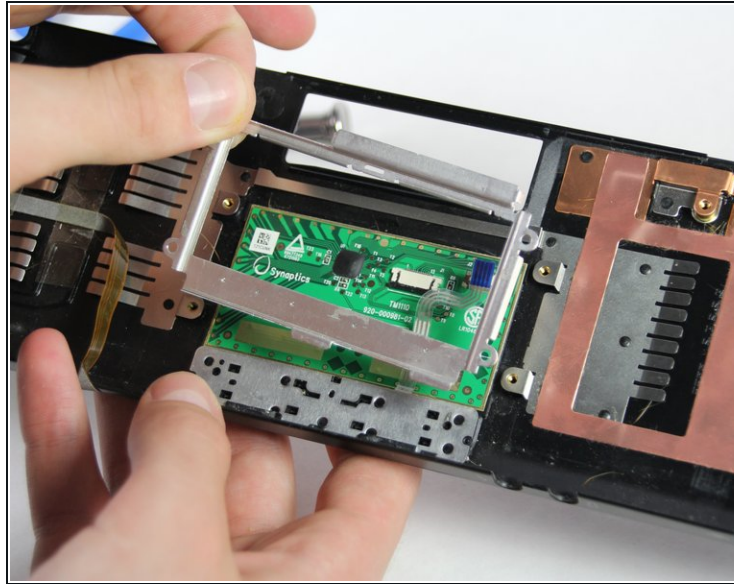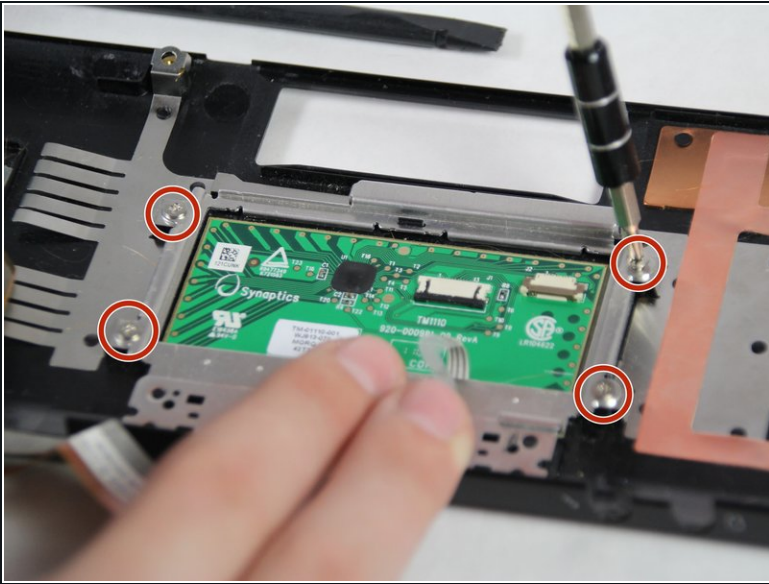

- Use the Phillips #0 Screwdriver to remove the screws of the frame around the trackpad circuit board.

Step 7

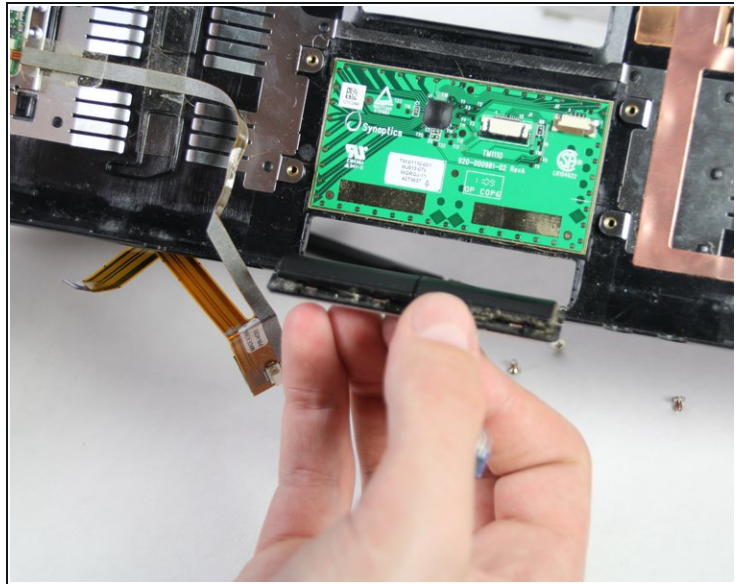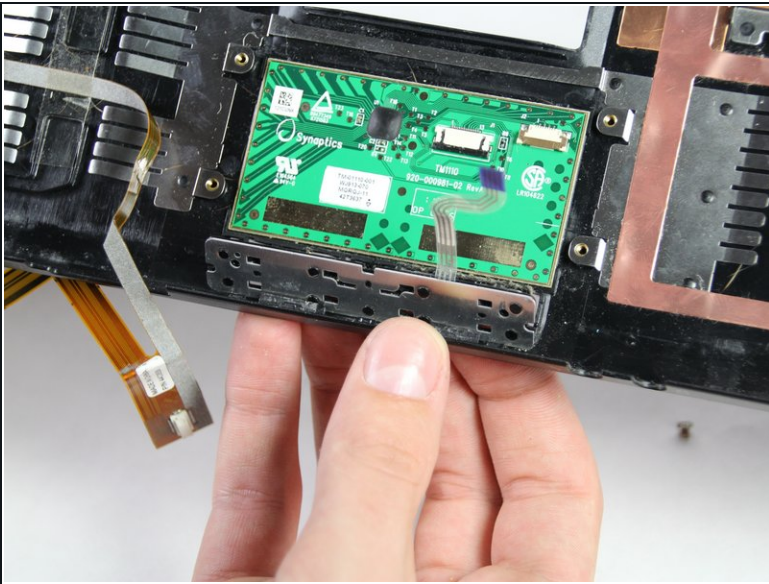

- Remove the trackpad buttons.

To reassemble your device, follow these instructions in reverse order.

