



Asus G74SX-BBK7 Optical Drive Replacement

This guide will show you the steps to replace your optical drive.

Written By: Ryan Lawrence



INTRODUCTION

This guide will teach you how to replace the optical drive in your Asus. An optical drive is responsible for reading media discs like CDs and DVDs, so knowing how to replace it is important. If your computer won't properly read discs or is not functioning, you may need to replace the optical drive. This guide will give you the tools to do so.



TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)



PARTS:


- [Asus G74SX-BBK8 Optical Drive](#) (1)

Step 1 — Optical Drive



- Using a flathead screwdriver, spudger, or large coin such as a quarter, remove the 13mm screw on the bottom of the laptop.
- Take off the back panel.

Step 2

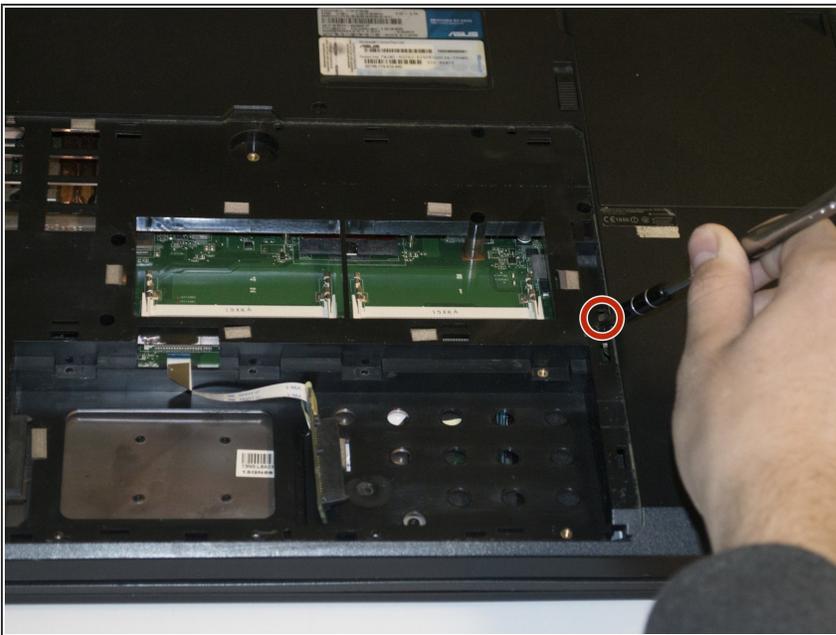

- Now, unscrew and remove the 6mm Phillips #0 screw next to the optical drive.

Step 3



- Lastly, use a plastic opening tool to remove the optical drive from its slot.

To reassemble your device, follow these instructions in reverse order.