



# MacBook Core 2 Duo Memory Cover Replacement

Written By: iRobot



# INTRODUCTION

This keeps the RAM levers out of the way of the battery and secures the hard drive.



## TOOLS:

- [Coin](#) (1)
- [Phillips #00 Screwdriver](#) (1)



## PARTS:


- [MacBook Memory Cover](#) (1)

## Step 1 — Battery



- Use a coin or spudger to rotate the battery-locking screw 90 degrees clockwise.

## Step 2

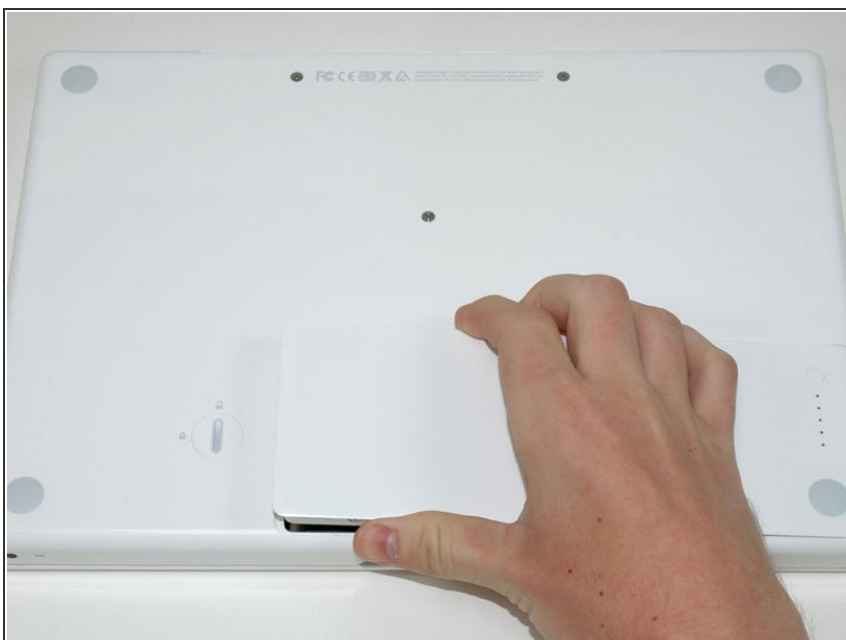

- Lift the battery out of the computer.

## Step 3 — Memory Cover



- Unscrew the three evenly-spaced Phillips screws from along the rear wall of the battery compartment.
- ★ The screws are captive to the metal memory cover so you cannot lose them.
- i Using The Flexible Extension sold by iFixit will help with this step.

## Step 4



- Grasp the right end of the L-shaped memory cover, then pull it towards you so it clears the battery compartment opening.
- Lift the memory cover up and out of the computer.

To reassemble your device, follow these instructions in reverse order.