




Digital2 D2-912 Screen Replacement

To replace the screen of the tablet.

Written By: Lindsay Richardson

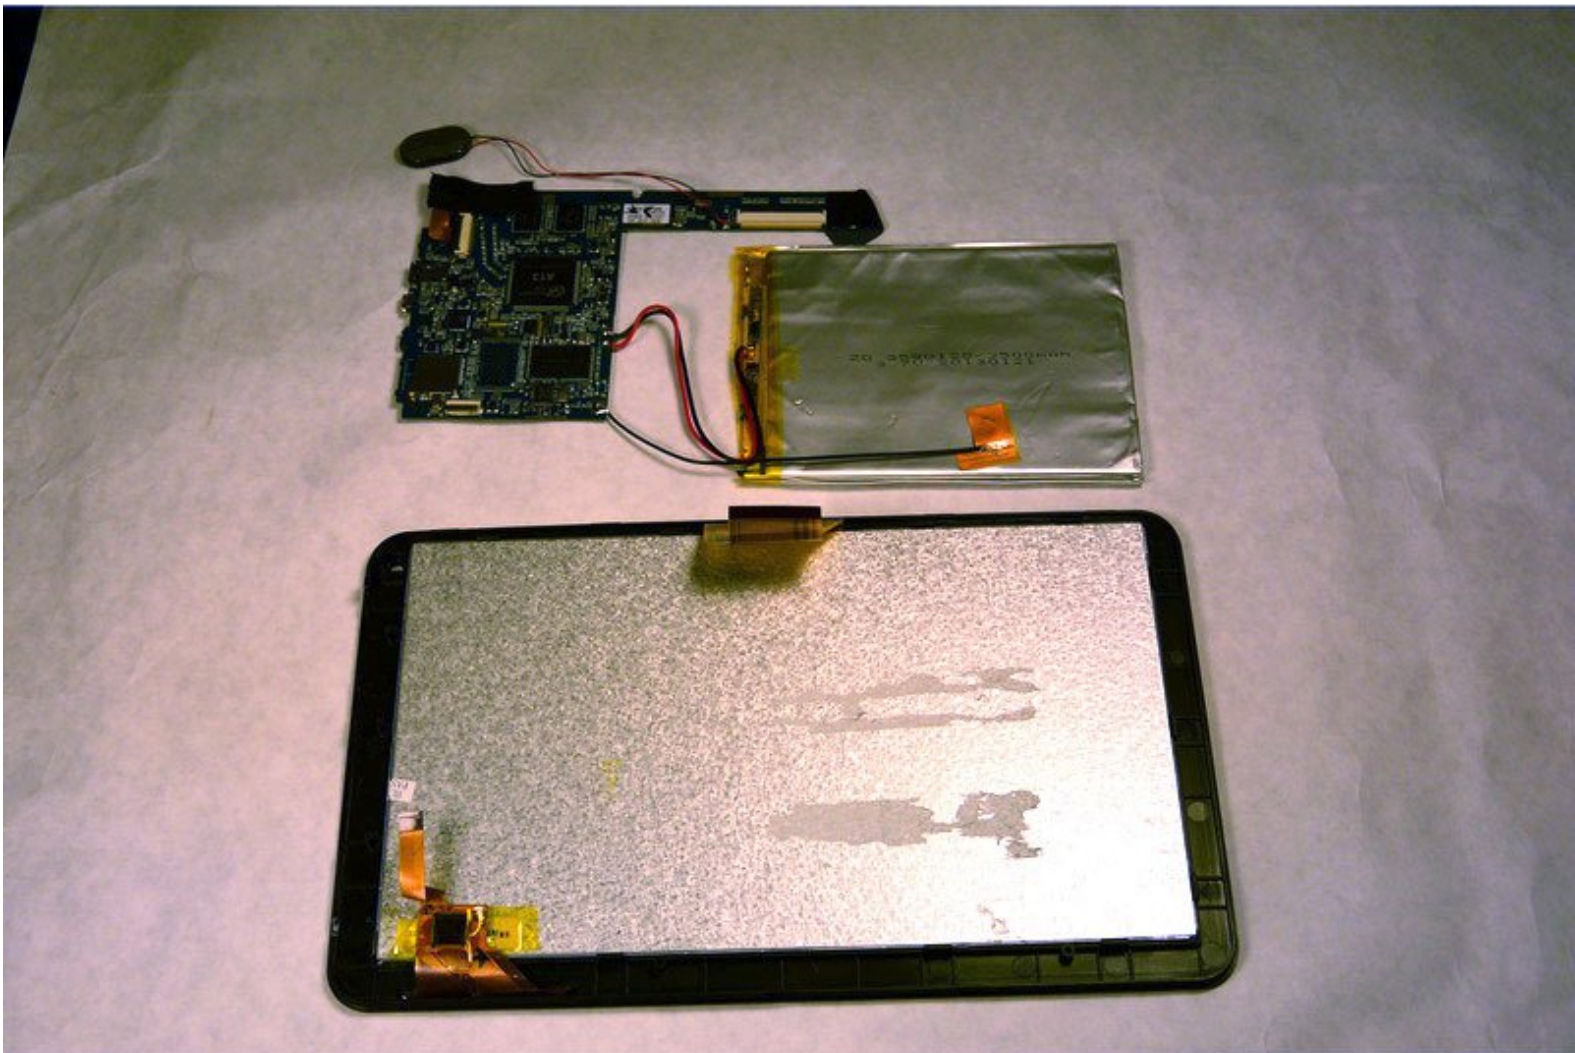

INTRODUCTION


We will be replacing the screen in the tablet by first taking the tablet apart. Dropping the tablet with no cover or protection is likely to result in a cracked screen.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
 - [Metal Spudger](#) (1)
-

Step 1 — External Cover

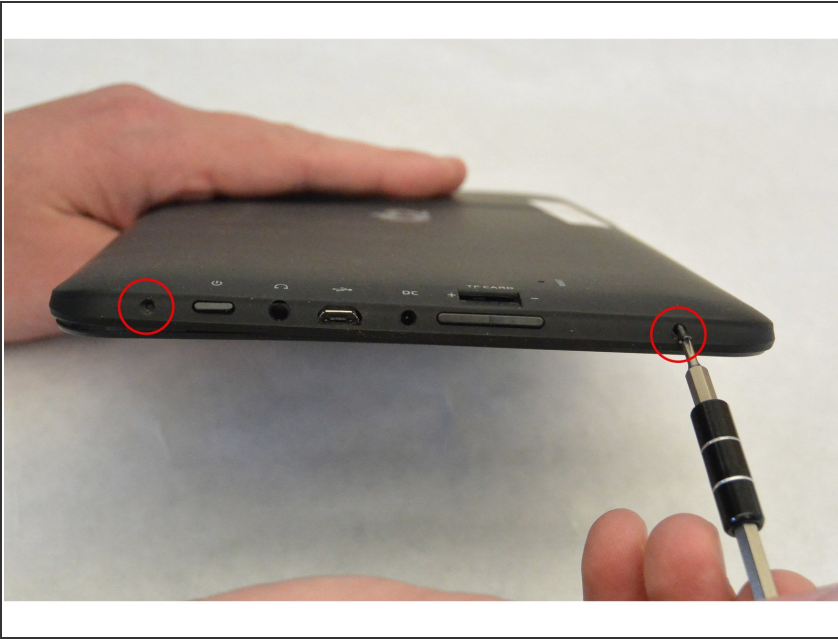

- Remove the two Phillips #00 screws from the bottom of the case.


Step 2



- Wedge the opening tool in the space between the back and the front of the tablet.
- Carefully work your way around the perimeter, wedging the opening tool between the front and back of the tablet.
- When the back of the tablet is mostly detached from the front, carefully pull it away completely.

This document was generated on 2022-03-21 01:09:54 AM (MST).

Step 3 — Screen

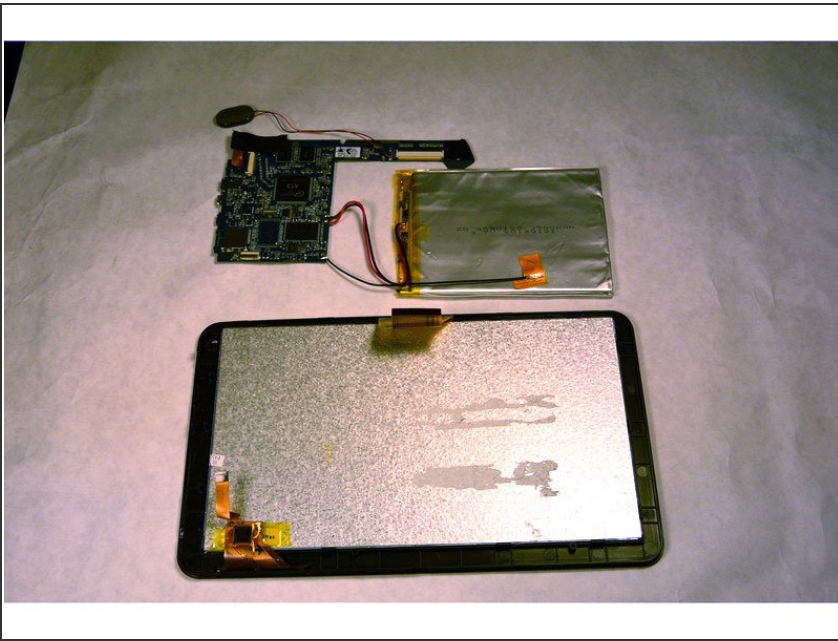


- Be sure to remove the yellow tape that is holding the components down.
- Locate the two yellow ribbon cables and carefully remove by lifting the black tab connectors forward and slide out ribbon.
- When all components are unsecured, you will be able to remove the battery, motherboard, camera, and speaker out of the way.

Step 4



- Using the metal spudger, pry the display from the screen.

Step 5

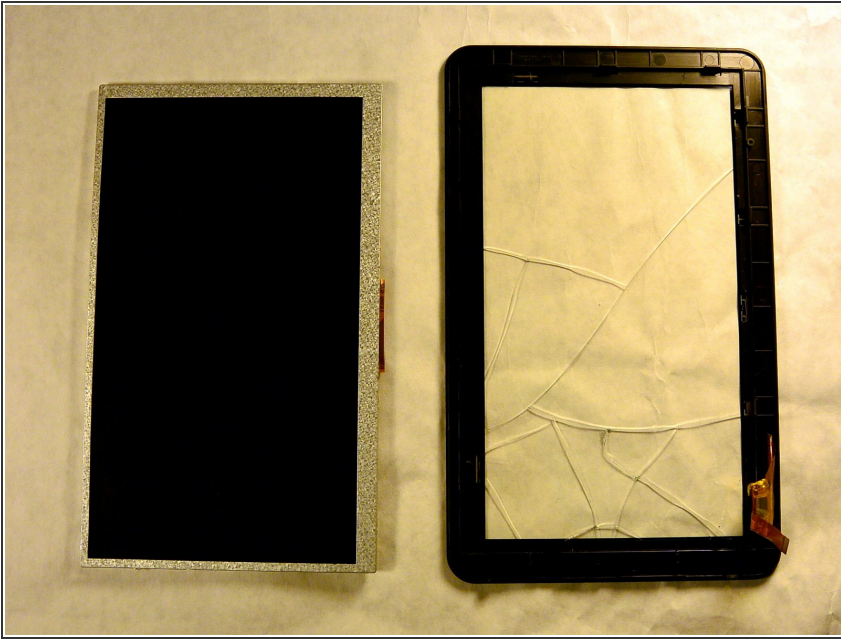

- The screen is now ready to be replaced by the new one

To reassemble your device, follow these instructions in reverse order.