




HTC HD2 Phone Speaker Replacement

The speaker is easily removed once the chassis has been taken off of the phone

Written By: Nathan Puchalski

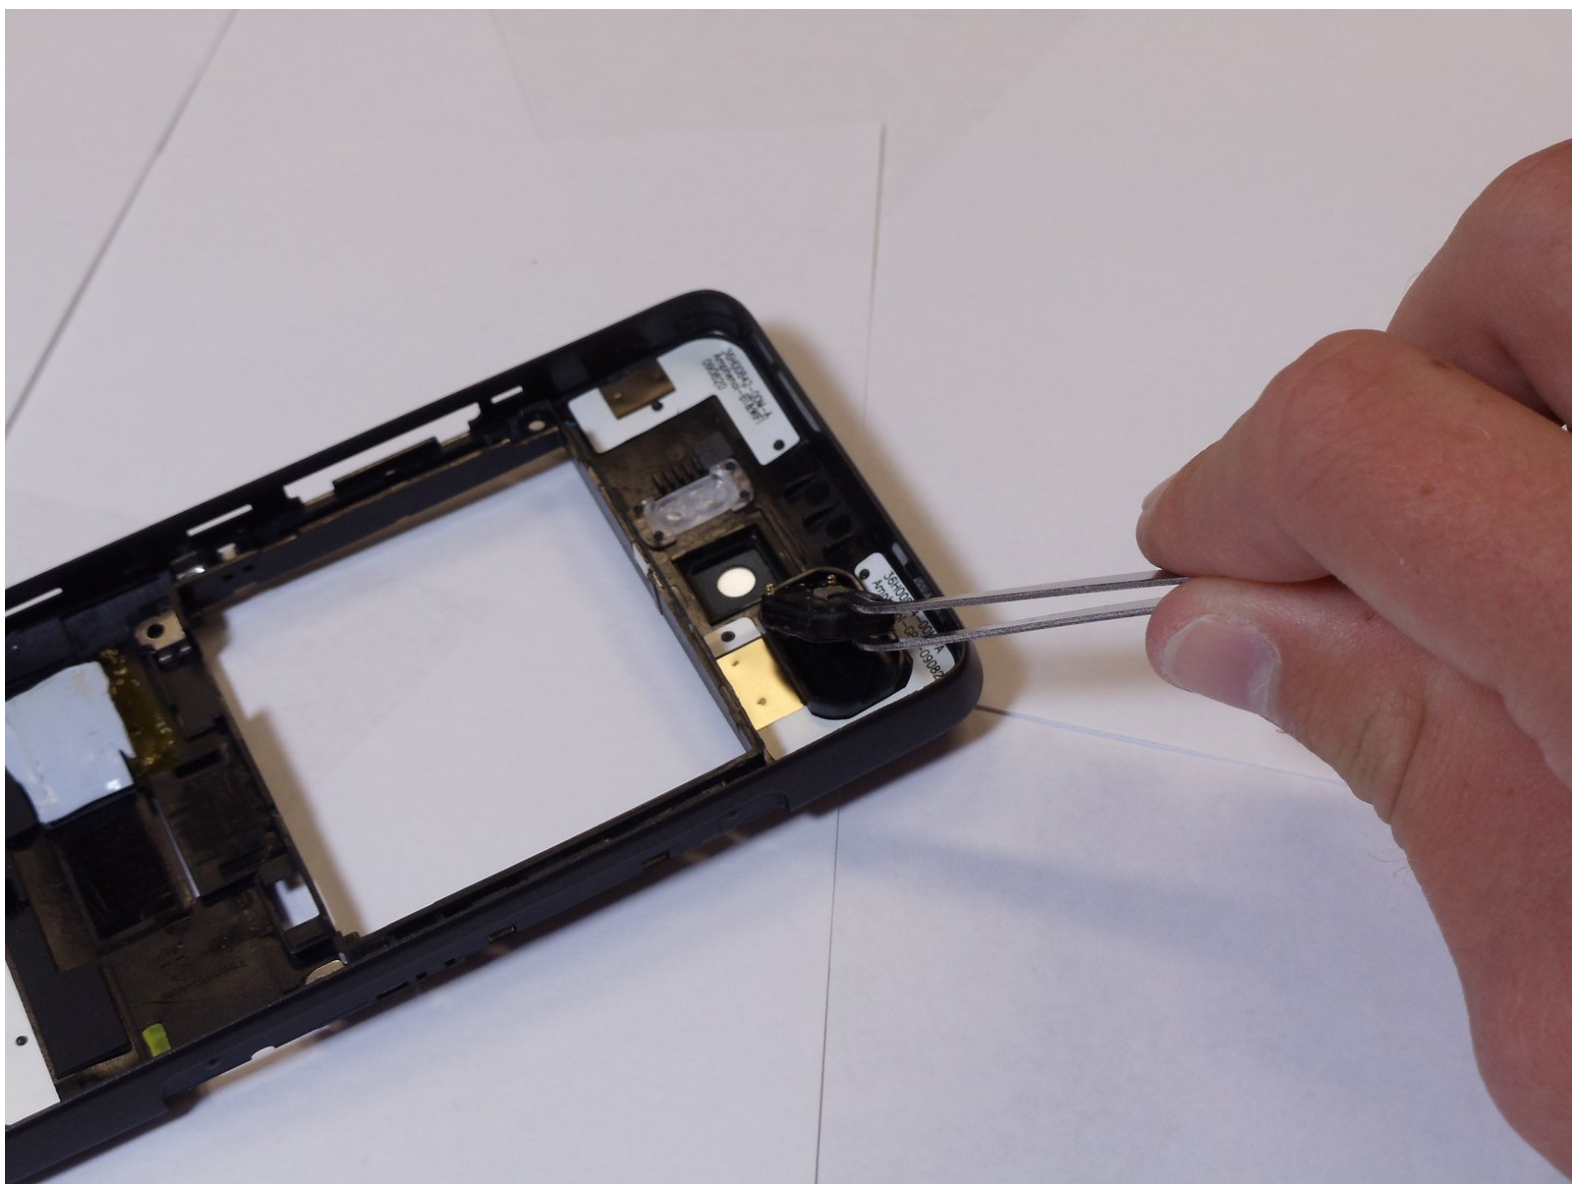

INTRODUCTION

This guide will help you get to the speaker, in case it needs to be replaced



TOOLS:

- [Tweezers](#) (1)
 - [Spudger](#) (1)
 - [T5 Torx Screwdriver](#) (1)
-

Step 1 — Battery




- Carefully pull the rear cover from the back of the phone.
- Place a finger beneath the small lip on the left side of the battery.

Step 2




- Lay the phone down on it's screen.
- Lift up on the lip and pull the battery from the phone.

Step 3 — Midframe

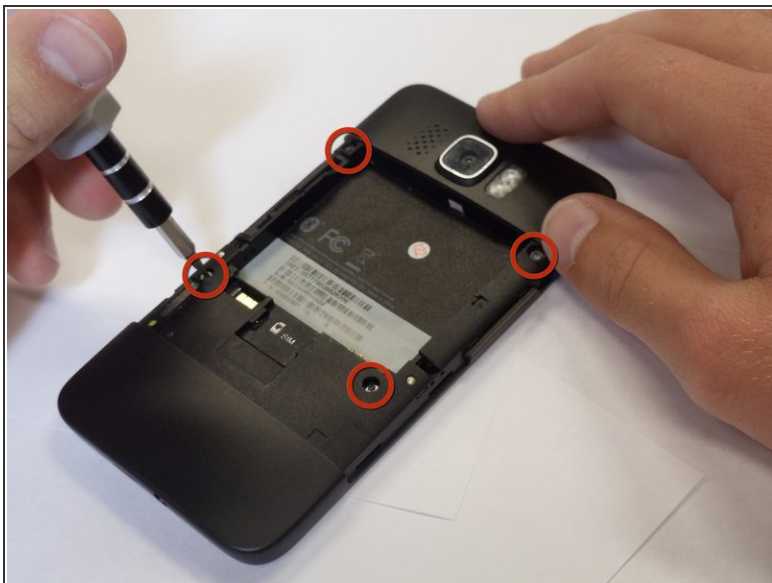


- Remove the four black 3.5mm T5 screws from the back of the phone.

Step 4

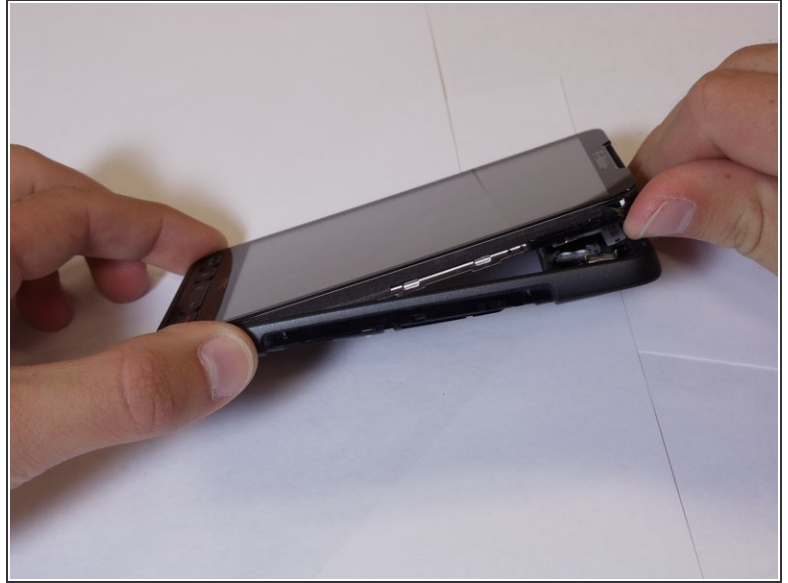


- Insert the flat end of a spudger between the midframe and the display.
- Slide the spudger along the seam between the frame and the display.
- Using the spudger for leverage, carefully pry the midframe away from the display assembly.
 - ⓘ This process will take some effort. Continue to pry slowly and carefully until the frame begins to detach.
- As it releases, pull the midframe away from the phone.
- ⓘ The volume control tab may fall off during removal. It can be easily reattached.

Step 5 — Phone Speaker

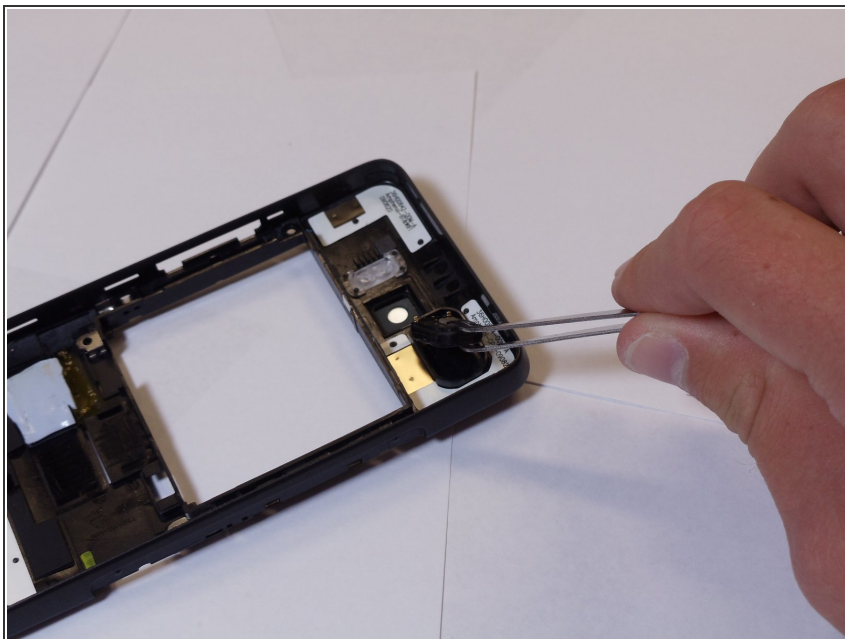

- With the chassis removed, set down the phone and locate the speaker on the inside of the housing.
- The speaker should be easily popped out of place with a small amount of force

Step 6

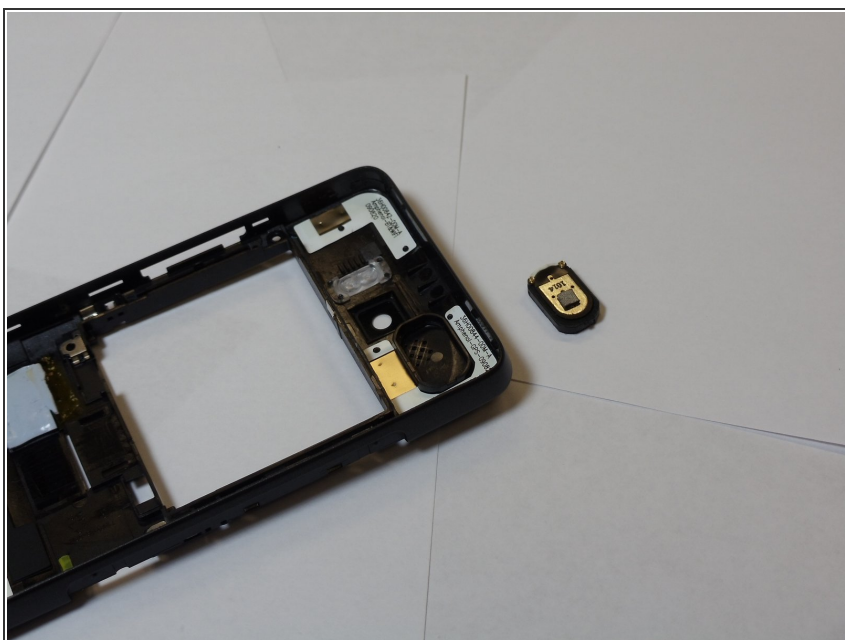

- Congratulations! The speaker is now removed and can be replaced or repaired.

To reassemble your device, follow these instructions in reverse order.