


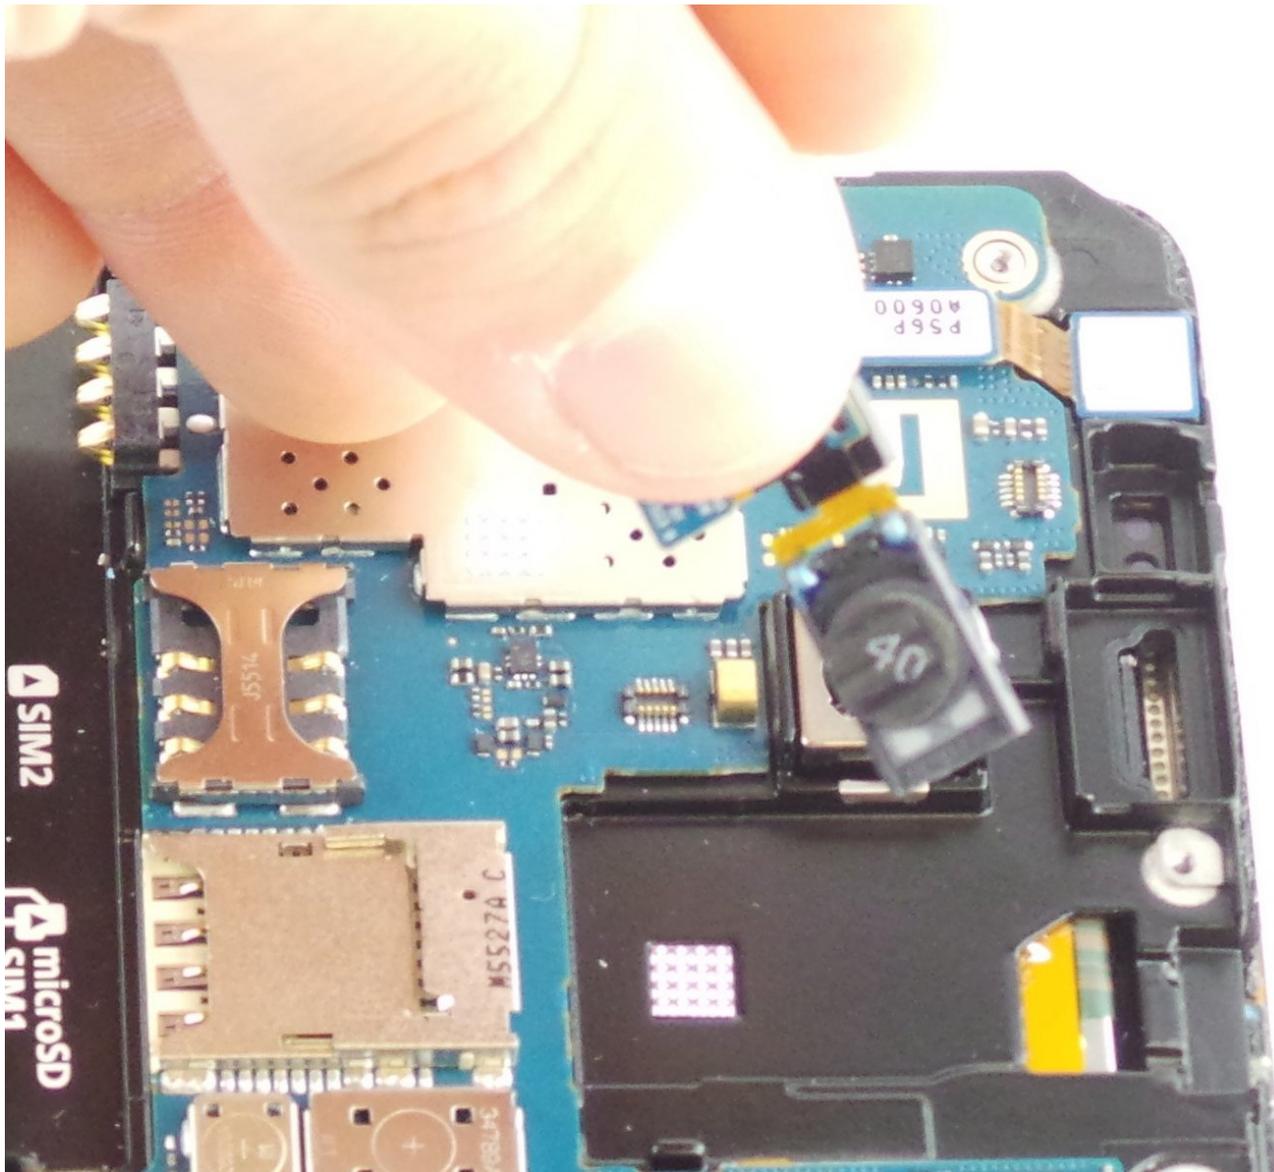

Samsung Galaxy Grand Prime Earpiece Speaker Replacement

If you can't hear someone on the phone or their voice sounds distorted, you need to replace your phone's speaker.

Written By: Kyle Ruff



INTRODUCTION

This replacement is needed when your phone's speaker is bad.

TOOLS:

- [Tweezers](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Remove the back cover of phone by lifting up on the back cover tab with the blue plastic opening tool.
- Go around the edge of the back cover to completely remove it.

Step 2 — Remove the battery.



- Remove the old battery by lifting up on the thumb tab.
- Periodically clean the brass terminals on the battery and the phone. Place a minute amount of ISO on a Q-tip and gingerly clean the connections.

Step 3 — Midframe



- Remove the nine 4mm screws from the midframe with a Phillips #000 screwdriver.

Step 4





- Wedge the blue plastic opening tool in between the front and side panel.
- Move the blue plastic opening tool around the edges between the front and side panel.

Step 5




- Make sure that you detach the mid-frame from the inside too.

Step 6 — Earpiece Speaker

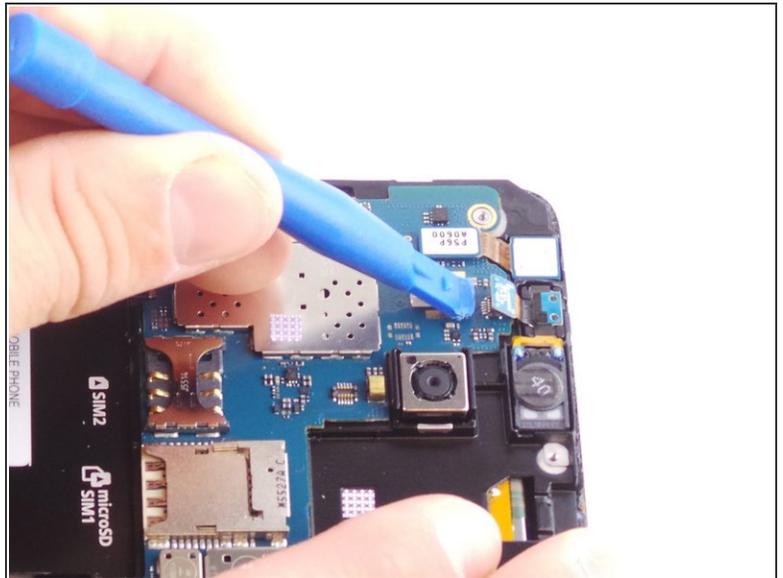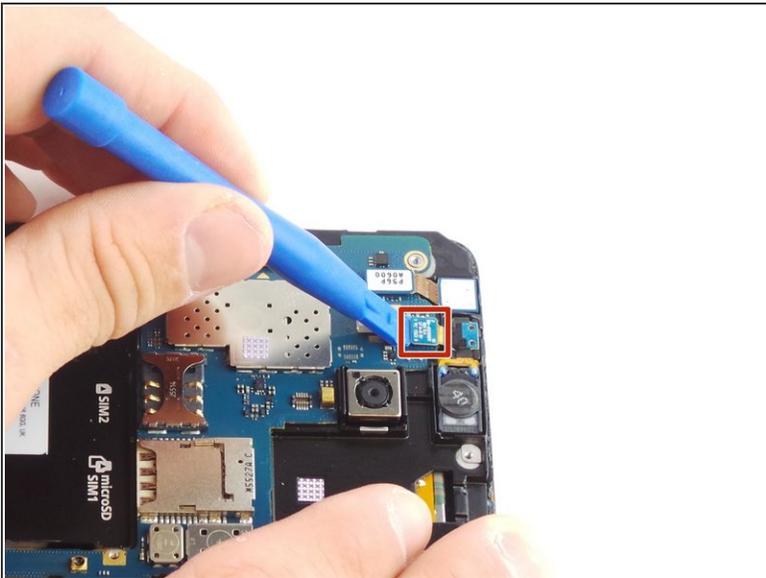

- Use the plastic opening tool to unhook the ribbon cable clip.

Step 7

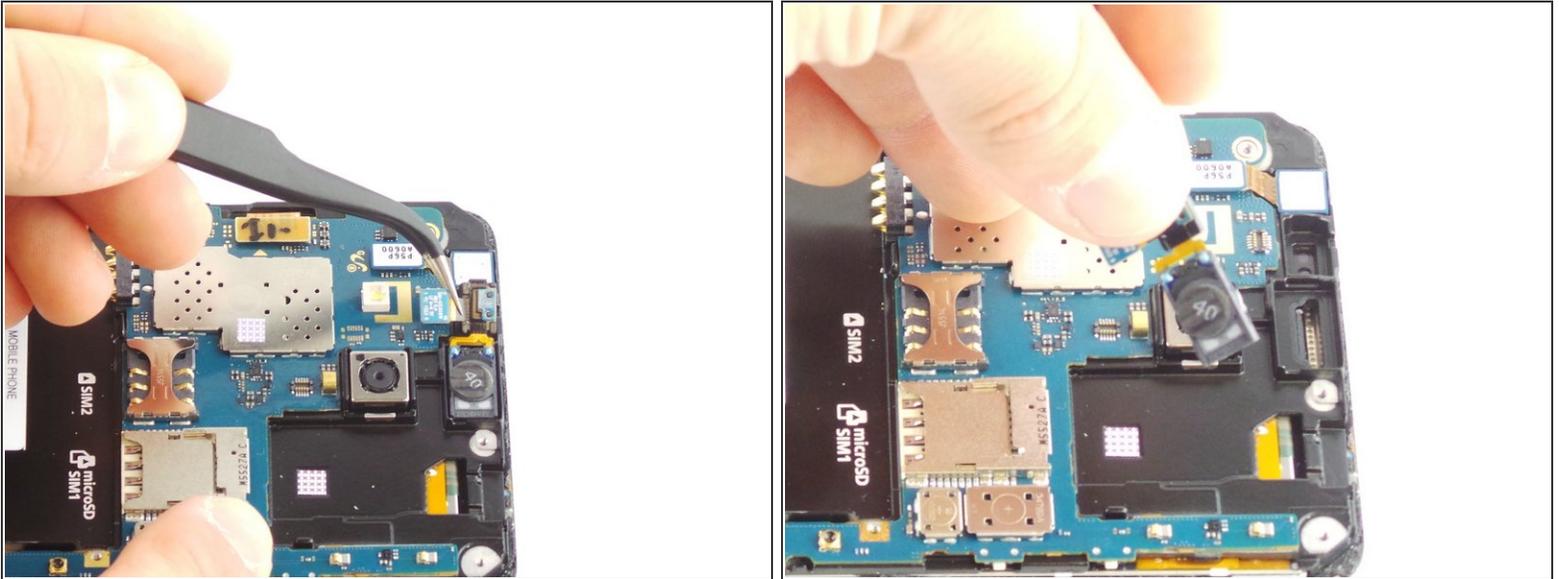

- Gently pull on the connector with the tweezers until the speaker comes off.

To reassemble your device, follow these instructions in reverse order.