




LG Optimus Fuel Volume Button Replacement

How to replace the volume buttons on your LG Optimus Fuel.

Written By: Jason Owen

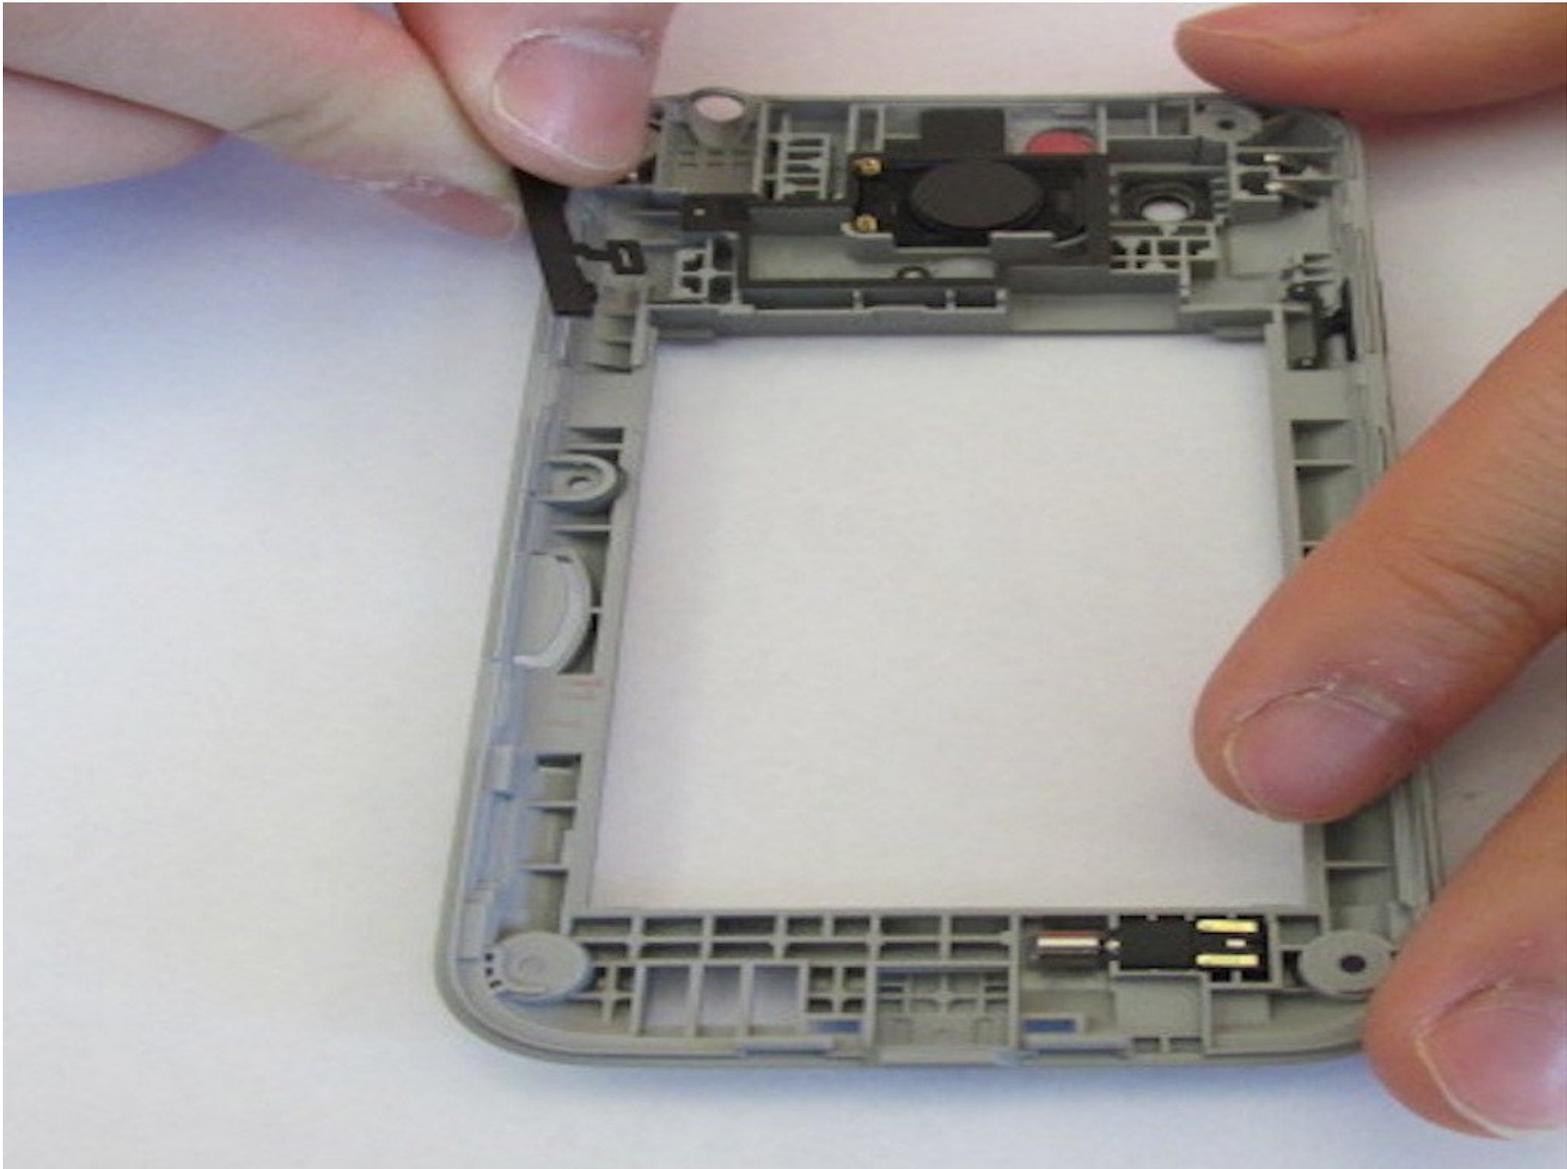

INTRODUCTION

This guide demonstrates how to properly remove and replace the LG Optimus Fuel volume button.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Use the opening on the right side of the phone to pull off the plastic back cover.

Step 2



- Use the curved opening at the center-bottom of the battery to carefully remove the old battery.

Step 3 — Volume Button



- Use a Philips screwdriver to remove the six 1.4 mm screws. Set aside.
- Use a plastic opening tool to remove the back panel.

Step 4



- Remove the volume buttons by pressing on the outer edge.

To reassemble your device, follow these instructions in reverse order.