



Sony SRS-X55 I/O Board Replacement

Replace the I/O board on your Sony SRS-X55 speaker.

Written By: Bradley Conner




INTRODUCTION

If your Sony SRS-X55 speaker won't play sound from the auxiliary jack, replacing the I/O board may resolve the problem.

TOOLS:


- [Phillips #1 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery

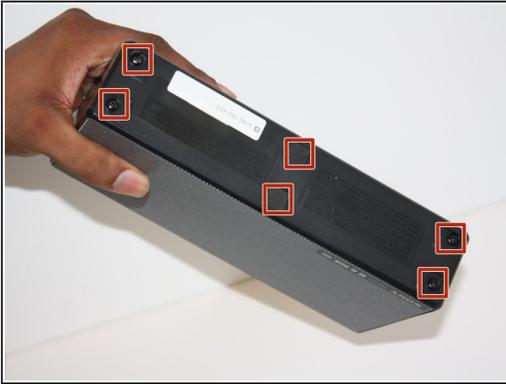


- Remove the six screw covers with a spudger.
- Remove the six 11 mm Phillips screws from the bottom panel.
- Remove the bottom panel of the speaker.

Step 2

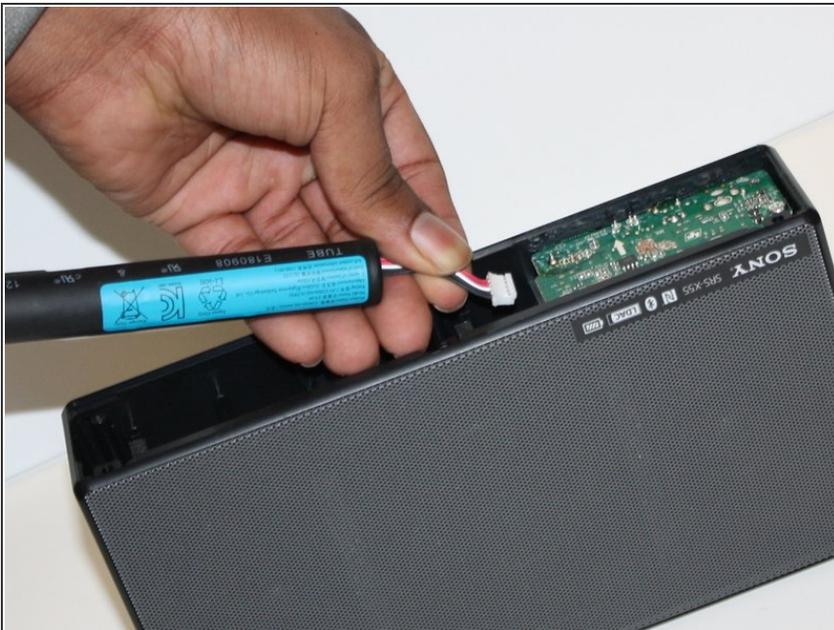


- Disconnect the battery cable from the motherboard.
- Remove the battery.

Step 3 — I/O Board

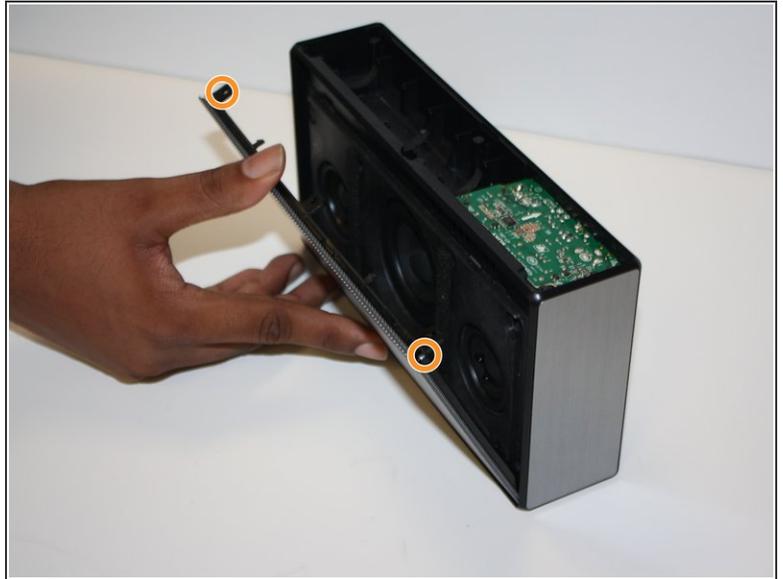

- Remove the two Phillips screws from the I/O board.
- Remove the front panel to the speaker by pushing on the two tabs in the corners.

Step 4

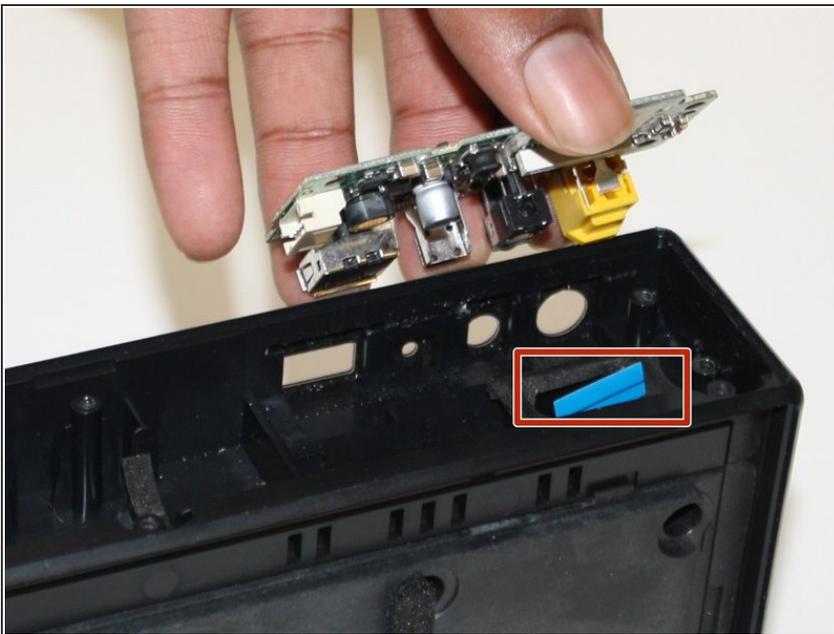

- Disconnect the ribbon cable from the I/O board.
- Carefully remove the I/O board from the speaker.

To reassemble your device, follow these instructions in reverse order.