




# The Claw Battery Replacement

Following this guide is relatively simple and not as involved as other parts of The Claw.

Written By: Alain Pierre

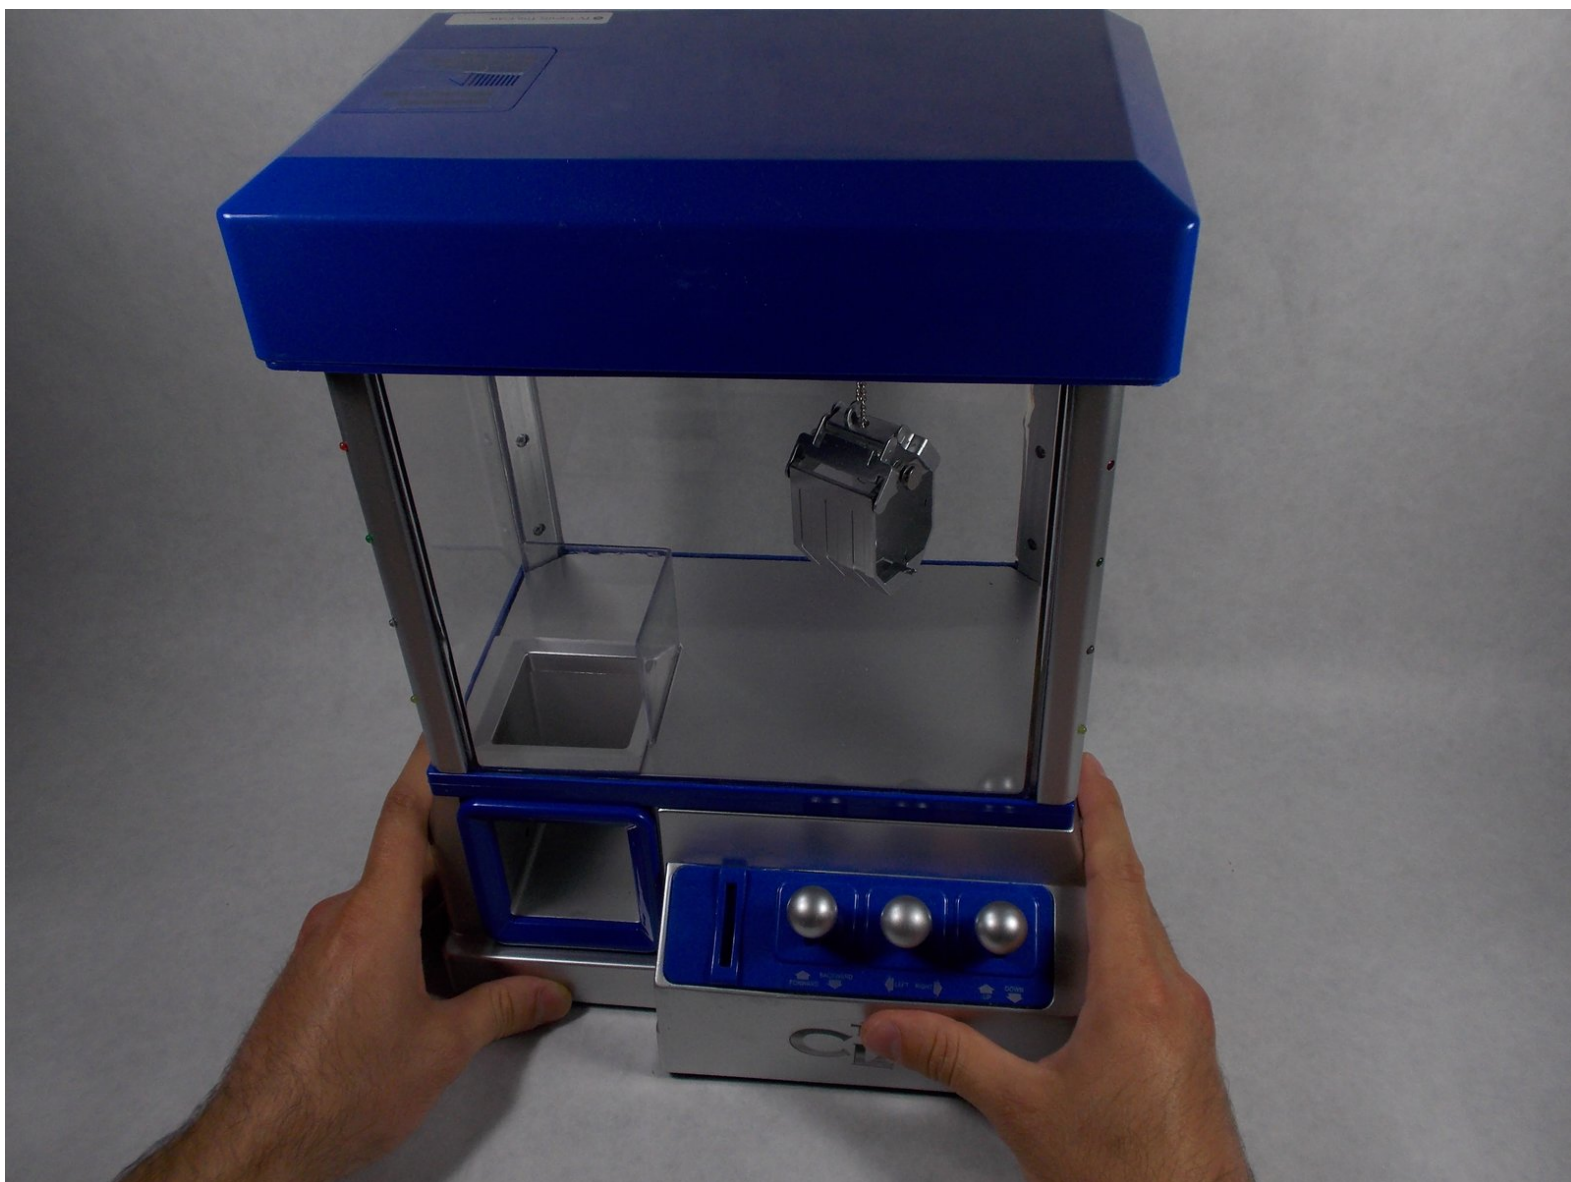

## INTRODUCTION

This guide will teach you how to properly replace the batteries in your Claw Machine. If you are experiencing any power related issues with your device follows these steps.



### TOOLS:


- [Phillips #0 Screwdriver](#) (1)



### PARTS:


- [D-cell Batteries](#) (3)

## Step 1 — Batteries

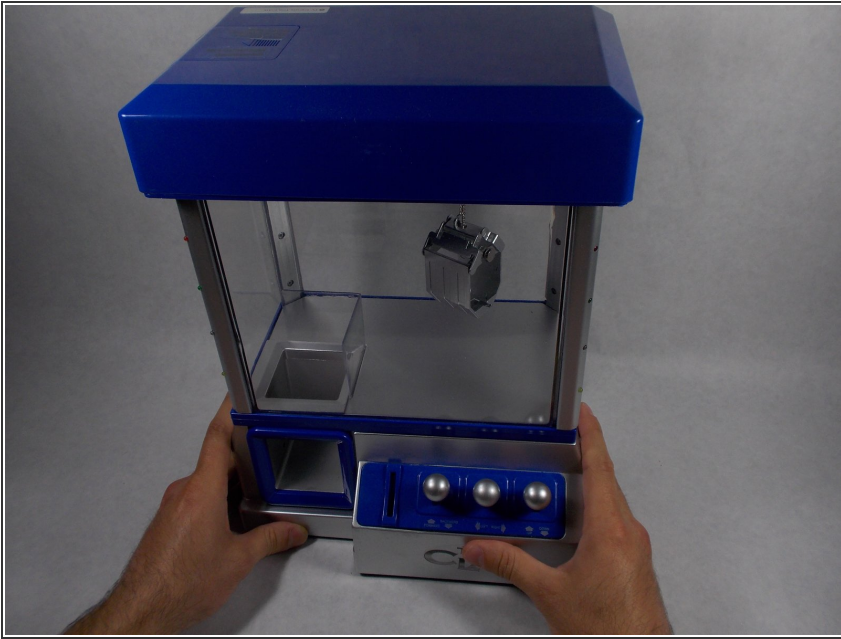

- Hold The Claw machine upright so that the controls are facing you.

## Step 2

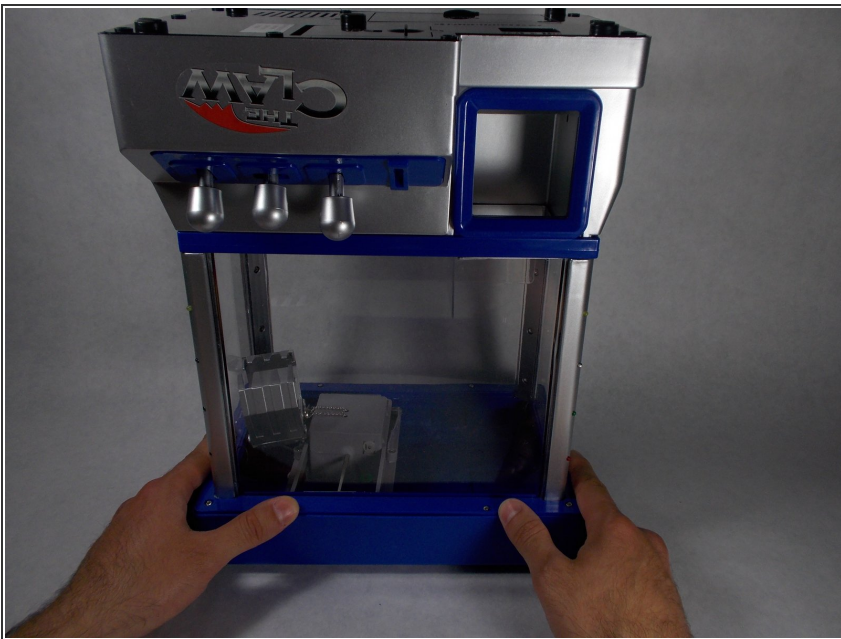

- Turn the device upside down keeping the controls facing in your direction.

### Step 3



- Locate the battery compartment door on the bottom cover of The Claw.
- Loosen the screw from the battery compartment door with your phillips head screwdriver.

### Step 4



- Open the door and insert the 3 D-cell batteries using the correct configuration that is labeled on the inside of the compartment.
- ⚠ If the batteries are not placed in the right configuration the device will not operate. make sure to identify positive and negative sides of the battery and follow the configuration on the device.

To reassemble your device, follow these instructions in reverse order.