




LG G3 Vigor Earpiece Speaker Replacement

Replace the earpiece speaker in a LG G3 Vigor.

Written By: Geoff Wacker

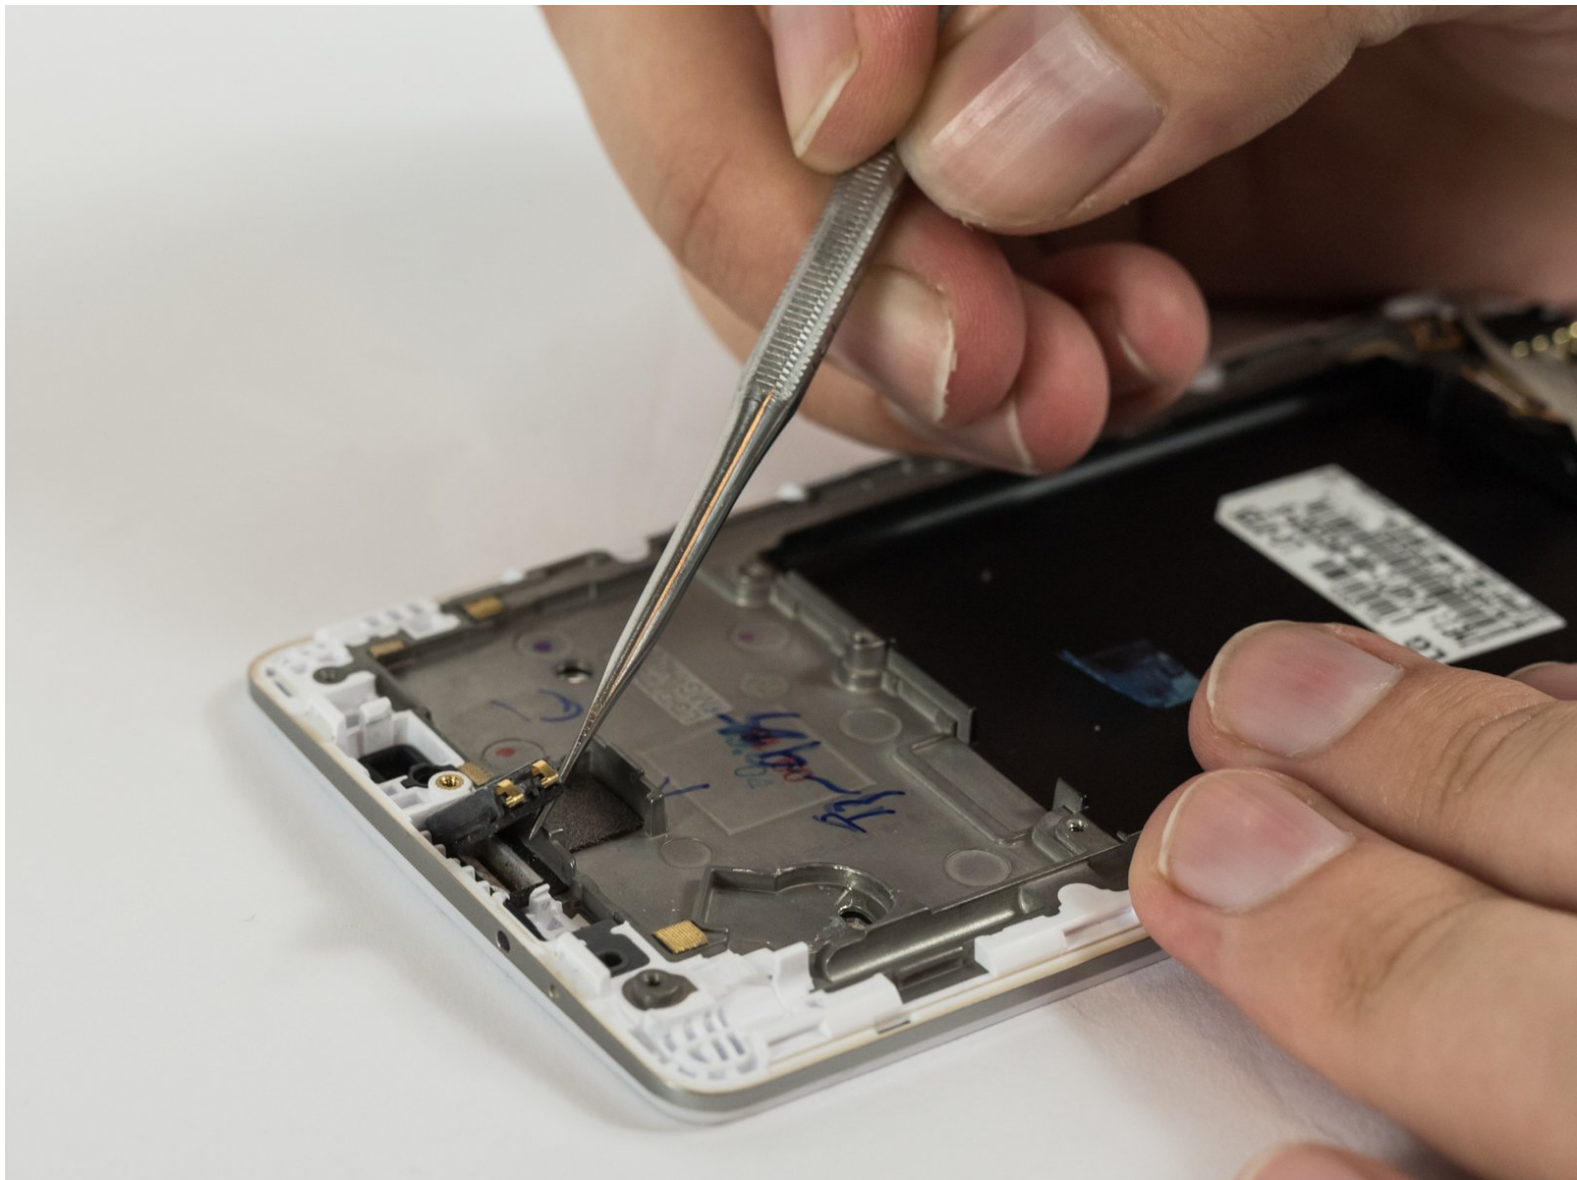

INTRODUCTION


Use this guide to replace the earpiece speaker in your LG G3 Vigor.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Rear Case

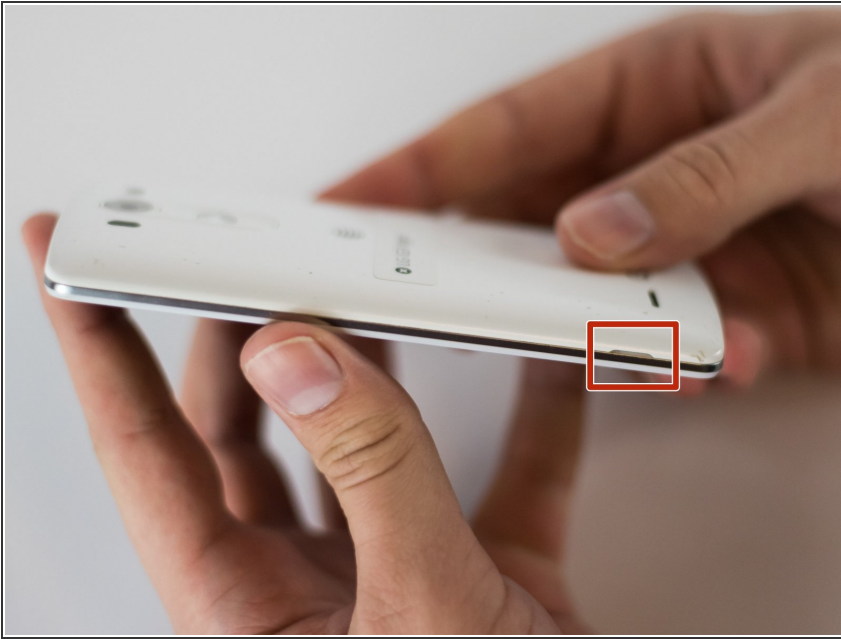

- Locate the notch on the bottom right of the phone.

Step 2



- Gently pull the cover on the back of the phone off to locate the battery.

Step 3 — Battery




- Remove the battery by lifting from the slot at the bottom of the battery.

Step 4 — Midframe




- Remove the twelve Phillips #00 screws securing the midframe to the rest of the phone.

Step 5

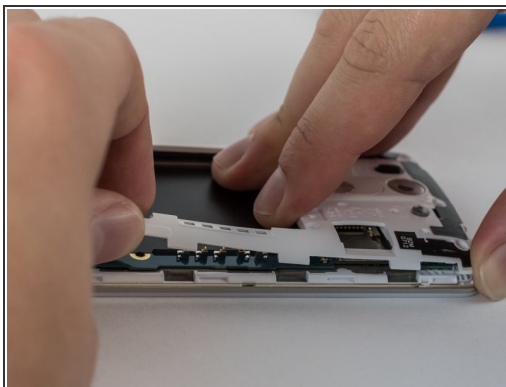



- Work a plastic opening tool around the perimeter of the phone to separate the midframe from the rest of the phone.

Step 6 — Rear Facing Camera

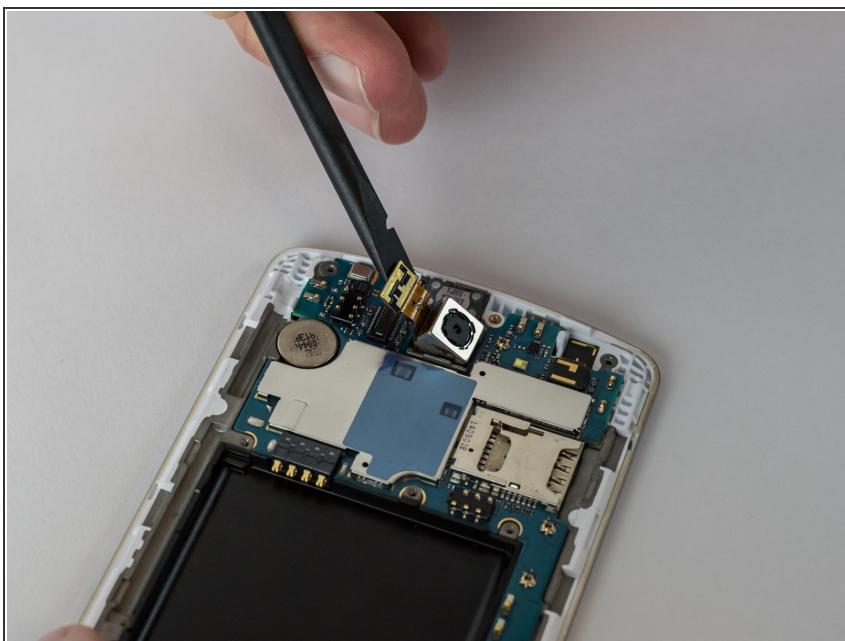


- Use the spudger to gently unplug the ribbon cable connected to the motherboard. Then remove the rear facing camera.

Step 7 — Front Facing Camera

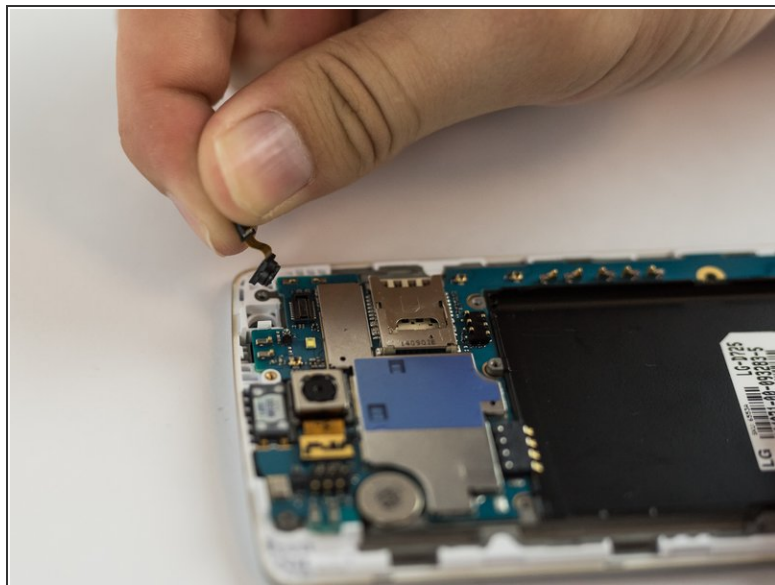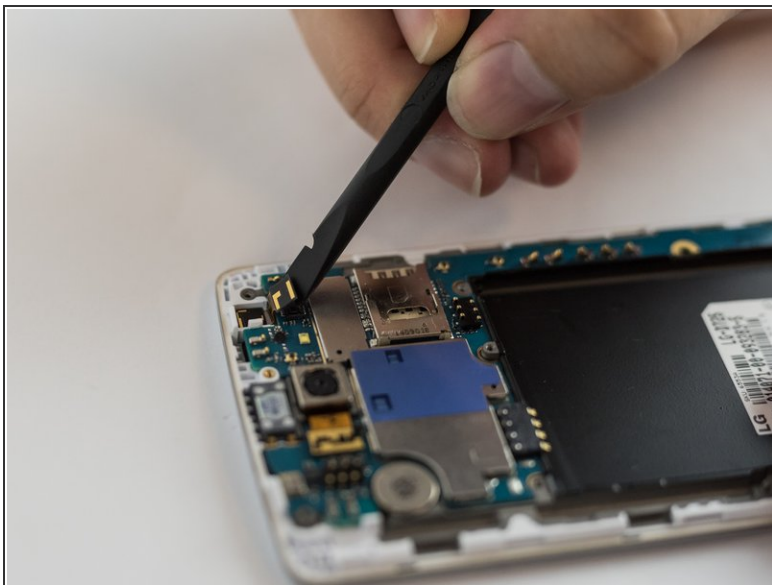


- Use the spudger to gently unplug the ribbon cable connected to the motherboard.
- Remove the front camera.

Step 8 — Motherboard

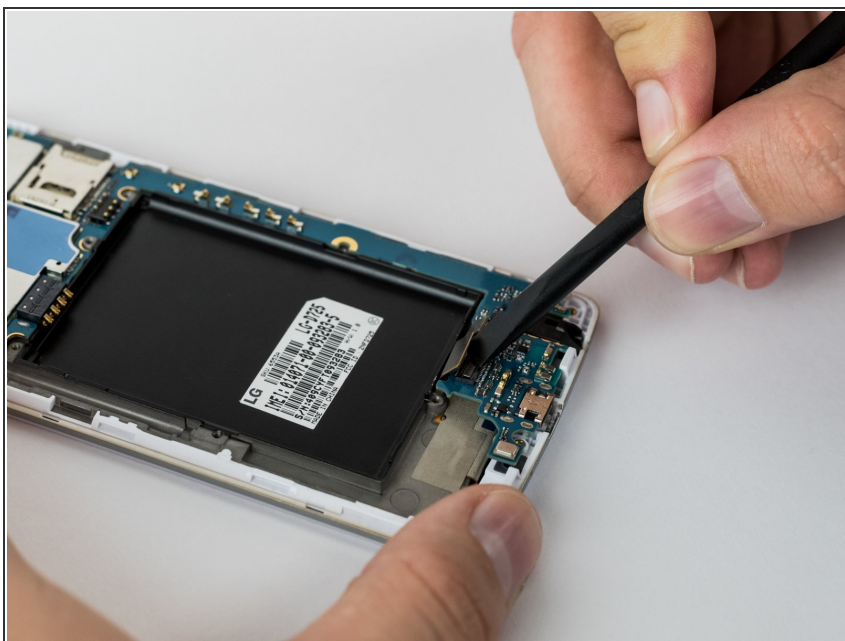


- Use the flat edge of a spudger to disconnect the motherboard ribbon connector.

Step 9

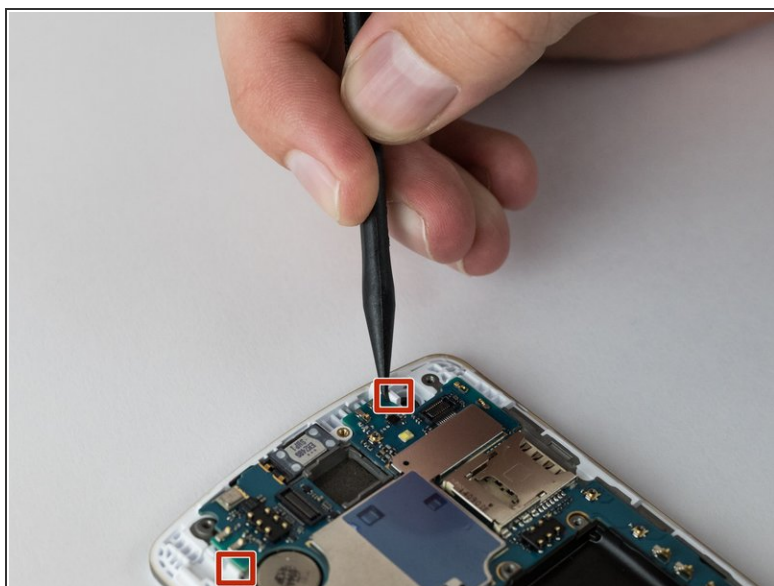

- Use the pointed end of a spudger to push back the two motherboard retaining flaps.
- The motherboard should now be able to be lifted out of the device.

Step 10 — Earpiece Speaker

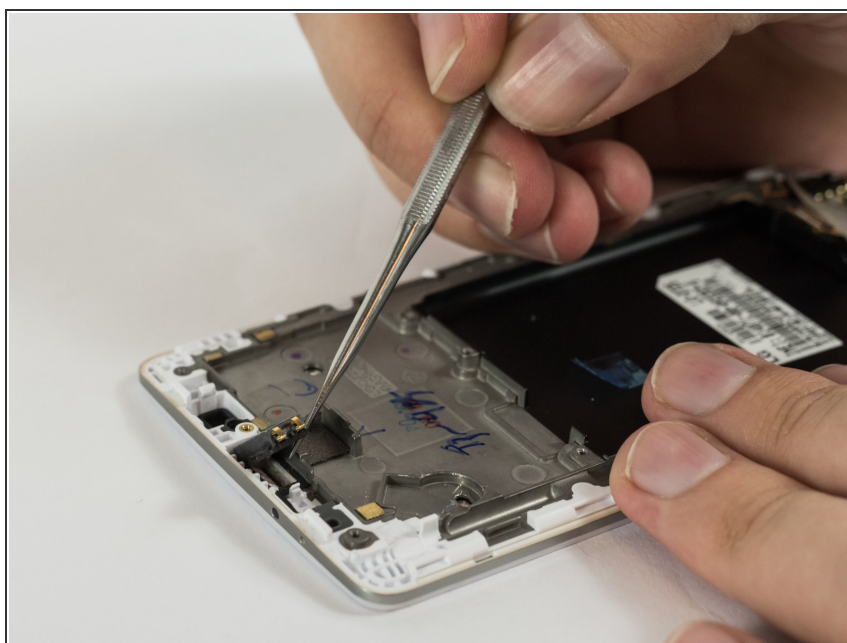

- Remove the earpiece speaker with the metal spudger by prying it out.

To reassemble your device, follow these instructions in reverse order.