



# Disassembling Sony Ericsson W580i Back Cover

Removing the back cover will give you access to the motherboard.

Written By: Cherie



## INTRODUCTION

Use this guide to remove the back cover and access the motherboard.



### TOOLS:

- [iFixit Opening Tools](#) (1)



### PARTS:

- [Sony Ericsson W580i Back Cover](#) (1)

## Step 1 — Battery




- Hold the phone with the screen facing down. Push the back cover firmly down and slide it towards you.
- The panel will slide down about 2mm.
- Lift the panel away from the phone.

## Step 2



- Lift the battery out from the bottom edge.


### Step 3 — Back Cover

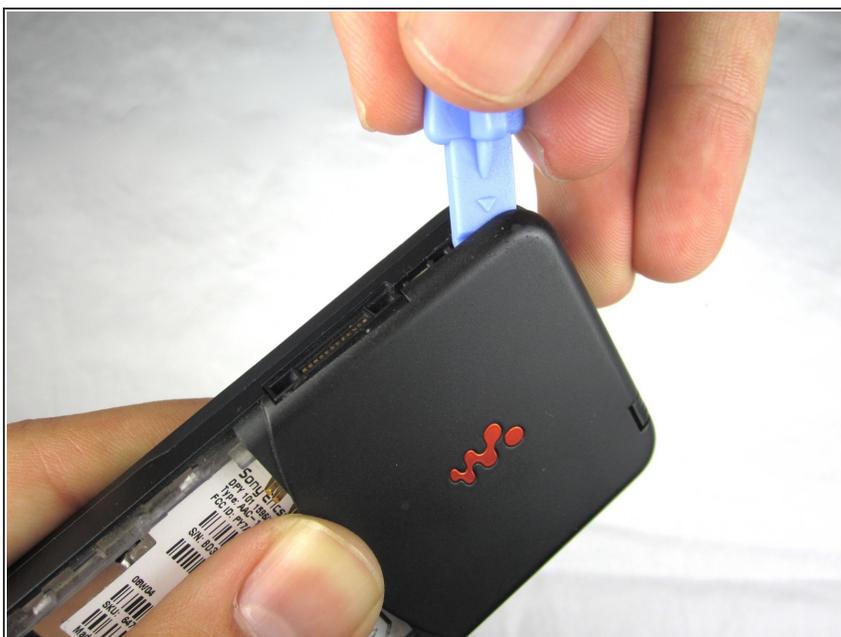

- Insert the edge of an opening tool between the back cover and the phone body on the top edge (not to be confused with the edge where the phone slides).
- Pry the back case off of the phone working your way around the edges until the panel is freed from the phone.

**⚠** Be careful when pulling the spudger down the side by the charging port. The plastic cover may bend or snap.

### Step 4

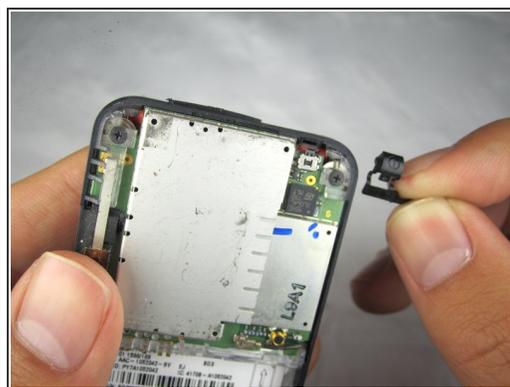

**i** While removing the back cover do not lose the power button. It is held in place by the back cover and may fall off during removal.

- Pull the back cover away from the phone.
- Remove the power button if it has not already come off.

To reassemble your device, follow these instructions in reverse order.