

Disassembling Kodak Advantix F350 Battery

This guide demonstrates how to install the camera battery.

Written By: David Cottrell





• iFixit Opening Tools (1)

Step 1 — Disassembling Kodak Advantix F350 Battery



 Turn off camera by moving the highlighted switch to the O-Position.


Step 2





 To open the cover of the battery slot, push the highlighted tab in the direction of the arrow next to it, and gently lift.

Step 3

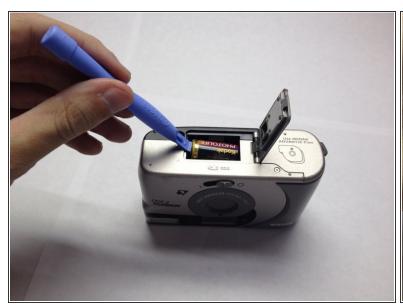



- Use your plastic opening tool to slowly pry the battery from the camera case.
- With your fingers, remove the battery and replace with new one.
- Gently close the cover of the battery slot.