



Lenovo Yoga 3 14 Battery Replacement

This guide will help you to replace your dead or dying battery in a Lenovo Yoga 3 14 laptop.

Written By: Ryan Bump



INTRODUCTION

If you are experiencing any problems with your laptop dying quickly when it is not plugged into an outlet, You might need to replace the battery of your laptop. The battery is what gives your laptop power when it is not plugged. The following guide will show you how to replace the battery.

TOOLS:


- [T5 Torx Screwdriver](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Back Case




- Remove the eleven 6mm T5 Torx screws from the back case.

Step 2

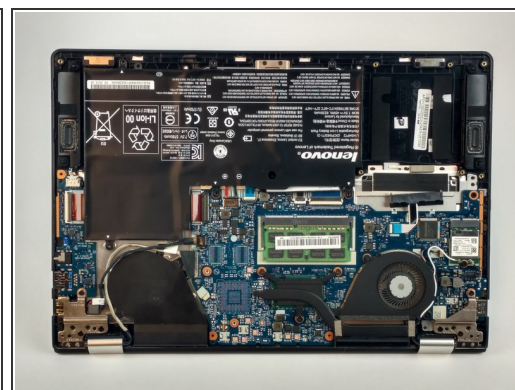



- Insert the plastic opening tool into the long side of the case backing and slide it the entire length of the laptop.
- Gently lift the backing off the laptop.

Step 3 — Battery

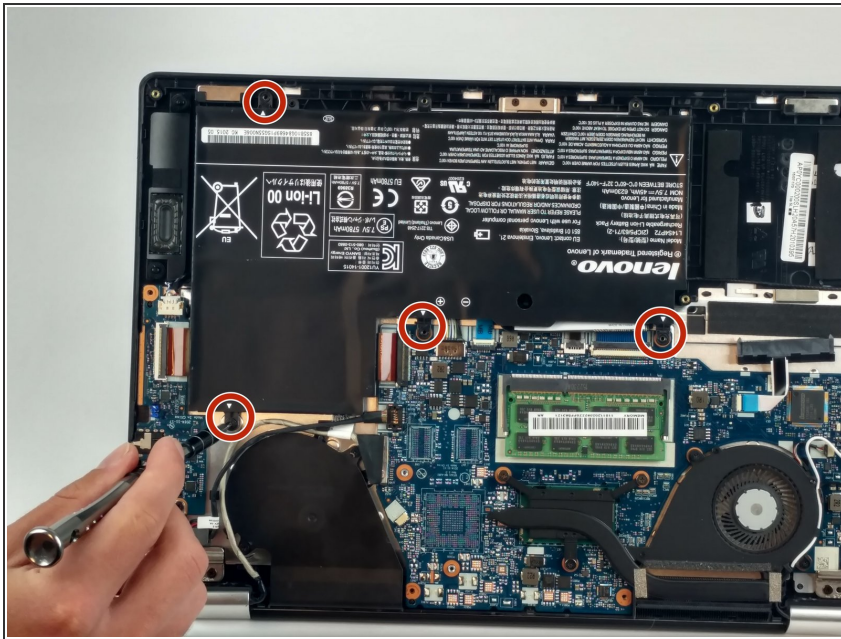

- Remove the four 3mm PH#0 screws surrounding the battery.

Step 4

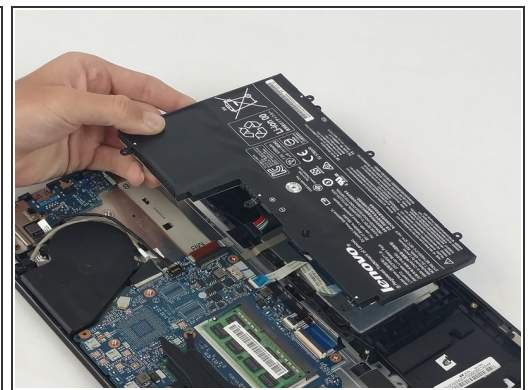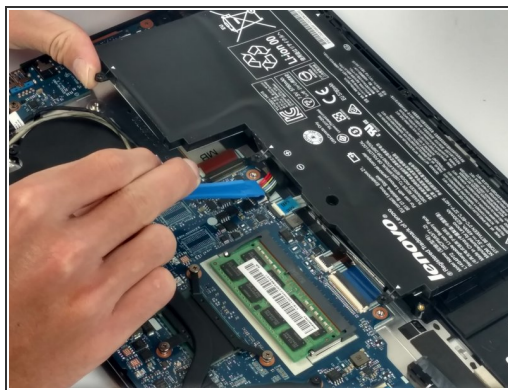

- Gently lift the battery and use the plastic opening tool to remove the battery's connection to the laptop.

To reassemble your device, follow these instructions in reverse order.