



# iPhone 4S Battery Replacement

This guide consists of instructions on how to...

Written By: Cole Anello



---

## INTRODUCTION


This guide consists of instructions on how to replace the battery in an iPhone 4S.



### TOOLS:


- [Pro Tech Toolkit](#) (1)
-

## Step 1 — Pentalobe Screws

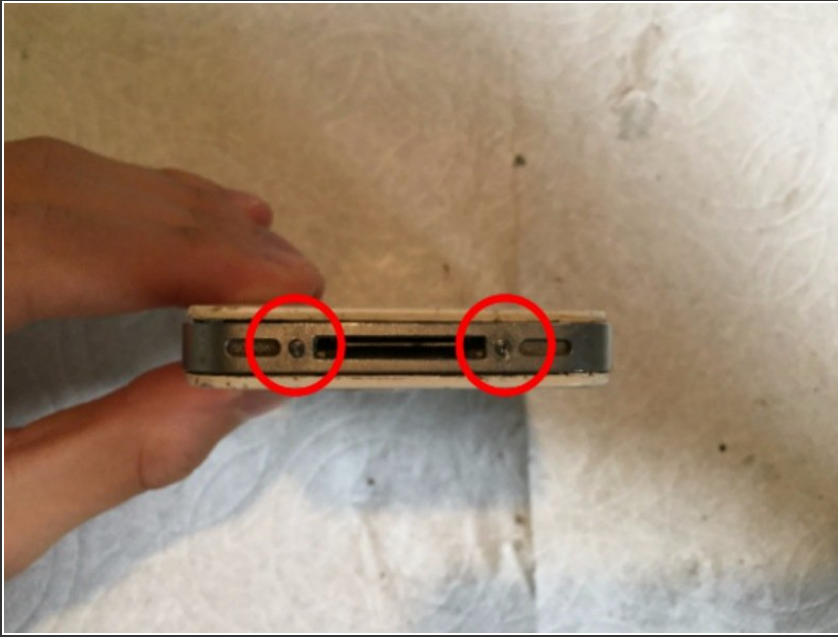

- Remove the Bottom Pentalobe Screws next to the charger connector.
- ☑ It is recommended that you use a small 5-Point screwdriver.
- ⚠ Remember to make sure your iPhone is fully turned off before tearing it down, to prevent serious injury.

## Step 2 — Back Panel Removal

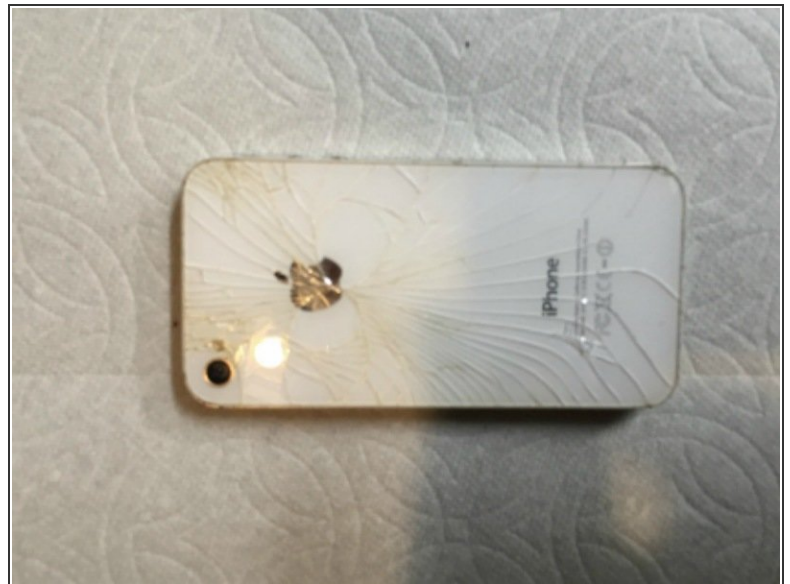


- Push the back panel towards the top edges of the iPhone. Doing this should allow the back to slide off.

⚠ Do NOT apply so much pressure. Especially if your iPhone is cracked.

☑ Do not rush it! Time is key.

This document was generated on 2023-01-03 04:20:21 PM (MST).

## Step 3 — Battery Screws

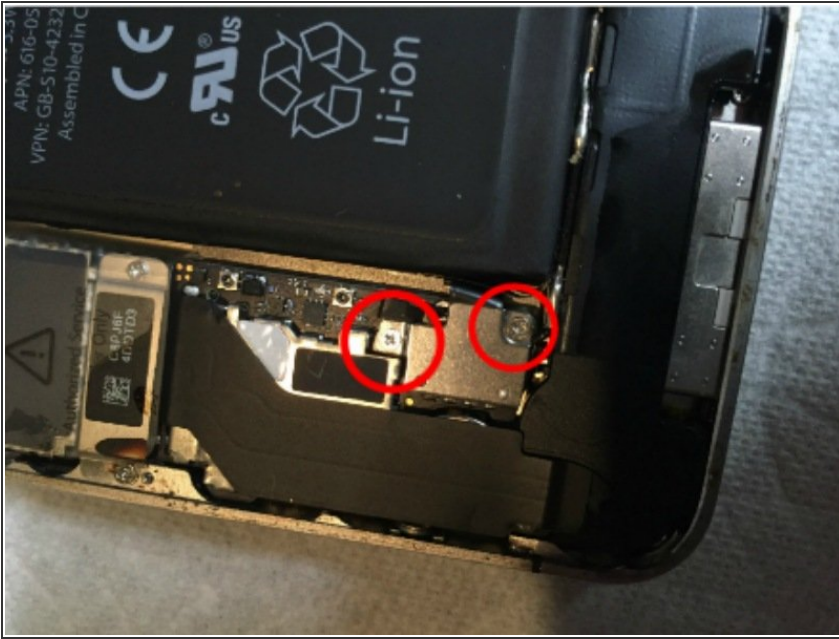

- Remove these two screws that are securing the battery connector to the Logic Board.

**⚠ Remember to focus and pay attention. So you don't accidentally slip and pierce the Battery!**

- ⓘ For the bottom screw, it is recommended that you use a 1.5 mm Screwdriver, and a 1.7 mm for the top screw.

## Step 4 — Battery Strip



- Locate and pull the Plastic tab to pull out battery. Make sure to pry up outsides of battery on other sides as well.

**⚠ Do not pull the plastic tab to hard, as it can easily rip!**



## Step 5 — Battery Removal



- Carefully remove the battery.
- ★ Remember, if you are replacing your battery, remember to preform a hard reset on your iPhone once its all finished.

To reassemble your device, follow these instructions in reverse order.