



HP Compaq 2510p Power/audio bar Replacement

This guide will show step-by-step instruction depicting the replacement of your laptops power/audio bar.

Written By: Derek Kohansky



INTRODUCTION

This guide will show step-by-step instruction depicting the replacement of your laptops power/audio bar.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)
-

Step 1 — Power/audio bar



- Locate the 4 screws in the four corners of the laptop screen.
- ⓘ The screws may be hidden underneath a small rubber pad.
- ⚠ Be sure to ground yourself and tools before working near electronics.

Step 2



- Use a Flathead screwdriver to remove the 4 rubber covers over the 4 screws referenced in step 1.

Step 3



- Once the rubber has been removed a screw will be revealed. Remove each of the four screws with your Philips head screwdriver.

Step 4



- Insert your spudger along the top of the screen, separating the plastic cover and the screen

Step 5




- Continue running your Flathead along the top of the screen until the top is completely separated.

Step 6





- Pull the plastic covering of the screen towards the keyboard, exposing the inner workings of the screen.

Step 7

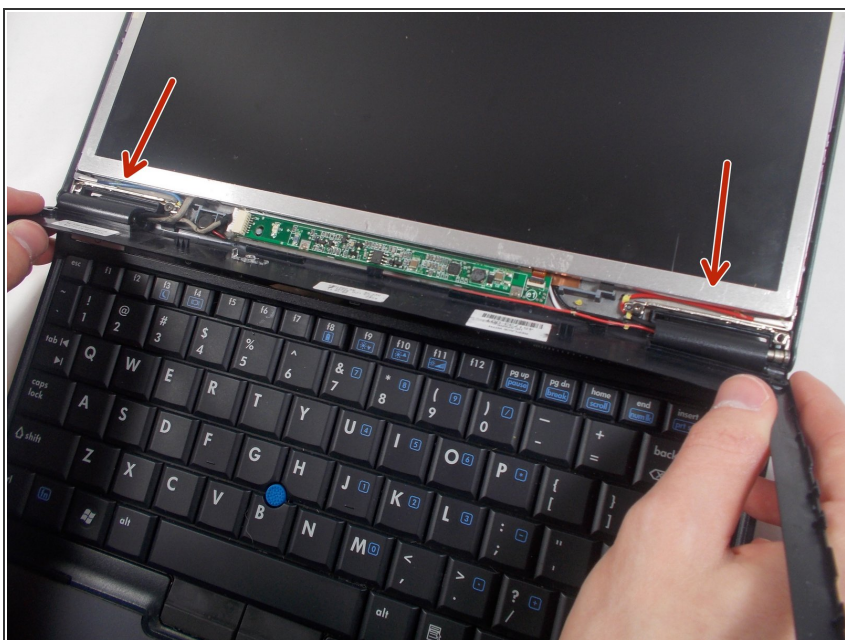


- Locate the hinges at the bottom left, and right of the screen

Step 8

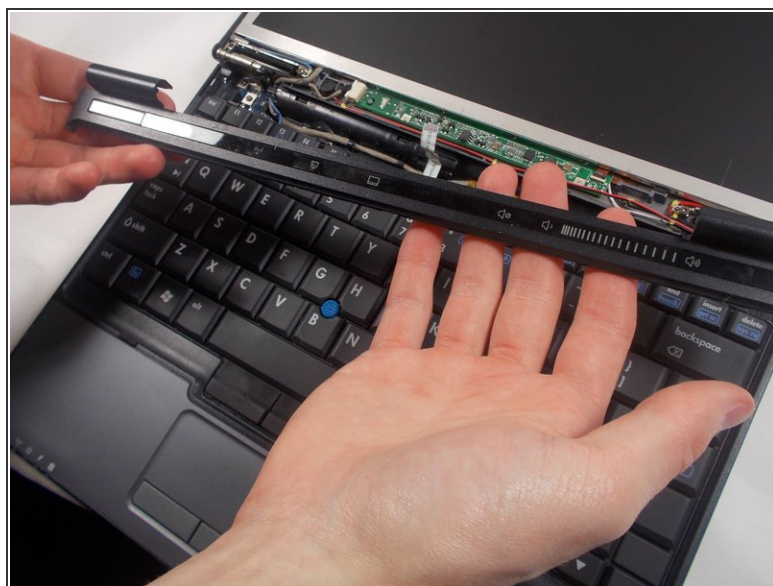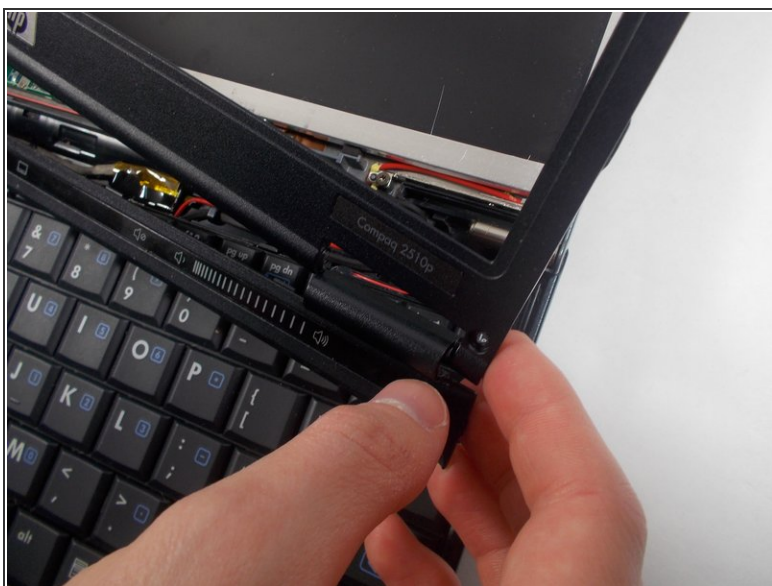


- Separate the Power/Audio bar from the hinge by gently pulling.

Step 9

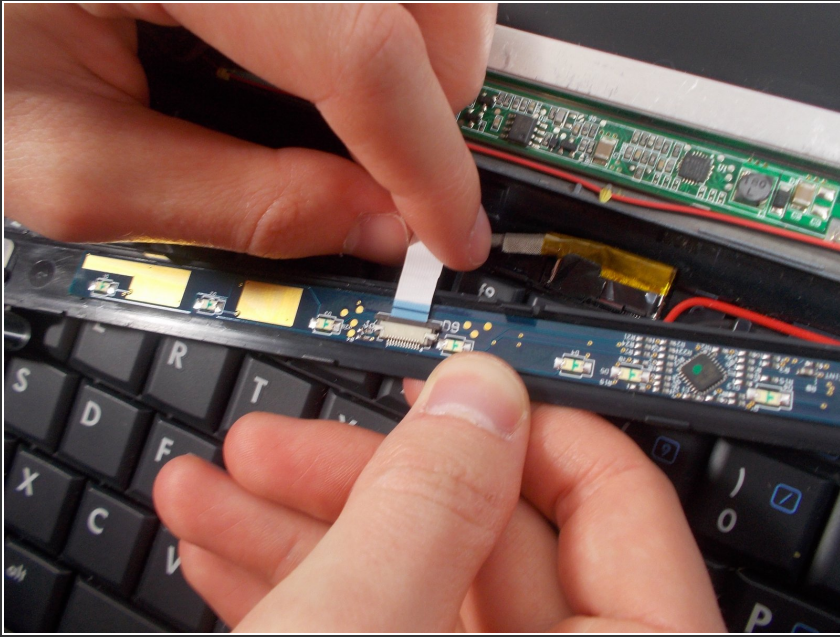

- Flip the Power/Audio bar over exposing the ribbon wire and its connection to the Power/Audio bar.

Step 10

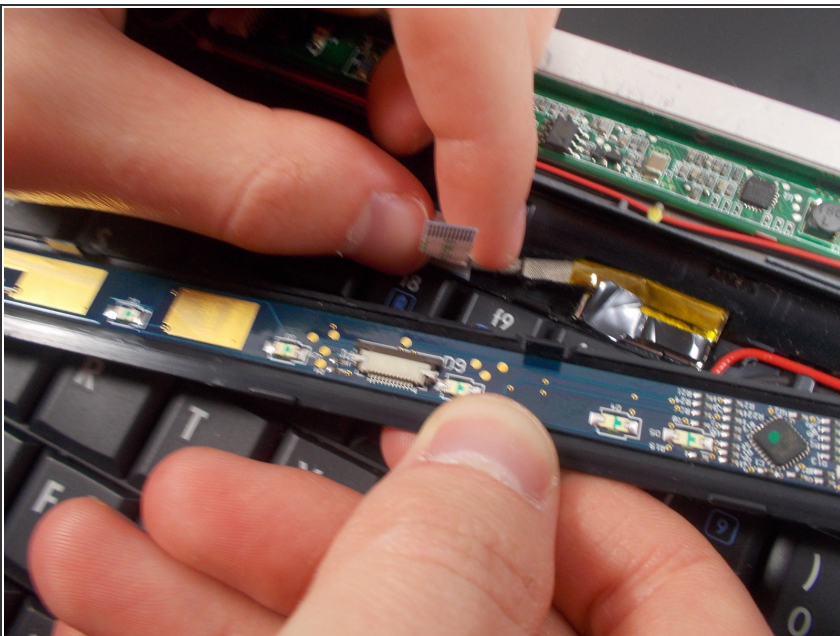

- Separate the ribbon wire by gently pulling the wire from its socket.
- The wire will be separated and the bar is free.

⚠ Be gentle as you pull.

To reassemble your device, follow these instructions in reverse order.