



# ASUS PadFone X Power and Volume Buttons Replacement

Buttons on your phone sticking or not working?...

Written By: Madeline Dement



# INTRODUCTION

Buttons on your phone sticking or not working? Here's how to replace them!

---

## TOOLS:

[iFixit Opening Tool](#) (1)

[T5 Torx Screwdriver](#) (1)

[Tweezers](#) (1)


---

## Step 1 — Power and Volume Buttons



- Pry off the back cover with the blue plastic opening tool.
- ⓘ Removing the cover may require a bit of force.

## Step 2

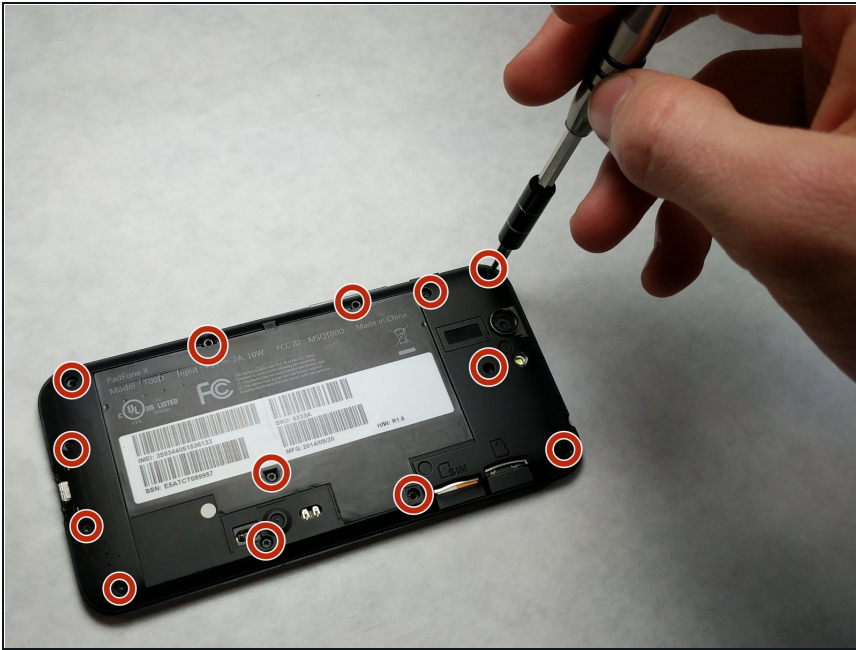

- Remove thirteen 3.6mm screws using the T5 Torx Screwdriver.

## Step 3



- Once the screws are removed, the mid-frame can be lifted off of the phone.



## Step 4




- Grasp the button strip with [tweezers](#).
- Pull the buttons upwards gently. The buttons should remove easily.

## Step 5



- Use the blue plastic opening tool to disconnect the orange sensor strip.
- ⚠ Applying too much force may damage the connector.

## Step 6

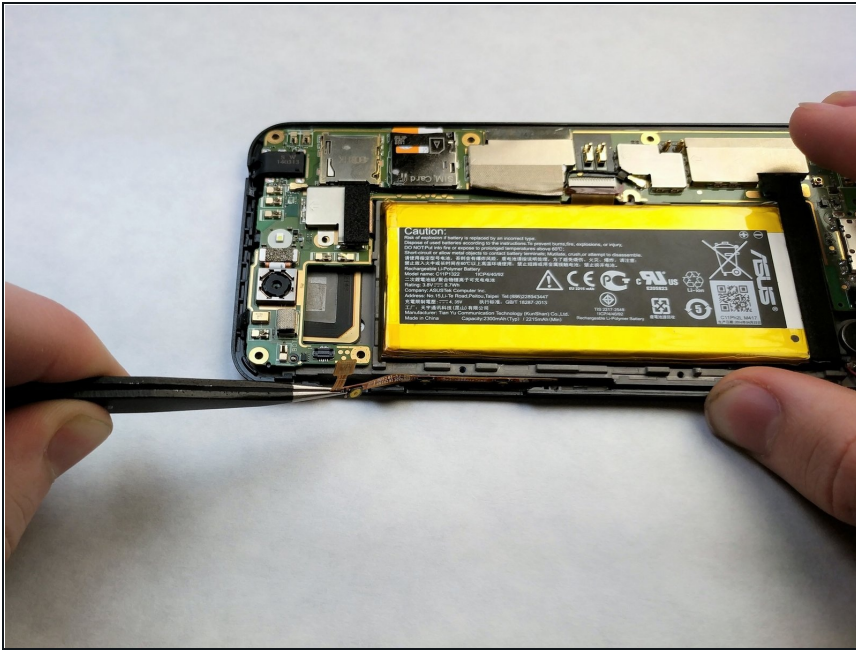

- Grasp the sensor with the tweezers.
- Pull outwards away from the phone.
- ① The sensor is held on by adhesive. You will need to apply some force when removing.

To reassemble your device, follow these instructions in reverse order.