




Dyson Ball Multi Floor Upright Side Filter Replacement

Replace the side filter to get better suction from your vacuum.


Written By: Nicole Abraham

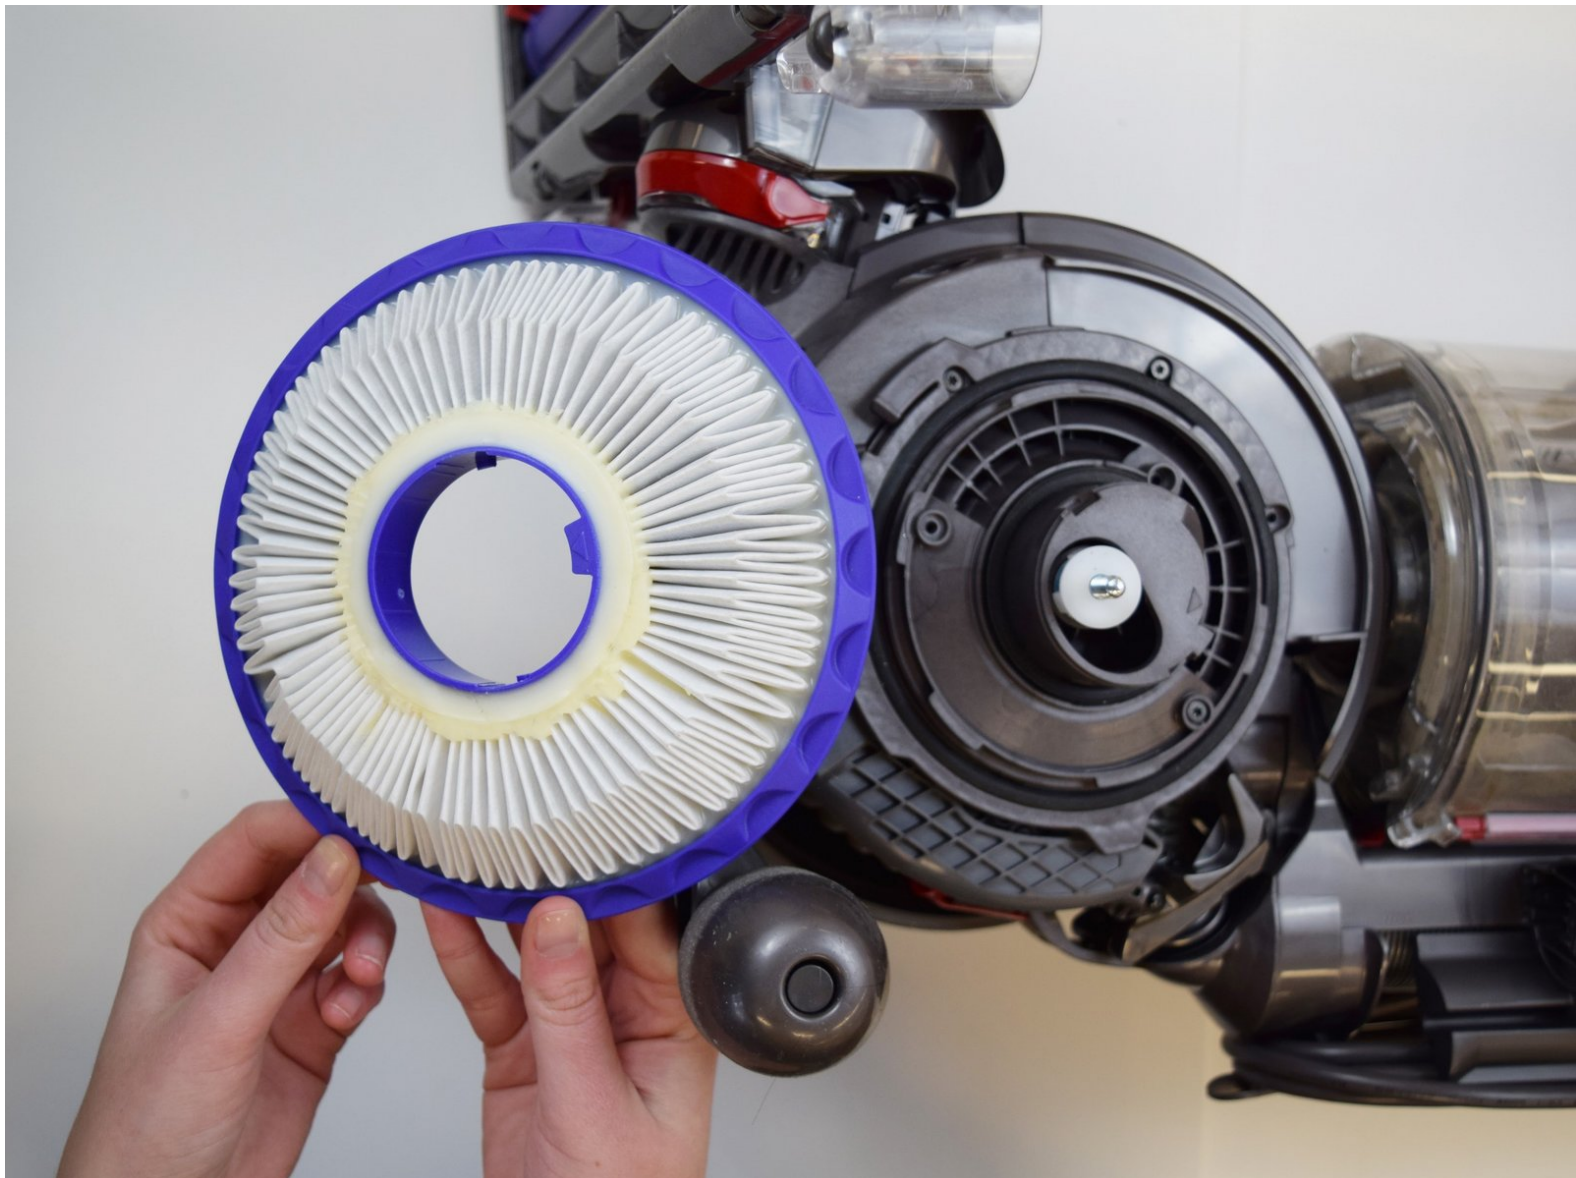

INTRODUCTION



If you have noticed the vacuum not performing as efficiently as it should and replacing the main filter did not help, the problem could be the side filter. Remove and replace the side filter often to ensure maximum results from your vacuum.

Step 1 — Side Filter

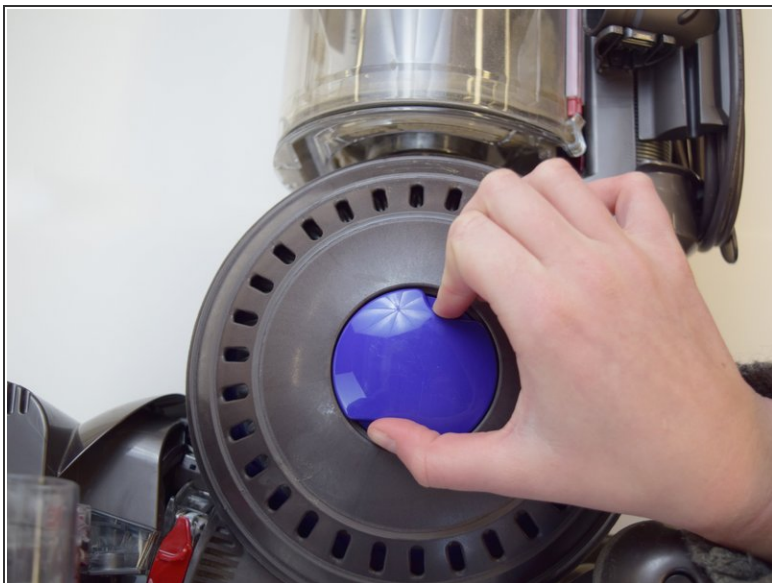

- Twist the purple center circle counter clockwise until loose. This will leave the entire grey covering loosened.

Step 2

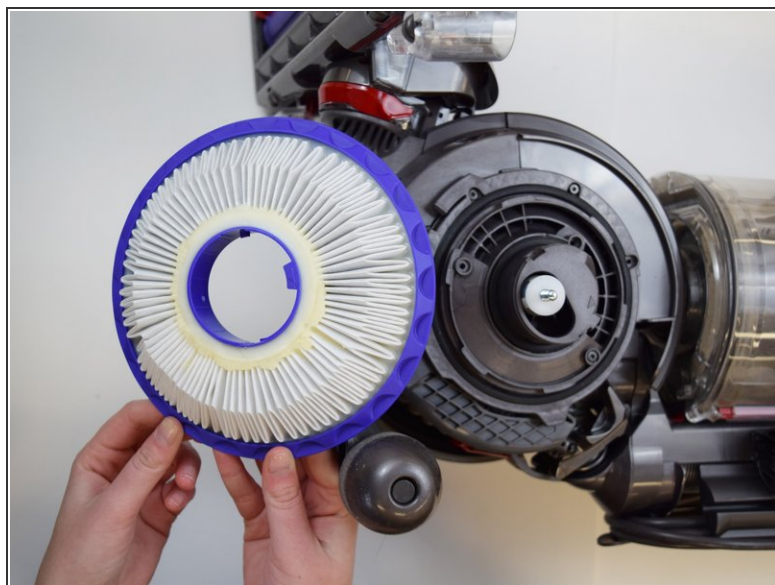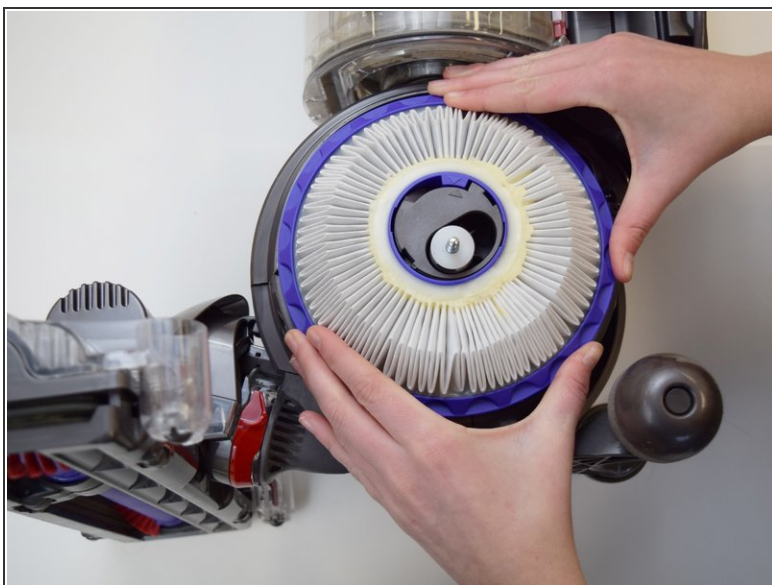

- Place both hands on the filter itself and twist counterclockwise until loosened.
- Once loosened, pull up on the entire side filter and it will easily come apart from the main vacuum stand for replacement.

To reassemble your device, follow these instructions in reverse order.