



# Bose SoundLink Mini II Battery Replacement

WARNING: This device has a hardwired battery...

Written By: Devon



# INTRODUCTION

**WARNING:** This device has a hardwired battery motherboard connection. To replace a battery you need access to the technicians manual and a proprietary software called 'Polycomm'. Do not attempt replacement without already having the software. See the image from step five for advisement.

Speaker not turning on? This guide will help you replace the battery of the Bose Soundlink Mini II.

**Note:** Removing and reinstalling the battery requires the use of a soldering iron and a lot of careful disassembly. It is also necessary to download a specific type of proprietary software called 'Polycomm' and to follow the Bose technician's repair instructions provided to them by the company. Extremely difficult to source such software, let alone the instructions.



## TOOLS:

- [TR9 Torx Security Screwdriver](#) (1)
- [Mako Driver Kit - 64 Precision Bits](#) (1)
- [Soldering Iron 60w Hakko 503F](#) (1)
- [Desoldering Braid](#) (1)
- [Lead-Free Solder](#) (1)
- [Polycomm Software](#) (1)



## PARTS:

- [Bose SoundLink Mini II Battery](#) (1)

## Step 1 — Battery



- Flip the speaker over onto its back.

## Step 2 — Remove the rubber base



- Gently remove the rubber base from speaker by pulling around the edges.

## Step 3



- Remove the four 6mm T9 Torx bit screws from the corners of the battery.

## Step 4



- Carefully lift the battery from the side nearest the four gold contact pins, but don't try to fully remove it yet.
  - ⓘ At this point, the battery remains connected via four wires to the power supply board.
- Carefully desolder the four wires from the power supply board in order to completely detach the battery. There is very little room for the soldering iron without damaging the case or the board; you may want to remove the board first.
  - For help with soldering, see the [soldering guide](#).
  - ⓘ Alternatively, you may remove the battery and power supply board together, without any soldering, but access requires some [additional disassembly](#) while carefully leaving the battery connected via the wires the entire time.

## Step 5 — Bose Technicians' Instruction Manual

entering the unit. Use a vacuum to remove any metal shavings.

### 1. Grille Removal

**Note:** The grille is held in place by Pressure Sensitive Adhesive (PSA) strips located in the center of the grille (figure 5.) and also by two tabs on either end of the grille (figure 3).

To avoid destroying the grill during the removal process, brush alcohol over the PSA strips (figure 5) before attempting to remove it.

**Important Note:** To avoid damage to the cabinet, do not use the cabinet as a pry point to remove the grille.

**1.1** At the location shown in Figure 3, insert the tip of a plastic tool, such as a spudger, between the grille and its rubber gasket.

**Note:** The location shown is between the PSA and grille tabs securing the grille.

**1.2** Rotate the spudger away from you while prying against the rubber gasket. Figure 4.

**1.3** Once a portion of the grille is released, grasp the grille and pull it across the unit lengthwise to release the PSA. Figure 5.

### 2. Battery Removal

The Battery in SoundLink® Mini II is hardwired to the Boost PCB. See figure 6. Close the product to



Figure 3.



Figure 4.

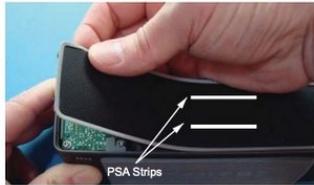


Figure 5.



- Bose Technicians Instruction Manual: <https://riverparkinc.com/wp-content/uplo...>

To reassemble your device, follow these instructions in reverse order.