



Asus ROG GL551J Optical Drive Replacement

An optical drive replacement guide for the Asus ROG GL551J

Written By: Philip Muino



INTRODUCTION

An optical drive replacement guide for the Asus ROG GL551J.



TOOLS:

- [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Battery



- Lay the device on a flat surface with the battery facing up.
- ❗ Be sure to wear ESD or Rubber gloves to protect the computer components.

Step 2




- Push the latch found below the battery to the unlock position.

Step 3



- Pull the battery out.

Step 4 — Optical Drive

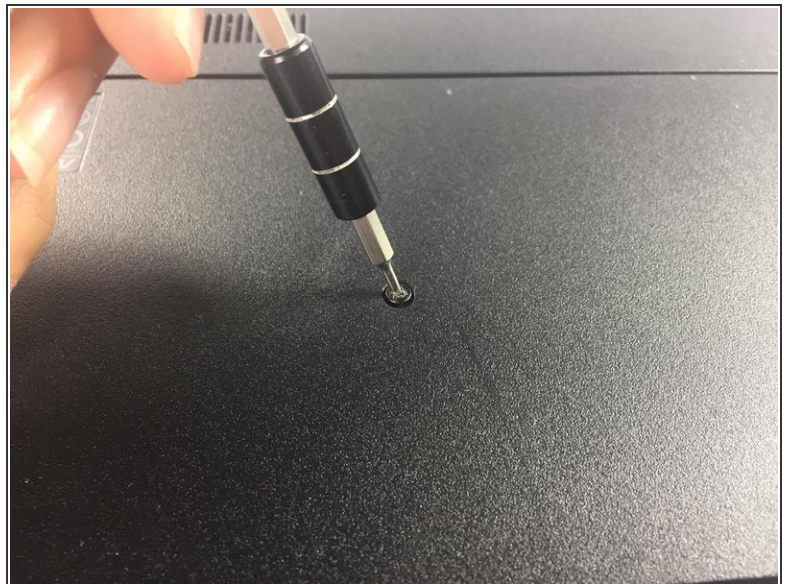

- Locate and unscrew the screw which connects the optical drive to the chassis

Step 5



- Grasp the edge of the optical drive

Step 6



- Pull on the optical drive gently. With little resistance, the optical drive should just slide out

To reassemble your device, follow these instructions in reverse order.