



Rydis H68 Pro Bumper Replacement

Is your vacuum bumping into everything?...

Written By: Joe Balduz



INTRODUCTION


Is your vacuum bumping into everything? Replacing the bumpers may solve the problem.

TOOLS:

Phillips #1 Screwdriver (1)


Metal Spudger (1)

Step 1 — Battery

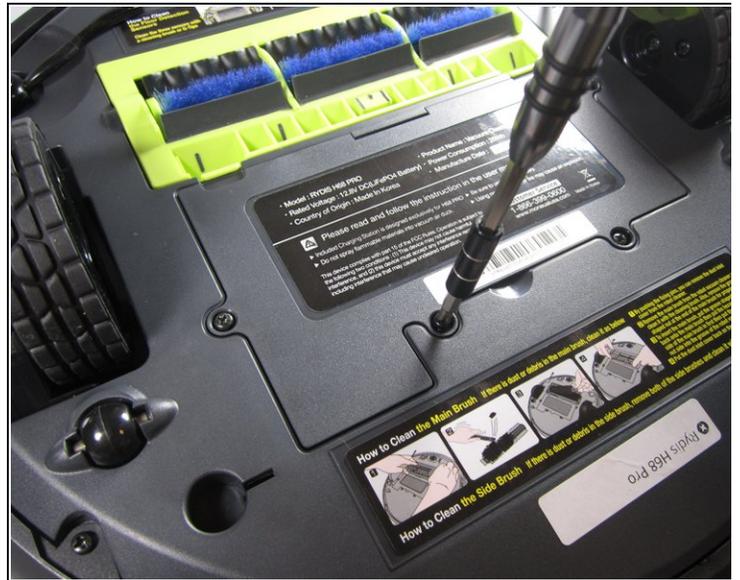

- Flip the vacuum over so that the wheels are facing you.
- Use a Phillips #1 screwdriver to remove the four 10 mm screws that surround the battery cover.

Step 2

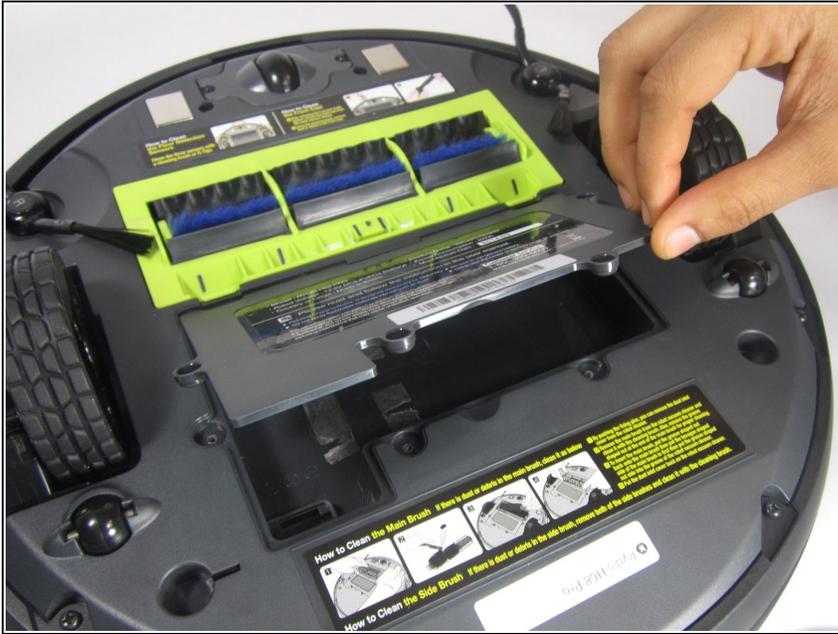

- Lift the battery cover up to reveal the battery.
- Remove the battery.

Step 3 — Bumper



- Remove the eight 10 mm Phillips #1 screws.

Step 4



- Hold the front bumper and pull it off.
- ⓘ It requires a lot of force to pull the bumper off.

Step 5



- Pry off the back bumper by going around the entire top of the bumper with the metal spudger.

To reassemble your device, follow these instructions in reverse order.